

REMINGTON REVEAL™

FACIAL CLEANSING BRUSH



GUARANTEE⁺¹
2 yr
FC-1000

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery




Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Do not twist or kink the cable, and don't wrap it around the appliance.
- 5 Store the product at a temperature between 15°C and 35°C.
- 6 Do not use attachments other than those we supply.
- 7 Make sure the power plug and cord do not get wet.
- 8 Do not plug or unplug the appliance with wet hands.
- 9 Keep the charger away from water and heated surfaces
- 10 This appliance is not intended for commercial or salon use.
- 11 Use only as instructed.
- 12 This cleansing brush is designed for wet use and may be used in the shower. **DO NOT** fully submerge in water. 
- 13 After use the appliance should be cleaned to avoid the accumulation of grease and other residues.
- 14 This appliance should be supplied with approved safety isolating adaptors PA-0510E (for Europe) and PA-0510U (for United Kingdom) with the output capacity of 5.0 dc; 1A (adaptor output).

GETTING ACQUAINTED WITH THE REVEAL FACIAL CLEANSING BRUSH

- The REVEAL Cleansing Brush has been designed and developed for cleansing the face, and neck.
- The rotating (and vibrating) bristles gently provide a deep cleanse to remove make-up and impurities leaving the skin feeling clean and fresh.
- The REVEAL Cleansing Brush includes 3 Brush Heads for all your cleansing needs:
- **NORMAL:** For everyday deep cleansing suitable for all skin types.
- **SENSITIVE:** Gentle cleansing, ideal for sensitive skin.
- **MASSAGE:** To revitalise tired skin for a radiant complexion.

WARNINGS AND SAFETY PRECAUTIONS

- ★ Before you start using the REVEAL Cleansing Brush, be sure to read all the warnings and safety information to check the product is suitable for you.
- 1 Avoid using on the delicate skin around the eyes.
 - 2 DO NOT use the cleansing brush on the same area more than twice a day.
 - 3 DO NOT use the cleansing brush on areas with open wounds, sunburnt skin, chapped or irritated skin.
 - 4 DO NOT use if you suffer from skin diseases or skin irritations such as severe/active acne or skin infection.
 - 5 DO NOT use if you are taking steroid-based medication
 - 6 DO NOT use the Cleansing Brush with cleansers containing harsh chemicals or rough particles.
 - 7 If you wish to share this product with other users, for hygiene reasons, ensure you change the brush head. DO NOT share brush heads between multiple users.
 - 8 If you experience any pain or discomfort, stop using this product and contact your doctor.

KEY FEATURES



 
- 1 Normal Brush Head
- 2 LED Indicator Lights
- 3 On/Off and Speed Selection Switch
- 4 Cleansing Brush Handle
- 5 Charging Stand
- 6 Sensitive Brush Head
- 7 Massaging Attachment
- 8 Beauty Bag
- 9 Protective Cap (not shown)
- 10 Power Adaptor (not shown)

GETTING STARTED

Be patient when first using your REVEAL Cleansing Brush as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your Cleansing Brush, as we are confident you will receive years of enjoyable use and complete satisfaction.

INSTRUCTIONS FOR CHARGING

- 1 Always ensure that your hands, cleansing brush and mains adapter are dry before charging.
- 2 Before using for the first time, fully charge the Cleansing Brush. One full charge will take 6 hours
- 3 Ensure the appliance is switched off.
- 4 Insert the charging adapter into the charging stand Fig. 1

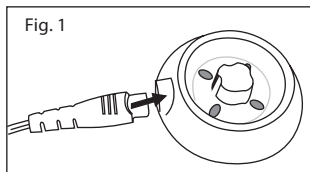

- 5 Plug the adaptor into the wall socket
 - 6 Place the Cleansing Brush on the charging stand.
 - 7 The charging indicator lights will glow in a rotating sequence whilst the cleansing brush is charging.
 - 8 When the Cleansing Brush is fully charged, all charging indicator light's will remain illuminated.
 - 9 One full charge will take 6 hours.
 - 10 One full charge allows up to 30 minutes of cordless usage time (30 x 1min uses).
- ★ NOTE: If the battery charge is low, all three LED lights will pulse on and off whilst in use.


★ QUICK CHARGE FUNCTION

- The cleansing brush is also equipped with a quick charge function.
- To utilise this function, charge the Cleansing Brush for 30 minutes
- This will provide approximately 4-6 uses.

INSTRUCTIONS FOR USE

- This product is suitable for wet use and may be used in the shower.
- DO NOT submerge in water.
- The charging stand and adaptor can not be used in a bath or shower.
- The Cleansing Brush has 3 speed settings and comes with 3 brush heads.
- Always choose the speed setting & brush head most comfortable for you.


- ✱ NOTE: If you suffer from sensitive skin, we recommend selecting speed setting 1 for the first few uses. If you do not experience any skin reactions then speeds 2 & 3 may be used.
- The Cleansing Brush also comes equipped with a one minute timer to help ensure thorough cleansing of the whole face. We recommend cleansing in 3 sections: T-Zone (1), Right side (2) and Left side (3). Fig. 2

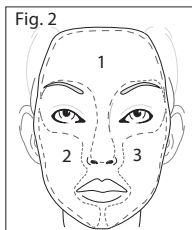

- The cleansing brush will gently pause every 20 seconds to indicate when to move to the next zone
- The cleansing brush will automatically switch off after 60 seconds to indicate the end of the brushing time.
- ✱ NOTE: If you change speed setting's during cleansing, the timer will set back to zero and the timer will start again.

HOW TO USE

- 1 Select the brush head to suit your skin type and cleansing need. Gently push the brush head onto the cleansing brush handle until you hear a click. Fig. 3
- 2 Moisten the brush bristles by running under water.
- ✱ NOTE: DO NOT use the cleaning brush whilst completely dry as this can cause skin irritation.
- 3 Dampen your skin with water and apply cleanser onto your skin. Alternatively, apply your cleanser directly onto the brush.
- 4 Place the cleansing brush directly onto your skin.
- 5 Switch on using the On/Off button.
- 6 Select the speed:
 - The cleansing brush will automatically start on speed one.
 - Press the button again for speed 2

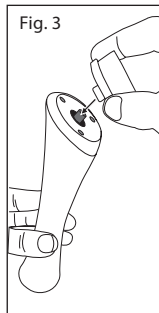

- Press the button again twice for speed 3
- ★ **TIP:** When changing brush heads, test each head on different speeds to identify which is most comfortable for you.
- 7 Gently glide the brush over the skin in circular motions avoiding the delicate eye area. Fig. 4 When you feel a pause, move to the next area.

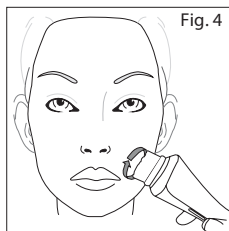


Fig. 4

- ★ **NOTE:** Try to avoid applying too much pressure with the brush when directly on the skin. If this happens the brush will automatically stop its cycle and switch off. This is perfectly normal and helps to ensure a comfortable treatment. The cleansing brush can be restarted by pressing the On switch.
- If you wish to end the cleansing cycle early press the On/ Off button as per below:
- When using speed 1, press On/Off button 3 times
- When using speed 2, press On/Off button twice
- When using speed 3, press On/Off button once
- When not in use, store the brush attachments with the protective caps on. Fig. 5
- Ensure the bristles are dry before attaching the protective cap.



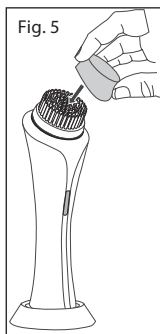


Fig. 5

👁️ REPLACING THE BRUSH HEADS

★ Removing the brush head:

- Hold the brush handle with one hand.
- With the other hand, gently pull the brush head upwards until it comes off. Fig. 6
- To replace the brush head, gently push the head back on until you hear a click. Fig. 7

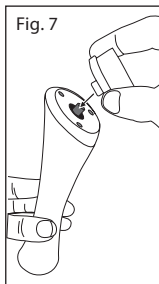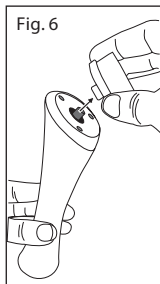

- For best results, we recommend replacing the Normal & Sensitive brush heads approximately every 3 months.
- We recommend replacing the Massage head less frequently. Approximately every 6 months.
- Replacement Brush Heads are available:
- Normal: SP-FC1
- Sensitive: SP-FC2
- Exfoliating: SP-FC3
- Massage: SP-FC4
- Contact your nearest Remington service centre for more information.

CLEANING AND MAINTENANCE

- To ensure long lasting performance of your cleansing brush, clean the brush head and the handle regularly.
- Ensure the cleansing brush is switched off before cleaning.
- DO NOT attempt to clean any part of this product in a dishwasher.
- DO NOT Submerge the brush handle or charging stand in water.
- Brush Head: Rinse the brush head and bristles after each use.
- Brush Handle: To clean the handle, wipe with a damp cloth.
- Charging stand: Wipe with a damp cloth.
- ★ **CAUTION:** Ensure all parts are dry before connecting the charger into a wall socket.

BATTERY REMOVAL

- The battery must be removed from the cleansing brush before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.

- To remove the rechargeable battery:
- Run the cleansing brush until the motor stops.
- Remove brush head
- Remove the two screws at the base of the handle
- Using a small screwdriver, pry the top cap off the handle
- Pry the battery from the internal assembly.
- Dispose of the battery safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0345 6460 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. FC-1000

14/UK/ FC-1000 T22-0002718 Version 08 /14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI