



REMINGTON

All technical modifications reserved. 09/08 TSC 08 0634

Model No. HC5030

10/UK/HC5030 Version 06/10 Part No. T22-30407

REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str.9
73479 Ellwangen
Germany
www.remington-europe.com

© 2010 SBI



44-5030-007000

REMINGTON®

HAIR CLIPPER


Corded for constant power






HC5030



   
 
REMINGTON®

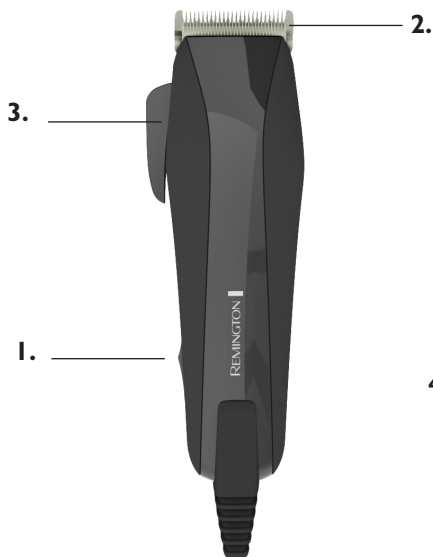

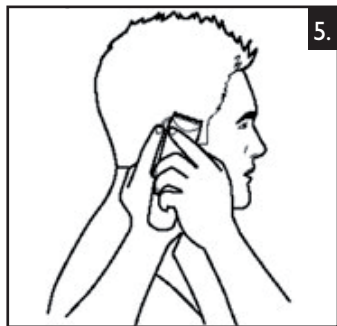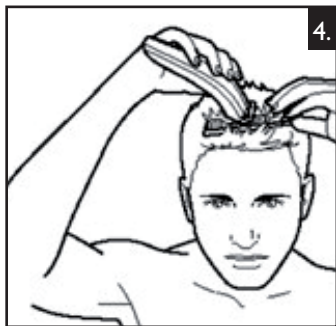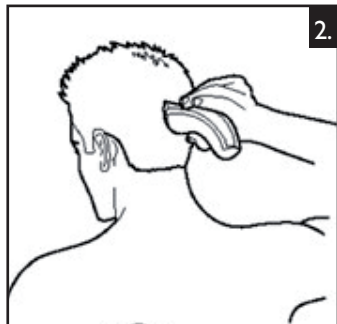



REMINGTON®

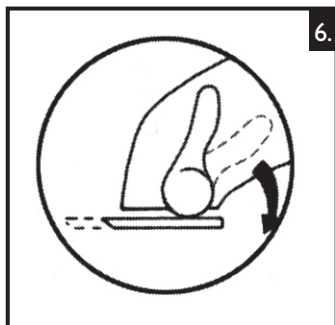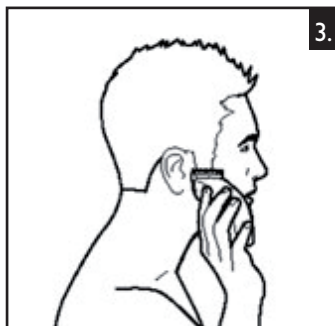  



REMINGTON® SERVICE HOTLINE

United Kingdom

 **+44 0800 212 438 (free call)**

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk





ENGLISH

REMINGTON®

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® product.

Please read the instructions for use carefully and keep in a safe place for future reference.



CAUTION

- ◆ Use this appliance only for its intended use as described in this manual.
Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



DESCRIPTION

1. On/Off switch
2. Removable blade set
3. Taper lever (6 positions, 0.5-2mm)
4. II attachment guide combs

ENGLISH



HOW TO USE

Before starting the cut

- ▶ Inspect the clipper making sure that it is free from hair and dirt.

To attach a comb

- ▶ Hold the comb with its teeth upward
- ▶ Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper blade.

To remove the comb

- ▶ Holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.

Comb Attachments Hair Length

- ▶ Each comb attachment is marked accordingly on its outside middle surface (3mm, 6mm, 9mm, 12mm, 15mm, 18mm, 22mm, 25mm, 30mm).
- ▶ 0.5mm length is achieved without any combs.

■ INSTRUCTIONS FOR HAIR CUTTING

STEP 1 – Nape of the neck – PICTURE 1

- ▶ Use 3mm or 6mm guide comb.
- ▶ Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- ▶ Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 – Back of the head – PICTURE 2

- ▶ With the 12, 15 or 18mm guide comb attached, cut the hair at the back of the head.

STEP 3 – Side of the head – PICTURE 3

- ▶ With the 3mm or 6mm guide comb attached, trim sideburns. Then change to the longer 12mm guide comb and continue to cut to the top of the head.

STEP 4 – Top of the head – PICTURE 4

- ▶ With the 18mm, 25mm, 30mm guide comb attached, cut hair on top of the head against the direction in which the hair normally grows.
- ▶ For longer hair on top, use without a guide comb. Lift the hair on top of the head with a small hand comb. Cut over the hand comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- ▶ Always work from the back of the head.

STEP 5 – The finishing touches – PICTURE 5

- ▶ Use the clipper without an attachment comb for close trimming around the base and sides of the neck. Use the ear comb guides to get a clean line around each ear. For the required ear comb guide, angle the clipper and lightly stroke around each ear to the back of the neck.
- ▶ To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

■ TAPER LEVER (DIAGRAM 6)

This product has a taper lever located at the left side of the clipper near the blades. Adjust the lever to change the closeness of the cut gradually and also to improve the effectiveness of the comb attachments. The taper lever also extends the life of the blades because a different cutting edge is used in each setting.

∞ CARE FOR YOUR HAIRCLIPPER

Your clipper is fitted with high quality blades that are permanently lubricated. To ensure long lasting performance of your clipper, clean the blades and unit regularly. Always keep the protective cap on the trimmer blade.

■ AFTER EACH USE

- ▶ Ensure the clipper is switched off and disconnected from the mains.
- ▶ Use your thumbs to push the blade set up and away from the main unit
- ▶ Brush the accumulated hair from the blades. Do not submerge the clipper in water.
- ▶ To clean the unit, wipe with a damp cloth and dry immediately.
- ▶ To reattach, line up the locating tab and then push blade set back onto main unit

◆ Note: Ensure that the clipper is turned off when cleaning.

■ EVERY SIX MONTHS

At regular intervals the blade set should be removed and cleaned.

- ▶ Remove the 2 screws retaining the fixed blade with a screwdriver.
- ▶ Brush out hairs from between the blades with soft cleaning brush. Do not remove the lubricating grease from the blades. Do not remove the small moving blade.
- ▶ Before fully tightening the 2 screws, adjust the taper lever to the lower position and align the blades so that their cutting edges are parallel to one another. Tighten the 2 screws.
- ◆ Note that if the blades are not correctly aligned then cutting efficiency will be impaired.
- ◆ CAUTION:
 - Do not use liquid cleaners on the blades or harsh or corrosive chemicals on the blade casing. Always use a soft brush to remove the accumulated hairs.
- ▶ Always store this appliance in a moisture-free area.
- ▶ Do not wrap the cord around the appliance.

ENGLISH



TROUBLESHOOTING

If blades do not seem to cut hair easily, the taper lever (DIAGRAM 6) can be used to remove any hair caught between the comb and blade. Switch the clipper on and move the taper lever up and down a few times but do not force the lever in either direction. This should remove hairs and restore the cutting efficiency. If not, contact your nearest Remington® Service Centre.



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged into a power outlet.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not plug or unplug the shaver with wet hands.
- ▶ Do not use the product with a damaged cord.
- ▶ Use and store the product at a temperature between 15°C and 35°C.
- ▶ Always unplug from the mains when cleaning.
- ▶ Only use the parts supplied with the appliance.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.



PROTECT THE ENVIRONMENT

- ▶ Do not dispose the clipper in household waste at the end of its useful life. Disposal can take place at our service centres or appropriate collection sites.



For further information on recycling see www.remington-europe.com

ENGLISH

REMINGTON®



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for a 3 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the REMINGTON® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include cutters which are consumable parts. Also not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.