

# REMINGTON®

## Gift Set - Clipper



HC5355

Register online for  
**£10,000 prize draw**  
EXTRA year guarantee  
FREE rewards gallery



Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington).  
You must register within 28 days  
of purchase.


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFETY INSTRUCTIONS

---

**WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:**

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Make sure the power plug and cord do not get wet.
- 5 Do not plug or unplug the appliance with wet hands.
- 6 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 7 Store the product at a temperature between 15°C and 35°C.
- 8 Do not use attachments other than those we supply.
- 9 This appliance is not intended for commercial or salon use.
- 10 Suitable for cleaning under an open water tap. 



## KEY FEATURES

- |                                |                              |
|--------------------------------|------------------------------|
| 1 On/Off switch                | 5 Micro USB port             |
| 2 Blade set                    | 6 Micro USB cable            |
| 3 2 attachment guide combs     | 7 Hair thinner mechanism     |
| 4 Charging adaptor (not shown) | 8 Quick wash release buttons |

---

## GETTING STARTED

---

### ★ **CHARGING YOUR APPLIANCE**

- Before using your hairclipper for the first time, charge for 14-16 hours.
- Charging display light will stay on after the battery is fully charged (HC5355 & HC5355A).
- Your clipper cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- Fully recharge your hairclipper when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

### ★ **CHARGING VIA STANDARD ELECTRICAL SOCKET**

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- When charging the LED indicator (HC5355 & HC5355A) will illuminate.
- Allow 14-16 hours for a full charge.

### ★ **USB CHARGING VIA PC**

- Ensure the product is switched off.
- Connect your USB cable to the USB port on the PC.
- Connect the USB cable to your hair clipper.
- Charging LED indicator (HC5355 & HC5355A) will illuminate during charging.
- Allow 14-16 hours for a full charge.

### ★ **CORDED USE**

- Connect the charging adaptor to the product then to the mains.
- When the cord is connected to the mains, a charging LED light (HC5355 & HC5355A) is displayed on the hairclipper.
- The charging LED light (HC5355 & HC5355A) will turn off when the unit is switched on.

### ★ **CAUTION**

- Extended mains only use will result in the reduction of the battery life.

### ★ **WARNING**

- The appliance can not be operated in corded mode while connected to a PC via the USB port.

### ★ **CORDLESS USE**

- When the unit is switched on and fully charged, the product can be used in cordless mode for 40 minutes.

## INSTRUCTIONS FOR USE

### Before starting the cut

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

### Comb Position

Comb Position	Short Comb	Long Comb
1	3mm	24mm
2	6mm	27mm
3	9mm	30mm
4	12mm	33mm
5	15mm	36mm
6	18mm	39mm
7	21mm	42mm

- 1mm length is achieved without any combs.

### TO ATTACH A COMB

- Hold the comb with its teeth upward.
- Align the rails on the comb with the slots on the clipper body and slide the comb down.
- Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper blade.

### TO REMOVE THE COMB

- Press and hold the release button and holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.
- Each comb attachment is marked accordingly on its outside middle surface (3-21mm & 24-42mm).

### INSTRUCTIONS FOR CUTTING HAIR

- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.

#### ✱ **STEP 1 – Nape of the neck**

- Set the comb to 3mm or 6mm.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

#### ✱ **STEP 2 – Back of the head**

- With the comb set at 12mm or 18mm, cut the hair at the back of the head.

#### ✱ **STEP 3 – Side of the head**

- With the comb set at 3mm or 6mm, trim sideburns. Then change to the longer 9mm guide comb and continue to cut the top of the head.

#### ✱ **STEP 4 – Top of the head**

- Use the longer length comb attachment and set it to 24mm or 27mm then cut hair on top of the head against the direction in which the hair normally grows.
- For longer hair on top, use the longer length comb attachment (24 – 42mm) to achieve the desired style.
- Always work from the back of the head.

#### ✱ **STEP 5 – The finishing touches**

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

#### ✱ **SHORT TAPERED STYLES – “FLAT TOPS” & SHORT CUTS**

- Starting with the longest guide comb attached (24-42mm), cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair.
- Use the same procedure from the lower side to the upper side of the head. Then cut the hair against the direction in which it grows and level with the sides.
- To give a “flat top” look, the hair on top of the head must be cut over the top of a flat comb.
- Use a closer guide comb to taper the hair down to the neckline as desired.

### ✱ HAIR TEXTURE MECHANISM

- Blending different length areas. Select the proper length guard to blend. Slide out the hair texture mechanism (guard) which allows you to blend / thin out the area.
- Textured cut – Slide out the hair texture mechanism (guard) to give an all over textured cut.

### ✱ LONG HAIR TEXTURE

- Technique 1: twist a small section of hair into a bunch. Slide out the hair texture mechanism, with one or two passes in a roll out motion, cut ends of hair. Be careful not to cut completely through the bunch. When the hair is un-twisted it will have a professional looking texture finish.
- Technique 2: using a comb, brush hair upward through the comb exposing only the ends of the hair. With the hair texture mechanism in position, cut just the ends of the hair with one or two passes using a rolling motion. Be careful not to cut completely through the hair.

---

## CARE FOR YOUR HAIRCLIPPER

---

- Your clipper is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
- Always keep the attachment guide comb on the trimmer blade.

### ✱ AFTER EACH USE


- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Brush the accumulated hair from the blades. Do not submerge the clipper in water.
- To clean the unit, wipe with a damp cloth and dry immediately.

- ✱ Note: Ensure the clipper is turned off when cleaning.

### ✱ WASHABLE CLEANING

- The QUICK WASH SYSTEM is designed to maximise the efficiency of washable cleaning.
- Click the buttons that are located on the sides of the hair clipper head. The blades will slide out and the blade set can easily be cleaned under the tap.
- Once the blades are cleaned the blades are locked into place by pushing the blade set towards the hair clipper head and will snap into place.
- Do not run the entire unit under the tap, only the blade set is meant to be submerged in water.

✱ Note: Ensure the clipper is turned off when cleaning.

- Suitable for cleaning under an open water tap. 

### ✱ EVERY SIX MONTHS

- At regular intervals the blade set should be removed and cleaned.
- Remove the 2 screws retaining the fixed blade with a screwdriver. Do not remove blade set.
- Brush out hairs from between the blades with soft cleaning brush. Do not remove the lubricating grease from the blades. It is not necessary to remove the small moving blade from the unit.
- If the moving blade has been removed this can be re-fitted by slotting the blade holder over the pin in the centre of the interior product head. The groove on the blade, just below the teeth, rests on a metal plate at the opposite side to the screw holes. The fixed blade is fitted with the raised profile pointing outwards and fixed with the 2 screws.
- If the blades are not correctly aligned, cutting efficiency will be impaired.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

### ✱ CAUTION:

- Do not use liquid cleaners on the blades or harsh or corrosive chemicals on the blade casing. Always use a soft brush to remove the accumulated hairs.
- Unplug the charge adaptor from the power outlet when fitting or removing attachments, or while cleaning the product.
- Always store this appliance and cord in a moisture-free area.
- Do not wrap the cord of the charging adaptor around the appliance.

---

## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure that the clipper is discharged of all power and disconnected from the mains.
- Lift or pry the USB port cover plate on the bottom of the clipper.
- Lift or pry the deco plate on the lower portion of the clipper and unscrew 1 screw located on the back housing of the clipper.
- Lift or pry the clipper halves apart, exposing the battery chamber.
- Lift or pry the USB connector and lift or pry the cover plate on the bottom of the battery chamber.



- Remove the battery and printed circuit board assembly from the battery chamber.
- Cut the tabs on both ends of the battery and remove it from the printed circuit board.
- The battery is to be disposed of safely.



## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



## ➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## ➔ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

**Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington). You must register within 28 days of purchase.**

## Model No. HC5355

14/UK/ HC5355 T22-0002182 Version 02 /14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2014 SBI