REMINGTON[®] Beard Trimmer





Thank you for buying your new Remington[®] product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not leave the appliance unattended while plugged in.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Store the product at a temperature between 15°C and 35°C.
- 5 Do not use attachments other than those we supply.
- 6 This appliance is not intended for commercial or salon use.



KEY FEATURES

- 1 On/off switch
- 2 Comb with lock-in length settings.
- 3 Trimmer Assembly
- 4 Battery compartment
- 5 Adaptor (not shown)

③ GETTING STARTED

✤ BATTERIES

- Your beard trimmer requires 2 'AA' alkaline batteries (first set included). We
 recommend that you use VARTA® batteries.
- Turn the appliance off.
- Open the battery compartment by pressing in the ridged areas and pulling downward.
- Insert batteries so that the (+) and (-) marks on the batteries face the same marks in the battery compartment.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- The supply terminals are not to be short-circuited.
- To remove the batteries, slide open the battery compact cap on the base of the groomer.

INSTRUCTIONS FOR USE

✤ BEFORE YOU BEGIN

 Always comb your beard or moustache with a fine comb before you start trimming.

✤ ADJUSTING THE TRIM LENGTH

• The trimmer comb can be adjusted to give you 6 different trim lengths.

Comb Position	Cutting Length
1	1.5mm
2	4.5mm
3	7.5mm
4	10.5mm
5	13.5mm
6	16.5mm

- Use the trimmer without any fixed combs for trimming hair close to the skin.
- This will trim hair to 1mm, holding the clipper so the blades are perpendicular to the skin will trim hair to 0.4mm.

✤ TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the adjustable comb to the trimmer blade and select the desired length.
- The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

✤ TRIMMING EDGE OF SIDEBURNS

 Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim the desired locations in facial area.

✤ TRIMMING THE NAPE OF YOUR NECK

- ✤ Note: You will need a hand mirror for this operation if performing it alone.
- Remove the fixed combs or adjustable comb from the wide trimmer. Use your fingers to lift the hair at the base of your head up off the neck.
- Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

CARE FOR YOUR TRIMMER

- Cleaning should be done with a soft brush.
- Only use a light-grade oil or sewing machine oil on the blades.
- This trimmer is not washable. Do not rinse under water.
- Do not submerge in water as damage will occur.

✤ TROUBLESHOOTING

• If the trimmer is not working ensure batteries are not empty and installed correctly. Ensure blades are not clogged with hair trimmings.

& ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

SERVICE CENTRE

United Kingdom Tel 0800 212 438 (free call mainland UK) +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0HS, UK www.remington.co.uk

Ireland Tel 142 951 40 Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

ℬ REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery. Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. MB4012

15/UK/ MB4012 T22-0003112 Version 02/15 Remington" is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0HS www.remington.co.uk © 2015 SBI