

# REMINGTON®

## Beard Trimmer



MB4130

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery



Visit [www.remington.co.uk/product/register](http://www.remington.co.uk/product/register)  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.

Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

**WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:**

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 This appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Make sure the power plug and cord do not get wet.
- 5 Do not plug or unplug the appliance with wet hands.
- 6 Do not use the product with a damaged cord. A replacement adaptor can be obtained via our International Service Centres.
- 7 Store the product at a temperature between 15°C and 35°C.
- 8 Do not use attachments other than those we supply.
- 9 This appliance is not intended for commercial or salon use.
- 10  This appliance should be supplied with approved safety isolating adaptors PA-0510E (EU), PA-0510U (UK) with the output capacity of 5.0V dc; 1A (adaptor output).
- 11 The blades are washable under a running tap. 
- 12 Please note the main body of the trimmer is not washable and should be kept away from water.



## KEY FEATURES

- 1 On/Off switch
- 2 Zoom wheel
- 3 Length position indicator
- 4 Charge indicator
- 5 Trimmer assembly
- 6 Adjustable comb
- 7 Adaptor (not shown)
- 8 Cleaning brush (not shown)

---

## GETTING STARTED

---

### CHARGING YOUR APPLIANCE

- Before using your trimmer for the first time, charge for 4 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- The charging indicator will illuminate.

Charge Level	Indicator
Charging	LED will show
Fully Charged	LED will turn off

- Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.
- On a full charge, your beard trimmer will run for up to 50 minutes of cordless usage.

### CORDED

- Connect the appliance to the mains and turn on.
- We recommend you let the product charge for a few minutes before using corded.

### CAUTION

- Extended mains only use will result in the reduction of the battery life.
-  Note: the trimmer comb must be attached to the product in order to use the hair length selector.

---

## INSTRUCTIONS FOR USE

---

### REPLACING THE ADJUSTABLE COMB

- Hold the trimmer in one hand with your thumb firmly on the zoom wheel to keep it from turning. Ensure the length position indicator is at 1.
- Slide the comb down the grooves until it clicks into place.
- The trimmer comb attachment can only be attached in one way.

### ✱ TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach an attachment comb to the trimmer blade.
- Use the zoom wheel to set the trimmer comb to the desired length setting.
- The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting.

STUBBLE AND BEARD LENGTH SETTINGS
1.5mm
2mm
2.5mm
3mm
4mm
6mm
8mm
10mm
12mm
15mm
18mm

- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull the comb and brush the hair off.

- ✱ Note: Use the beard trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

### ✱ TRIMMING THE NAPE OF YOUR NECK

- ✱ Note: you will need a hand mirror for this operation if performing it alone.
- Remove the fixed combs or adjustable comb from the wide trimmer. Use your fingers to lift the hair at the base of your head up off the neck.
- Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.

- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the roots at the base of your head out of the way of the trimmer.

#### ✱ TO DEFINE THE BEARD/MOUSTACHE LINE

- Hold the trimmer with the trimmer blade facing you.
- Start with the edge of beard/moustache line and gently lower the trimmer blade onto your skin.
- Use motions towards the edge of the beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

#### ✱ BLADE RELEASE

- Ensure the trimmer is switched off.
- Remove the adjustable comb.
- Remove the blades by pushing your thumb upwards under the blades and move the blade set away from the trimmer body.
- To reattach the blades, align the back of the blades with the back housing at the top of the trimmer and push down until the blade set clicks into place.

#### ➡ TIPS FOR BEST RESULTS

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- Comb your hair in the direction that it grows.

---

#### CARE FOR YOUR TRIMMER

---

- To ensure long lasting performance of the trimmer, clean the blades and unit regularly.
- Ensure the appliance is switched off and unplugged from the mains.
- Do not use harsh or abrasive cleaners on the unit or blades.
- This product has washable blades. Ensure the blades are detached from the trimmer before washing the blades.
- Wash the blades under a running tap to remove any hair clippings.
- After rinsing under a tap ensure the blades are dry.
- Do not rinse while the product is connected to the mains.
- Please note the main body of the trimmer is not washable and should be kept away from water.
- After each use, it is recommended to clean hair from the blades either by rinsing the blades or using a cleaning brush.

---

## BATTERY REMOVAL

---

- The appliance must be disconnected from the supply mains when removing the battery.
- Turn the trimmer on and discharge all remaining power.
- Remove the comb attachment.
- Detach the blade cartridge.
- Remove the blade clip using a screwdriver.
- Pry the two halves of the housing apart from one another to expose the internals.
- Unscrew 2 screws located toward the head end of motor bracket assembly and 1 screw at midway of the bracket assembly.
- Take out the bracket assembly from the housing.
- Disconnect the battery from the circuit board.
- The battery is to be disposed of safely.

---

## ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)

---

## ➔ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

**Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.**

## Model No. MB4130

15/UK/ MB4130 T22-0003572 Version 09/15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2015 SBI