

Thank you for buying your new Remington<sup>®</sup> product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

# IMPORTANT SAFETY INSTRUCTIONS

Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- 4 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.



- 6 Do not plug or unplug the appliance with wet hands.
- 7 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 8 Store the product at a temperature between 15°C and 35°C.
- 9 Do not use attachments other than those we supply.
- 10 This appliance is not intended for commercial or salon use.
- 11 Keep the appliance dry.





# KEY FEATURES

- 1 3 position slide switch (Off/On/Lock motor on)
- 2 Cutting length controls
- 3 Digital display for:
  - a. Battery level
  - b. Length setting, mm
  - c. Lock / unlock
  - d. Speed level
- 4 Motorised comb
- 5 Mode Button
- 6 Tri-Boost system
- 7 Micro USB port
- 8 USB cable
- 9 Adaptor
- 10 Storage pouch

# ③ GETTING STARTED

Before the unit can be used for the first time, keep hands away from touch screen area and pull out the plastic tab marked with an arrow from the bottom of the unit. The plastic tab is only for shipping and can be discarded.

#### ✤ CHARGING YOUR APPLIANCE

- Before using your hair clipper for the first time, charge for 90 minutes.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains. The charging indicator will illuminate. When fully charged, the display screen turns off.
- Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- Fully recharge your trimmer when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 90 minutes.

#### ✤ CHARGING VIA STANDARD ELECTRICAL SOCKET

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- When charging the digital display will illuminate.
- Allow 90 minutes for a complete charge.
- This appliance should be charged by approved safety isolating adaptors PA-0510E (for EU version) or PA-0510U (for UK version) with the output capacity of 5.0V dc; 1A;

# ✤ USB CHARGING VIA PC

- Ensure the product is switched off.
- Connect your USB cable to the USB port on the PC.
- Connect the USB cable to your beard trimmer.
- When charging the digital display will illuminate.
- Allow 90 minutes for a complete charge.

#### ✤ CORDED USE

- Connect the charging adaptor to the product then to the mains.
- When the cord is connected to the mains, a digital display will be displayed on the appliance.

#### ✤ CAUTION

• Extended mains only use will result in the reduction of the battery life.

#### ✤ WARNING

 The appliance can not be operated in corded mode while connected to a PC via the USB port.

### ✤ CORDLESS USE

 When the unit is switched on and fully charged, the product can be used in cordless mode for 50 minutes.

# INSTRUCTIONS FOR USE

- Always comb your beard or moustache with a fine comb before you start trimming.
- Turn the product on by sliding the 3 position slide switch down to the middle position. This will turn the LCD display on and enable height adjustments and boost adjustments to be made.
- Your trimmer can be adjusted in either 0.1mm or 0.5mm increments. To switch between these, press and hold the mode button for 3 seconds. The increment that the trimmer is now set at will be displayed (or flash) for 1 second.

## ✤ USING THE TOUCH SCREEN

- The trimmer comb can be adjusted to give you 175 different trim lengths, with 0.1mm increments, simply by pressing the arrows on the touch screen. Press and hold the arrow up to increase the cutting length and down to decrease it. The setting number will appear on the digital display.
- Select the desired boost level by pressing the boost button with the 3
  position slide switch in the middle position. The display will indicate the
  level.
- Once the desired length and boost level have been selected slide the 3
  position slide switch to the last position (the furthest down) to lock the
  cutting length and turn the motor on.
- To adjust the length or boost level, simply slide the 3 position slide switch back into the middle position and adjust the cutting length or boost level by pressing the arrows or boost button on the touch screen.
- Please note that the motor will only run when the 3 position slide switch is set to lock, the last position (furthest down). This is to ensure the cutting length does not adjust whilst you are trimming your facial hair.

Note: Trimmer comb must be attached to the groomer in order to use the hair length selector.

#### ☆ TO THIN AND TAPER THE BEARD/MOUSTACHE (DIAGRAM 1)

- Use the touch screen to set the trimmer comb to the desired length setting.
- The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush off.

## ✤ TRIMMING EDGE OF SIDEBURNS (DIAGRAM 2)

- Hold the trimmer with the trimmer blade facing you.
- Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.
- Shape as desired.

## ✤ TRIMMING THE NAPE OF YOUR NECK

- You will need a hand mirror for this operation if performing it alone.
- Use your fingers to lift the hair at the base of your head up off the neck. Your
  index finger should be covering the roots of the hairs you are lifting to
  prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.
- Tips for Best Results
- Beard, moustache and sideburn hair should be dry.
- Avoid using lotions before using your trimmer.







# CARE FOR YOUR TRIMMER

#### AFTER EACH USE

- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Brush the accumulated hair from the blades. Do not submerge the clipper in water.
- To clean the unit, wipe with a damp cloth and dry immediately.
- Only the attachment guide combs and trimmer blade may be removed from the product for cleaning.
- Cleaning should only be done with a soft brush.

# ✤ CLEANING CAUTIONS

- Do not rinse under water.
- Only use a light-grade oil or sewing machine oil on the blades.
- Do not use harsh or corrosive cleaners on the units or their blades.
- Do not submerge in water as damage will occur.

#### ✤ RESET INSTRUCTIONS

- You will never have to force a system reset under normal conditions. If the clipper experiences abnormal behaviour, such as low or high touch sensitivity or subjected to electrostatic discharge disturbance, or subjected to electrical fast transient/burst from the LV network, the system can be reset.
- Hold the mode button for 8 seconds with the product switched on and the 3
  position slide switch set to the middle position, the system will enter reset
  mode.
- System will show 18.8mm, full battery, full lock and full boost level.
- Ensure no objects, hands or fingers are near the touch buttons.
- Push the mode button once.
- The comb will travel down to its lowest setting and the display will show the current battery level, lock status and 1st boost level.
- Let the product sit until the screen dims.
- Product is now ready, turn it on and confirm proper function.

#### STORAGE

- Always store this appliance and cord in a moisture free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not wrap the cord of the charging adaptor around the appliance.

# ઇ 🗴 BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Turn the trimmer on and discharge all remaining power.
- Remove the comb attachment.
- Detach the blade head.
- Remove the head clip using a screw driver.
- Using a screwdriver carefully pry apart the top and bottom housing.
- Unscrew the (2) screw on the circuit board.
- · Remove the upper circuit board.
- Disconnect the battery from the low circuit board.
- The battery is to be disposed of safety.

# ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



# SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

## SERVICE CENTRE

#### United Kingdom

Tel 0800 212 438 (free call mainland UK)
 +44 161 947 3111 (call outside the UK)
 Spectrum Brands (UK) Ltd
 Fir Street, Failsworth, Manchester
 M35 0HS, UK
 www.remington.co.uk

Ireland Tel 142 951 40

Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

# **ℬ** REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery. Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

# Model No. MB4560

14/UK/ MB4560 T22-0002176 Version 03 /14 Remington" is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0HS www.remington.co.uk © 2014 SBI