

REMINGTON®

Vacuum Beard and Grooming Kit



MB6550

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 - 2 Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®
 - 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
 - 4 An appliance should never be left unattended when plugged into a power outlet, except when charging.
 - 5 Keep the power plug and cord away from heated surfaces.
 - 6 Make sure the power plug and cord do not get wet.
 - 7 Do not plug or unplug the appliance with wet hands.
 - 8 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
 - 9 Do not twist or kink the cable, or wrap it round the appliance.
 - 10 Store the product at a temperature between 15°C and 35°C.
 - 11 Do not use attachments other than those we supply.
 - 12 The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach.
 - 13 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
 - 14 For household use only.
- ✱ **WARNING:** Keep the appliance dry.





KEY FEATURES

- 1 On/off switch
- 2 Advanced Titanium Coated Blades
- 3 Vacuum intake – Vortex Vacuum technology
- 4 Easy removable vacuum chamber
- 5 Detail trimmer vacuum attachment head (0.4mm)
- 6 Wide trimmer vacuum attachment head
- 7 Foil shaver attachment head (N.B. Vacuum technology does not feature on foil shaver head)
- 8 Adjustable beard comb 2 – 16mm, 2mm adjustment
- 9 4 attachment guide combs: 3, 6, 9, 12mm

- 10 Charging indicator light
- 11 Power port
- 12 Adaptor (not shown)
- 13 Storage case (not shown)
- 14 Cleaning brush (not shown)

★ VACUUM FEATURE

The Vortex Vacuum technology captures virtually all the facial hair as it is cut. The hairs are vacuumed into an easy empty vacuum chamber located on the front of the beard trimmer. It is recommended that you empty the vacuum chamber after each use by sliding out the section away from the beard trimmer (Fig. A).



Fig. A

👁 GETTING STARTED

★ CHARGING YOUR APPLIANCE

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- Before using your beard and grooming kit for the first time, charge the unit for 4-6 hours for optimal performance. Typical charge time will be 3 to 5 hours thereafter.
- When charging the LED charge indicator will turn blue. The blue light will turn off after charging is complete.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 16-20 hours.
- This appliance should be charged by approved safety isolating adaptors PA-0510E (for EU version) or PA-0510U (for UK version) with the output capacity of 5.0V dc; 1A;

★ CORDLESS USE

- ★ Please note that this product is cordless use only and cannot be used when connected to the mains.
- When the unit is switched on and fully charged, the product can be used in cordless mode for up to 60 minutes.
WARNING: Keep the appliance dry.

INSTRUCTIONS FOR USE

TO ATTACH / REMOVE ATTACHMENT HEADS

- 1 Select attachment head that best fits your grooming needs.
- 2 Place attachment head on top of the unit. Secure carefully until the attachment head clicks into place.
- 3 To remove attachment head press the head release buttons on the side of the head and pull the attachment head away from the product unit.
- 4 Slide On/Off Switch upward to power the beard trimmer.

TO ATTACH / REMOVE A COMB

- 5 The Adjustable Comb attachment is to be used with the Wide Trimmer Attachment Head. To add, align the Comb side rails with the slots of the wide trimmer head. Secure the Comb by sliding downward. (NOTE: a clicking sound means Comb attachment is secure and ready for use).
 - 6 To use one of the 4 attachment guide combs, hook the front edge of the comb to the front teeth of the wide trimmer blade. Then push the back of the comb down until it snaps in place.
-  NOTE: The Adjustable Comb has various length settings. When first becoming familiar with the beard and grooming kit, begin with a higher numbered setting. Adjust cutting length, as desired.

INSTRUCTIONS FOR BEARD TRIMMING

-  Note: For even cutting, allow the comb attachment/blade to cut its way through the beard hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb length attachment

TO THIN AND TAPER THE BEARD/MOUSTACHE

- 7 Turn the unit on.
- 8 Select the desired length fixed comb or length setting on the adjustable comb. Place the flat top of the trimmer comb against the skin.
- 9 Slowly slide the through the hair. Repeat from different directions as necessary.
- 10 If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush off. If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.
- 11 Regularly check the level of collected hair in the vacuum chamber. Once this becomes full, switch off the beard trimmer and then remove the vacuum chamber to empty the hair clippings. To continue using, slot the vacuum chamber back into product and then slide on the power switch.

✱ TO DEFINE THE BEARD/MOUSTACHE LINE

- 12 Remove the wide trimmer attachment head and replace with the detail trimmer attachment head.
- 13 Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin.
- 14 Use motions towards edge of beard/moustache line to trim the desired locations in facial area.
- 15 Shape as desired.

✱ TRIMMING SIDEBURNS

- 16 Hold the beard trimmer with the wide trimmer blade or detailed trimmer blade facing you.
- 17 Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.

✱ TRIMMING THE NAPE OF YOUR NECK

- ✱ Note: You will need a hand mirror for this operation if performing it alone.
- 18 Remove the fixed combs or adjustable comb from the wide trimmer. Use your fingers to lift the hair at the base of your head up off the neck.
 - 19 Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.
 - 20 Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
 - 21 Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

✱ SHAVING FACIAL AREAS

- 22 Hold the beard trimmer with foil attachment head on.
- 23 Stretch the skin with your free hand so the hairs stand upright.
- 24 Start to clean shave desired facial areas by applying light pressure to the foil head against your skin, applying more pressure for stubborn hairs.
- 25 Use short, vertical strokes.

- ✱ Note: Thick hair growth may need to be trimmed before being effectively removed by the foil attachment head.

➡ Tips for best results

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- If you are trimming for the first time start with the maximum comb length setting.

CARE FOR YOUR BEARD TRIMMER

- Your beard trimmer is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.

AFTER EACH USE

- Ensure the beard trimmer is switched off and disconnected from the mains before cleaning.
- Brush the accumulated hair from the blades.
- To clean unit, wipe with a damp cloth and dry immediately.
- Do not submerge the clipper in water.
- Empty vacuum chamber and rinse under running tap.

WASHABLE ATTACHMENT HEADS

- The washable attachment heads are designed to ensure easy maintenance of your beard and grooming kit
- Ensure each of the attachment heads are removed from the beard trimmer.
- Wash the heads under a running tap to remove any hair clippings. Do not run the entire unit under the tap.
- Once dry, place desired attachment head on top of the unit.
-  Note: Ensure the clipper is turned off when cleaning.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure that the clipper is discharged of all power and disconnected from the mains
- Lift or pry the top housing and remove the top housing.
- Unscrew the 2 screws located on the printed circuit board assembly.
- Lift or pry the clipper halves apart, exposing the battery chamber.
- Take out the battery and printed circuit board assembly from the battery chamber.
- Cut the tabs on both ends of the battery and remove it from the printed circuit board
- The battery is to be disposed of safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➔ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

 REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.
Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. MB6550

13/UK/ MB6550 T22-0001789 Version 08 /13

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2013 SBI