 
REMINGTON

Perfect Brow Kit





CREATE THE PERFECT BROW



- 1 Begin brow
- 2 Arch (highest point)
- 3 End brow

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

◆ IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- 2 Do not use attachments other than those we supply.
- 3 Do not use the appliance if it is damaged or malfunctions.
- 4 Store the product at a temperature between 15°C and 35°C.
- 5 The product is battery operated only.
- 6 This product uses alkaline batteries. At the end of their life the batteries must be removed from the appliance and be recycled or disposed of properly in accordance with your state and local requirements.
- 7 Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials.
- 8 Do not short circuit as it may cause burns.
- 9 Turn off when cleaning.
- 10 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.





KEY FEATURES

Trimmer:

- 1 Dual Blade Trimmer
- 2 Flexing Head
- 3 Eyebrow Comb
- 4 Protective Cap

Tweezers:

8 LED On/Off Switch

- 5 On/Off Switch
- 6 Battery Compartment
- 7 Detail Light
- 9 Battery Compartment

GETTING STARTED

★ Inserting Batteries: Trimmer

 
- Your trimmer requires 1 'AAA' alkaline battery (included). We recommend that you use VARTA® batteries.
- · Ensure the product is switched off.
- Hold the upper part of the trimmer and gently slide the lower part off.
- Insert 1 alkaline 'AAA' battery positive end down.
- Slide the bottom part back onto the unit, ensuring the notch slides over the On/Off switch.

★ Inserting Batteries: Tweezers

- Your tweezers come with 3 x cell batteries (included).
- ★ To change the batteries:
- Unscrew the battery compertment (anticlockwise) (fig. 1).
- Remove the old batteries from the battery compartment.
- · Replace with new batteries with the positive end facing up (fig. 2).
- Screw the battery compartment back together (clockwise) (fig. 3).







INSTRUCTIONS FOR USE

 Trimmer removes stray hair anywhere: including eyebrows, neckline, face, ears, nose and many more.

★ To Reduce the Length:

- 1 The detail trimmer has an eyebrow comb that has two length options.
- 2 Choose length setting: LONG or SHORT (we recommend starting with long).
- 3 Ensure the trimmer is OFF and slide the comb over the trimmer blades.

- 4 Make sure that the teeth of the comb are facing the same direction as the larger trimming blade.
- 5 To turn the trimmer on, slide the ON switch towards the trimming blades.
- 6 To turn on the detail light, push the ON switch up again in the same direction.
- 7 With the comb at a 45° angle to your skin, gently move the trimmer in the direction of hair growth.

★ To Edge and Shape:

- 8 Remove the eyebrow comb.
- 9 Hold the detail trimmer at a right angle to your skin and press down gently.
- 10 Edge and shape the area as desired.
- 11 The small trimmer blade is ideal for precision trimming and small areas.

★ CAUTION

- Do not apply excessive pressure, doing so may damage the trimmer head or result in skin injury.
- Never insert the trimmer more than ¼" (6mm) into nose or ear. Foreign objects should not come into contact with the eardrum.

★ Tweezers

- The tweezers can be used for precision finishing and to remove stubborn or shorter hairs.
- · The built in light reveals even the shortest hairs.

★ Tips

- Use the tweezers after a warm shower or bath when your skin is relaxed and soft so hairs can be removed easily.
- Use one hand to stretch the skin and use the tweezer to grip the hair, then
 pull gently in the direction of the hair growth.

♠ ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

⇒ SERVICE CENTRE

United Kingdom

Tel 0800 212 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS, UK

www.remington.co.uk

Ireland

Tel 142 951 40

Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12.

www.remington.co.uk

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. MPT4000

14/UK/ MPT4000 T22-0001671 Version 07 /14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI