

REMINGTON®

Nose & Ear Trimmer



NE3155

**Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery**



Visit www.remington.co.uk/productregister
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Store the product at a temperature between 15°C and 35°C.
- 3 Do not disassemble the cutter assembly.
- 4 Always remember to turn on the groomer before you insert it into your nose or ear to avoid injury.
- 5 This appliance is not intended for commercial or salon use.



KEY FEATURES

- 1 Linear trimmer
 - 2 On/off switch
 - 3 Battery compartment
-

GETTING STARTED

INSERTING BATTERIES

- Your hygienic trimmer requires 1 'AA' alkaline battery (first one included). We recommend that you use VARTA® batteries.
- Ensure the product is switched off.
- Rotate the battery compartment cap approximately ¼ turn anti-clockwise then pull off.

- Insert 1 'AA' alkaline battery so that the (+) and (-) marks on the battery face the same mark in the battery compartment.
- Place the cap back on the unit using the alignment marks and rotate clockwise until the cap snaps into place.
- Non-rechargeable batteries are not to be recharged.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- The supply terminals are not to be short-circuited.
- ✳ Note: your trimmer will not work if the batteries are inserted incorrectly.
- ✳ Note: remove batteries if the unit is not in use for long periods.

INSTRUCTIONS FOR USE

✳ TURNING ON THE TRIMMER

- The On/Off switch is integrated into the battery cap.
- Rotate the battery cap clockwise to turn on.
- To turn off, simply rotate the battery cap anti-clockwise to the off position.

✳ TO REMOVE HAIR FROM NOSE

- Insert groomer's cutting unit gently into the nostril.
- Gently move the groomer in and out of the nostril and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

✳ TO REMOVE HAIR FROM EYEBROWS

- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely, remove the attachment comb, lower the trimmer onto the skin and move over desired area.
- Use slow and well-controlled movements.

✳ TO REMOVE HAIR FROM EAR

- Insert the cutting unit gently into the outer ear canal opening.
- Gently rotate the trimmer in a circular motion.
- Avoid inserting the cutting unit more than 6mm into your ear canal.
- ✳ NOTE: Do not apply excessive pressure as this damages the trimmer head and may cause skin injury.

CARE FOR YOUR TRIMMER

- Care for your product to ensure a long lasting performance. We recommend you clean your appliance after each use. The easiest and most hygienic way to clean the trimmer is by rinsing the product head after use with warm water. Always keep the trimmer in the "off" position when not in use.

AFTER EACH USE

- Rinse the accumulated hair from the cutters and shake off excess water.
- Wipe the main unit with a damp cloth and dry immediately.

CLEANING CAUTIONS

- Do not use harsh or corrosive cleaners on the units or their blades.
- Do not apply pressure or hard objects to cutters.
- Do not submerge in water as damage will occur.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. NE3155

15/UK/ NE3155 T22-0003136 Version 2 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI