

Thank you for buying your new Remington[®] product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 3 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 4 Keep the power plug and cord away from heated surfaces.
- 5 Make sure the power plug and cord do not get wet.
- 6 Do not plug or unplug the appliance with wet hands.
- 7 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 8 Do not twist or kink the cable, or wrap it round the appliance.
- 9 Store the product at a temperature between 15°C and 35°C.
- 10 Do not use attachments other than those we supply.
- 11 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.



- 12 This appliance is not intended for commercial or salon use.
- ✤ WARNING: Keep the appliance dry.



KEY FEATURES

- 1 On/off switch
- 2 Blade set
- 3 Vacuum intake Vacuum technology
- 4 Easy removable vacuum chamber
- 5 Attachment head release buttons
- 6 Detail trimmer vacuum attachment head (0.4mm)
- 7 Wide trimmer vacuum attachment head
- 8 Foil shaver attachment head (N.B. Vacuum technology does not feature on foil shaver head)

- 9 Adjustable beard comb 2 – 16mm, 2mm adjustment
- 4 attachment guide combs: 3, 6, 9, 12mm 10
- 11 Charging indicator light
- 12 Power port
- 13 Stand
- 14 Body hair trimmer attachment (note: vacuum technology does not feature on body hair trimmer attachment).
- Nose and ear hair trimmer attachment 15
- 16 Adaptor (not shown)
- Storage case (not shown) 17

₩ VACUUM FEATURE

The vacuum technology captures virtually all the facial hair as it is cut. The hairs are vacuumed into an easy empty vacuum chamber located on the front of the beard trimmer. It is recommended that you empty the vacuum chamber after each use by sliding out the section away from the beard trimmer (Fig. A).



Fig. A

③ GETTING STARTED

廿 CHARGING YOUR APPLIANCE

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- Before using your beard and grooming kit for the first time, charge the unit . for 4-6 hours for optimal performance. Typical charge time will be 4 hours thereafter.
- When charging the LED charge indicator will turn blue. The blue light will • turn off after charging is complete.
- To preserve the life of your batteries, let them run out every 6 months then . recharge for 4 hours.
- This appliance should be charged by approved safety isolating adaptors • PA-0510E (for EU version) or PA-0510U (for UK version) with the output capacity of 5.0V dc: 1A:

CORDLESS USE ₩.

- ₩ Please note that this product is cordless use only and cannot be used when connected to the mains.
- When the unit is switched on and fully charged, the product can be used in cordless mode for up to 60 minutes.

WARNING: Keep the appliance dry.

INSTRUCTIONS FOR USE

✤ TO ATTACH / REMOVE ATTACHMENT HEADS

- 1 Select attachment head that best fits your grooming needs.
- 2 Place attachment head on top of the unit. Secure carefully until the attachment head clicks into place.
- 3 To remove attachment head press the head release buttons on the side of the head and pull the attachment head away from the product unit.
- 4 Slide On/Off Switch upward to power the beard trimmer.

✤ TO ATTACH / REMOVE A COMB

- 5 The Adjustable Comb attachment is to be used with the Wide Trimmer Attachment Head. To add, align the Comb side rails with the slots of the wide trimmer head. Secure the Comb by sliding downward. (NOTE: a clicking sound means Comb attachment is secure and ready for use).
- 6 To use one of the 4 attachment guide combs, hook the front edge of the comb to the front teeth of the wide trimmer blade. Then push the back of the comb down until it snaps in place.
- NOTE: The Adjustable Comb has various length settings. When first becoming familiar with the beard and grooming kit, begin with a higher numbered setting. Adjust cutting length, as desired.

✤ INSTRUCTIONS FOR BEARD TRIMMING

Note: For even cutting, allow the comb attachment/blade to cut its way through the beard hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb length attachment

✤ TO THIN AND TAPER THE BEARD/MOUSTACHE

- 7 Turn the unit on.
- 8 Select the desired length fixed comb or length setting on the adjustable comb. Place the flat top of the trimmer comb against the skin.
- 9 Slowly slide the through the hair. Repeat from different directions as necessary.
- 10 If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush off.
- 11 Regularly check the level of collected hair in the vacuum chamber. Once this becomes full, switch off the beard trimmer and then remove the vacuum chamber to empty the hair clippings. To continue using, slot the vacuum chamber back into product and then slide on the power switch.

✤ TO DEFINE THE BEARD/MOUSTACHE LINE

- 12 Remove the wide trimmer attachment head and replace with the detail trimmer attachment head.
- 13 Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin.
- 14 Use motions towards edge of beard/moustache line to trim the desired locations in facial area.
- 15 Shape as desired.

✤ TRIMMING SIDEBURNS

- 16 Hold the beard trimmer with the wide trimmer blade or detailed trimmer blade facing you.
- 17 Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.

✤ TRIMMING THE NAPE OF YOUR NECK

- ★ Note: You will need a hand mirror for this operation if performing it alone.
- 18 Remove the fixed combs or adjustable comb from the wide trimmer. Use your fingers to lift the hair at the base of your head up off the neck.
- 19 Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.
- 20 Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- 21 Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

✤ SHAVING FACIAL AREAS

- 22 Hold the beard trimmer with foil attachment head on.
- 23 Stretch the skin with your free hand so the hairs stand upright.
- 24 Start to clean shave desired facial areas by applying light pressure to the foil head against your skin, applying more pressure for stubborn hairs.
- 25 Use short, vertical strokes.
- Note: Thick hair growth may need to be trimmed before being effectively removed by the foil attachment head.

✤ TO REMOVE HAIR FROM NOSE AND EAR

- 26 Attach the nose, ear and eyebrow attachment.
- 27 Insert the groomer's cutting unit gently into the nostril or ear.
- 28 Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.

29 Avoid inserting the cutting unit more than 6mm into your nostril or ear.

✤ TO REMOVE HAIR FROM EYEBROWS

- 30 Attach nose, ear, eyebrow attachment.
- 31 Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- 32 To remove the hairs completely lower onto the skin and move over the desired area.
- 33 Use slow and well controlled movements.

✤ TRIMMING BODY HAIR

- 34 Attach the body hair trimmer attachment head.
- 35 To achieve the desired hair length, change the guide comb by easily sliding it onto one of the three slots on the attachment head. The different slots represent 3mm, 6mm and 9mm hair lengths.
- 36 Place the flat top of the trimmer comb against the skin. Slowly slide the trimmer through the hair, in the direction of hair growth.
- 37 Use slow and well controlled movements.
- 38 If hair builds up in the guide comb during the trimming process, switch the unit off and pull off the guide comb. Brush the trimmer and rinse the comb.
- Note: the wide trimmer can also be used to trim body hair. This wide trimmer head contains the vacuum technology to conveniently collect trimmed hair in the vacuum chamber.
- 39 Regularly check the level of collected hair in the vacuum chamber. Once this becomes full, switch off the beard trimmer and then remove the vacuum chamber to empty the hair clippings. To continue using, slot the vacuum chamber back into product and then slide on the power switch.

Tips for best results

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- If you are trimming for the first time start with the maximum comb length setting.

CARE FOR YOUR BEARD TRIMMER

- Your beard trimmer is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.

AFTER EACH USE

- Ensure the beard trimmer is switched off and disconnected from the mains before cleaning.
- Brush the accumulated hair from the blades.
- To clean unit, wipe with a damp cloth and dry immediately.
- Do not submerge the clipper in water.
- Remove vacuum chamber from unit, empty chamber and rinse under running tap.

✤ WASHABLE ATTACHMENT HEADS

- The washable attachment heads are designed to ensure easy maintenance of your beard and grooming kit
- Ensure each of the attachment heads are removed from the beard trimmer.
- Wash the heads under a running tap to remove any hair clippings. Do not run the entire unit under the tap.
- Once dry, place desired attachment head on top of the unit.
- ✤ Note: Ensure the clipper is turned off when cleaning.

Ø BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure that the clipper is discharged of all power and disconnected from the mains
- Lift or pry the top housing and remove the top housing.
- Unscrew the 2 screws located on the printed circuit board assembly.
- Lift or pry the clipper halves apart, exposing the battery chamber.
- Take out the battery and printed circuit board assembly from the battery chamber.
- Cut the tabs on both ends of the battery and remove it from the printed circuit board
- The battery is to be disposed of safely.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

SERVICE CENTRE

United Kingdom

Tel 0800 212 438 (free call mainland UK)
+44 161 947 3111 (call outside the UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland Tel 142 951 40 Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

ℬ REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery. Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. PG6070

15/UK/ PG6070 T22-0002180 Version 01 /15 Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0H5 www.remington.co.uk © 2015 SBI