

REMINGTON®

Groom Kit Lithium



PG6160

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery




Visit www.remington.co.uk/productregister
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Make sure the power plug and cord do not get wet.
- 5 Do not plug or unplug the appliance with wet hands.
- 6 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 7 Do not twist or kink the cable, or wrap it round the appliance.
- 8 Store the product at a temperature between 15°C and 35°C.
- 9 Do not use attachments other than those we supply.
- 10 Suitable for cleaning under an open water tap. 
- 11 Always remember to turn on the groomer before you insert it into your nose or ear to avoid injury.
- 12 This appliance should be supplied with approved safety isolating adaptors PA-0510E (Europe), PA-0510U (UK) with the output capacity of 5.0 dc; 1A (adaptor output).
- 13 This appliance is not intended for commercial or salon use.



KEY FEATURES

- | | |
|------------------------------|------------------------------------|
| 1 On/off switch | 7 Body hair trimmer and comb |
| 2 Groomer | 8 5 attachment guide combs |
| 3 Wide trimmer | 9 Adjustable comb for wide trimmer |
| 4 Detail trimmer | 10 Charging indicator |
| 5 Minifoil shaver | 11 Stand (not shown) |
| 6 Nose, ear, eyebrow trimmer | 12 Adaptor (not shown) |

GETTING STARTED

CHARGING YOUR APPLIANCE

- Before using your groomer for the first time, charge for 4 hours.
- Ensure the product is switched off.
- Connect the adaptor to the product and then to the mains.




CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED will illuminate
Fully charged	LED will turn off

- Run time from fully charged is up to 90 minutes.
- Allow 4 hours for a complete charge.
- Typical charging will take no more than 4 hours and the LED will turn off when complete.

Quick Charge Time	Run Time
5 minutes	4 minutes
10 minutes	8 minutes
15 minutes	12 minutes
30 minutes	20 minutes
60 minutes	45 minutes

INSTRUCTIONS FOR USE

-  Note: this product is for cordless use only.
- Switch the product on by pressing the on/off switch.
-  **TO ATTACH AND REMOVE THE TRIMMING ATTACHMENTS**
-  Note: Always ensure the groomer is switched off before changing any attachments.
- To attach place the desired trimming head on top of the groomer and rotate clockwise to lock into place.

- To remove rotate the trimmer head anti-clockwise until it unlocks and then lift off the groomer.

✳ ATTACHING AND REMOVING FIXED GUIDE COMBS ON THE WIDE TRIMMER BLADE

✳ To Attach

- With the trimmer blade facing away from you, slide the guide comb on top of the trimmer blade and click into position.

✳ To Remove

- With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

✳ ATTACHING AND REMOVING ADJUSTABLE COMB ON THE WIDE TRIMMER BLADE

- To attach line up the comb rails and slot on the groomer until firmly secured. Pressing the adjustment button on the back of the comb will alter the cutting length increment, this is indicated on the comb.
- To remove press and hold the adjustment button and push the comb up and off the groomer.

✳ BEFORE YOU BEGIN

- Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

✳ TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the wide trimmer blade.
- Place either the adjustable comb or a fixed comb on the trimmer blade, select the desired length and switch on.
- Start trimming under the chin, following the jawbone line. Work toward the ear and upper beard line using an upward motion.

✳ TO TRIM EDGE OF BEARD OR MOUSTACHE

- Attach the trimmer blade.
- Hold the groomer with the cutting blade facing you.
- Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/moustache line.

✳ TO TRIM SIDEBURNS

- Hold the groomer with the cutting blade facing you.

- Select the desired length on the adjustable comb or select the desired guide combs.
- Move the groomer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

✱ TRIMMING THE NAPE OF YOUR NECK

- Attach the trimmer blade.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

✱ USING THE MINI FOIL SHAVER

- Hold the groomer so the mini foil shaver gently touches your face.
- Use short, well-controlled movements to shave around your beard moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

✱ Note: The mini foil shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

✱ TO REMOVE HAIR FROM NOSE AND EAR

- Attach the nose, ear, eyebrow attachment.
- Insert the groomer's cutting unit gently into the nostril or ear.
- Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

✱ TO REMOVE HAIR FROM EYEBROWS

- Attach the nose, ear, eyebrow attachment.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely lower onto the skin and move over desired area.
- Use short, well-controlled movements.

✱ USING THE DETAIL ATTACHMENT

- Hold the groomer with the surface (back side) of the blade guides against the skin.
- Use motions similar to using a wet blade to provide the closest trim.
- ✱ **Note:** The detail trimmer has Trim Shave Technology which trims hair to 0.2mm giving you that shaven look without the irritation wet blade shaving causes.
- The plastic in front of the blades helps to stretch the skin to achieve the close cut.

✱ TRIMMING BODY HAIR

- Attach the body hair trimmer attachment head.
- To achieve the desired hair length, change the guide comb by easily sliding it onto one of the three slots on the attachment head. The different slots represent 3mm, 6mm and 9mm hair lengths.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, in the direction of hair growth.
- Use slow and well-controlled movements.
- If hair builds up in the guide comb during the trimming process, switch the unit off, pull off the guide comb. Brush trimmer / rinse comb.

✱ REMOVING BODY HAIR

- To remove the hairs completely;
- Trim the hair down to 1.2mm without attaching the guide comb and then change to the mini foil attachment head.
- Hold the shaving head to your skin.
- ✱ Shaver head is not meant to shave your whole body.
- Stretch your skin with your free hand so hairs stand upright.
- Only apply light pressure on the shaving head whilst shaving.
- Shave against hair growth.

➡ TIPS FOR BEST RESULTS

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.

CARE FOR YOUR GROOMER

- Care for your product to ensure a long lasting performance. We recommend that you clean your groomer after each use.
- The easiest and most hygienic way to clean the groomer is by rinsing the product after use with warm water.

AFTER EACH USE

- Brush any accumulated hairs from the groomer and attachment heads.
- The easiest and most hygienic way to clean the groomer is by rinsing with warm water.
- The groomer body should not be rinsed.
- Place one or two drops of cutter oil or sewing machine oil on the blades.
- Turn the groomer on to distribute the oil evenly, wipe off any excess oil.
- Dry the groomer immediately after use.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Remove the attachment head from the appliance.
- Using a small screwdriver, pry off the front housing carefully.
- Open the front housing and take out the inner housing
- Take out the PCB and motor assembly from the housing
- Cut the tabs on both ends of the battery and remove it from the printed circuit board.
- The battery is to be disposed of safely.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at
www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. PG6160

15/UK/ PG6160 T22-0003105 Version 02 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI