

REMINGTON®

Dual Track Rotary Shaver



R456


**Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery**



Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 - 2 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors. 
 - 3 **WARNING:** Keep the appliance dry.
 - 4 Keep the power cord and plug away from heated surfaces.
 - 5 Make sure the power plug and cord to not get wet.
 - 6 Do not leave the appliance unattended while plugged in, except when charging.
 - 7 Do not use attachments other than those we supply.
 - 8 Do not twist or kink the cable, or wrap it round the appliance.
 - 9 Do not use the appliance if it is damaged or malfunctions.
 - 10 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - 11 Do not plug or unplug the appliance with wet hands.
 - 12 Store the product at a temperature between 15°C and 35°C.
 - 13 For use on facial hair only. Not intended for shaving the hair on your head.
 - 14 This appliance is not intended for commercial or salon use.
 - 15 This appliance should be charged by approved safety isolating adaptors SW-040010EU (EU), SW-040010BST (UK) with the output capacity of 4Vdc; 100mA.
- ★ **Note:** To confirm the model number of your shaver please refer to the rating plate on the back of the product.




KEY FEATURES

- | | |
|----------------------------|-------------------------------|
| 1 On/off switch | 7 Pop-up trimmer |
| 2 Head and cutter assembly | 8 Trimmer button |
| 3 Individual flexing heads | 9 Adaptor (not shown) |
| 4 Head release button | 10 Cleaning brush (not shown) |
| 5 Hairpocket | 11 Charging indicator light |
| 6 Power port | |

GETTING STARTED


- It is recommended that you use your new shaver daily for up to two weeks to allow time for your beard and skin to become accustomed to the new shaving system.

CHARGING YOUR APPLIANCE

-  Note: It is recommended to fully charge your appliance before using for the first.
- Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- The adaptor automatically adjusts to a main voltage between 100V and 240V.
- Connect the shaver to the adaptor and then to the mains.

Charge Level Indicators

Charge Level	Indicator
Charging	Green LED will show
Fully Charged	Green LED will continue to show

- Run time from fully charged is up to 30 mins.
- Charge time from empty is 24 hours.
-  Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

- Make sure your shaver is properly charged.
 - Switch the shaver on by sliding up the on/off switch.
- ### SHAVING
- Stretch the skin with your free hand so the hairs stand upright.
 - Hold the shaving head so that the foils touch your face.
 - Use short circular strokes.
- ### TRIMMING
- Slide down the trimmer release button to activate the trimmer.
 - Hold the trimmer at a right angle to your skin.

- To retract the trimmer, push the top rear of the trimmer down until it locks under the trimmer release button.

➡ **Tips for best results**

- Ensure your skin is dry.
- Always hold the shaver at right angles to the skin so that all the heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid irritation and damage to the foil heads.

CLEANING AND MAINTENANCE

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

CLEANING

- Open the shaver head by pressing the release button on the front of the shaver and flipping open the head.
- Turn the cutter assembly dial anticlockwise and lift upwards to gain access to the three cutters.
- Remove the inner cutters.
- Rinse or brush clean the inside of the rotary heads.
- Brush or rinse out remaining debris.
- Replace the inner cutters. Place the cutter assembly over the three cutters and turn the dial clockwise to lock into place.
- Close shaver head until it snaps closed.
- Lubricate the teeth of the trimmer every six weeks with a drop of sewing machine oil.
- Shave head replacement model: SPSFD2

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.

- Remove head from the shaver by pressing the release button and pulling the head straight away from the shaver body.
- Remove the screw on the back panel and then remove the rear cover from the inner housing to expose the batteries.
- Cut the wires connecting the batteries to the circuit board and remove the batteries.
- Dispose of the batteries safely



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland



Tel 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12.
www.remington.co.uk



REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. R456

14/UK/ R456 T22-0001994 Version 08 /14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI