



REMINGTON®

style inspirations

STYLIST

TURBO 2200



2 TURBO FANS



D3710



REMINGTON®
style inspirations

STYLIST

TURBO 2200



ENGLISH

Thank you for buying your new Remington® product. Before use, please read the instructions for use carefully and keep them in a safe place for future reference.



PRODUCT FEATURES

- A** Powerful 1850-2200 Watts
 - B** Ceramic coated grille for even heat
 - C** Ion generator for smooth frizz free styling
 - D** 3 heat/2 speed settings
 - E** Turbo setting
 - F** Cool shot
 - G** Concentrator for smooth styles
 - H** Diffuser for volume and curls
 - I** Removable easy clean rear grille
 - J** Hang up loop
 - K** 2.5m cord
- 3 year guarantee



INSTRUCTIONS FOR USE

STEP 1 - WASH & CONDITION

- ▶ The condition of your scalp and hair is the secret to great looking hair.
- ▶ Choose the right balance of shampoo and conditioner to ensure hair is kept in tip-top condition

STEP 2 - GET READY FOR STYLING!

- ▶ Squeeze out excess moisture with a towel and comb through.
- ▶ For straight or hard to style hair - Use a blow dry spray at the roots to create volume or throughout the lengths to create body, bounce and shine.
- ▶ For fast drying and to remove excess moisture from the hair use dryer on high heat/high speed. For fastest air flow switch on the turbo button 'E'.
- ▶ To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- ▶ To set the style press the cool shot button whilst styling. Return switch to centre position to reactivate heat.
- ▶ To enhance natural curls and waves attach the diffuser to the dryer. Turn head upside down and gently place hair into the diffuser bowl rotating the dryer in your hand slightly as you style. Dry gently on a medium heat/low speed setting.

ENGLISH

- ▶ To create extra volume at the roots of the hair, keep head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp. Be careful not to burn the scalp. Dry gently on a low heat/low speed setting.
- ▶ When finished unplug the unit.



CLEANING AND MAINTENANCE

To maintain peak product performance and to prolong motor life, it is important to regularly remove dust and dirt from the rear grille and clean with a soft brush.

To remove the rear grille for cleaning – Hold the dryer handle in one hand, then with the other place your thumb and index finger on the indents either side of the rear grille. Pull the rear grille away from the dryer – you can then clean this area with a soft cloth or brush.

To replace the rear grille hold in place with thumb and index finger again and click back onto the dryer.



SAFETY CAUTIONS

WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM. IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.



This product is not suitable for use in bath or shower.

THE HAIRDRYER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- ▶ Do not leave the dryer unattended when switched on.
- ▶ Allow the dryer to cool down before storage.
- ▶ Do not immerse in water or other liquids.
- ▶ Do not wrap the cord around the unit. Check cord regularly for any sign of damage. Damaged cords can be dangerous.
- ▶ In use, take care that the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. Should this occur, switch off and allow the unit to cool down.
- ▶ Ensure the rear inlet grille is free from obstructions such as household lint, loose hair before each use etc.
- ▶ Do not place hairdryer on soft material e.g. carpet, bedding, towels, rugs etc.
- ▶ Do not leave the dryer switched on when you set it down.

ENGLISH

- ▶ Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- ▶ Do not direct the airflow towards the eyes or other sensitive areas.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Do not use any attachments with this hairdryer, other than those supplied by Remington®.
- ▶ Avoid allowing any part of the hairdryer to contact the face, neck or scalp.
- ▶ This appliance is not intended for commercial or salon use.
- ▶ If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- ▶ Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- ▶ We do not accept responsibility for damage to the product, persons or other item(s), caused by misuse, abuse or non-compliance with these instructions.


Caution: To prolong the life of your hairdryer it is recommended that you avoid using the concentrator and diffuser when operating the hairdryer on its maximum heat setting.



WIRING INSTRUCTIONS UK Plugs Only

This product is fitted with a BS1363 plug fused at 13A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BS1362, rated at 13A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in accordance with following code:

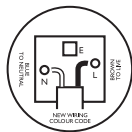

BLUE - NEUTRAL

BROWN - LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked 'N' or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked 'L' or coloured RED. Never connect either of the wires to the big EARTH terminal marked 'E' or coloured GREEN or GREEN AND YELLOW.

ENGLISH



PROTECT THE ENVIRONMENT

Do not dispose of the product in household waste at the end of its life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.



For further information on recycling see www.remington-europe.com



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.



REMINGTON® SERVICE HOTLINE

United Kingdom

☎ +44 0800 212 438 (free call)

Spectrum Brands (UK) Limited

Fir Street

Failsworth

Manchester

M35 0HS United Kingdom

Email: uk.service@remington.co.uk

www.remington.co.uk





Model No. D3710

11/UK /D3710 Version 01/11 Part No.T22-3160
REMINGTON® Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries

VARTA Consumer Batteries GmbH & Co. KGaA
Alfred-Krupp-Str.9
73479 Ellwangen
Germany

UK & Ireland:
Spectrum Brands (UK) Ltd.
Fir Street
Fallsworth
Manchester
M35 0HS
England

www.remington-europe.com
© 2011 SBI
Company and is used under license by Spectrum Brands.

This product is not suitable for use in bath and shower

