

REMINGTON

All technical modifications reserved. 09/08 TSC 08/06/81

# REMINGTON®

## Hair Clipper

corded for constant power



HC70



Model No. HC70

I2/UK/HC70 Version 11/12 Part No. T22-0000966

REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries

VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str.9

73479 Ellwangen

Germany

 
[www.remington-europe.com](http://www.remington-europe.com)

© 2010 SBI

REMINGTON



4.

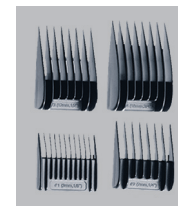










REMINGTON

## ➔ REMINGTON® SERVICE HOTLINES
       
### UNITED KINGDOM

 +44 0800 212 438 (free call)  
Customer Services  
Spectrum Brands(UK) Limited  
Fir Street, failsworth, Manchester ,  
M35 0HS,UK  
[www.remington.co.uk](http://www.remington.co.uk)

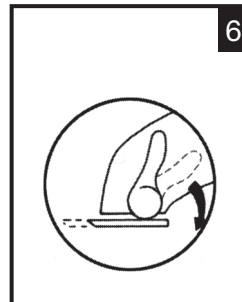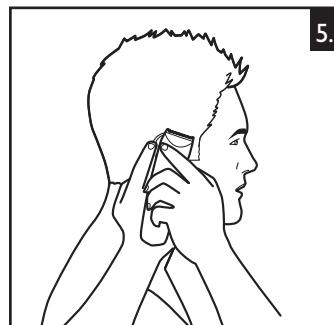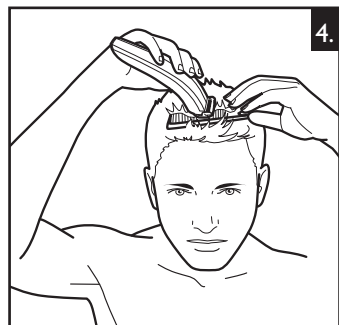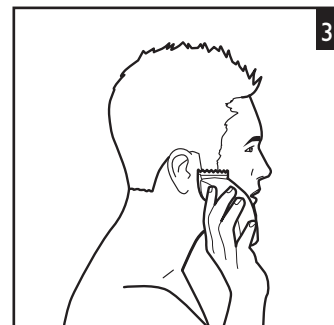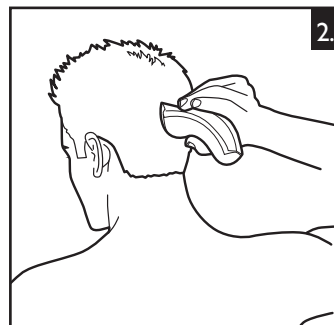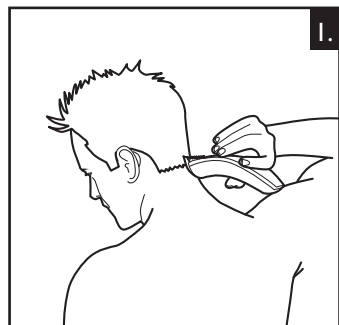

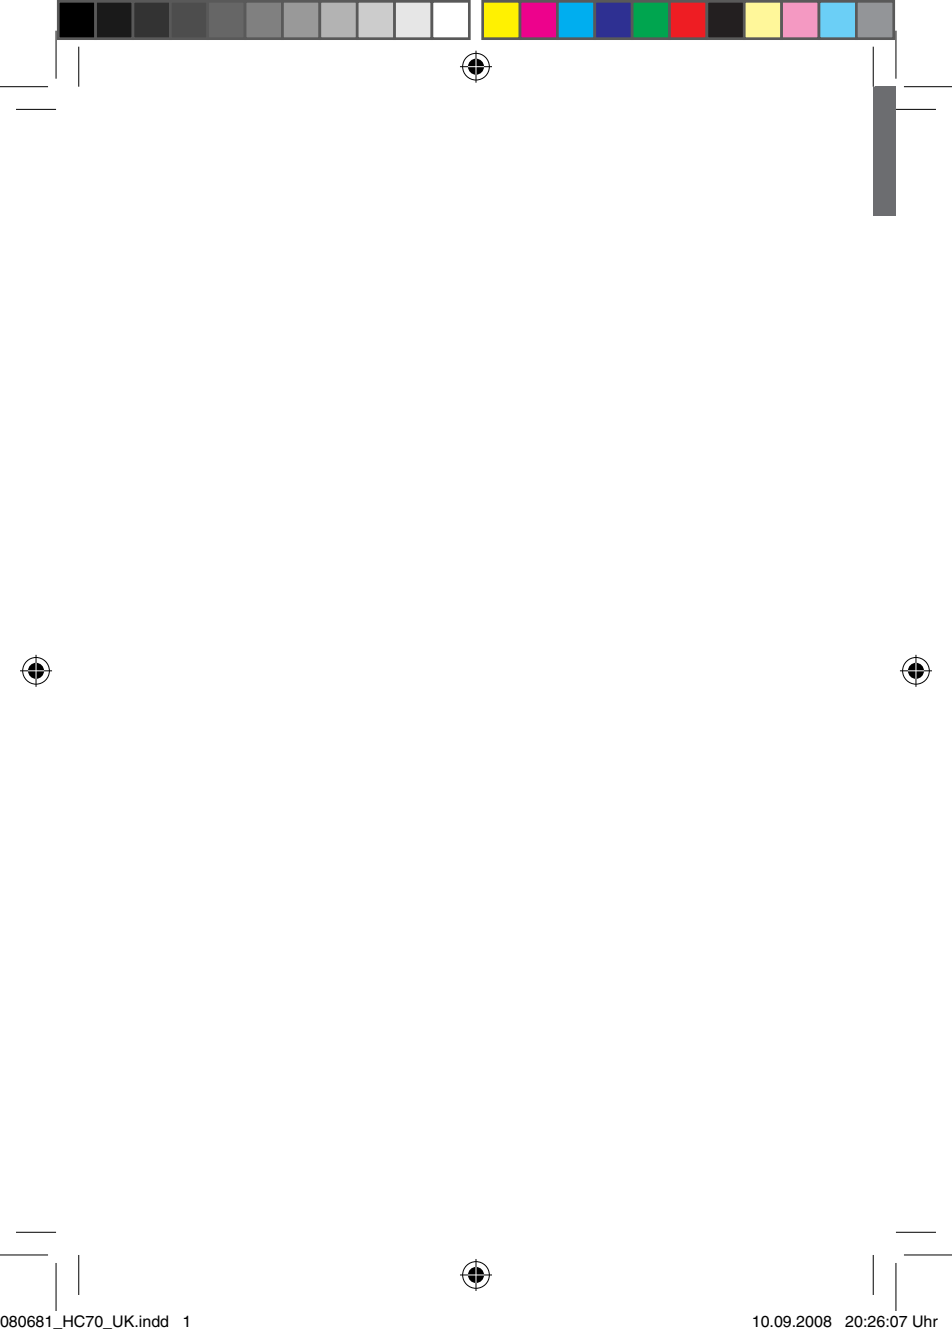

ENGLISH

REMINGTON

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® appliance. Please read the instructions for use carefully and keep in a safe place for future reference.



## CAUTION

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



## DESCRIPTION

1. On/Off switch
2. Blade set
3. Taper lever
4. 4 attachment guide combs

# ENGLISH



## HOW TO USE

### Before starting the cut

- ▶ Inspect the clipper making sure that it is free from hair and dirt.
- ▶ Seat the person so that their head is approximately at your eye level.
- ▶ Before cutting, always comb the hair so it is tangle free and dry.

### To attach a comb

- ▶ Hold the comb with its teeth upward
- ▶ Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper blade.

### To remove the comb

- ▶ Holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.

### Comb Attachments Hair Lengths

- ▶ Each comb attachment is marked accordingly on its outside middle surface (3mm, 7mm, 9mm, 12mm).

## INSTRUCTIONS FOR HAIR CUTTING

- ◆ Note: For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment

### STEP 1 – Nape of the neck – DIAGRAM 1

- ▶ Use 3mm or 6mm guide comb.
- ▶ Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- ▶ Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

### STEP 2 – Back of the head – DIAGRAM 2

- ▶ With the 12mm guide comb attached, cut the hair at the back of the head.

### STEP 3 – Side of the head – DIAGRAM 3

- ▶ With the 3mm or 6mm guide comb attached, trim sideburns. Then change to the longer 9mm or 12mm guide comb and continue to cut to the top of the head.



REMINGTON

#### STEP 4 – Top of the head – DIAGRAM 4

- ▶ With the 9mm or 12mm guide comb attached, cut hair on top of the head against the direction in which the hair normally grows.
- ▶ For longer hair on top, use without a guide comb. Lift the hair on top of the head with a small hand comb. Cut over the hand comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- ▶ Always work from the back of the head.

#### STEP 5 – The finishing touches – DIAGRAM 5

- ▶ Use the clipper without an attachment comb for close trimming around the base and sides of the neck. Use the ear comb guides to get a clean line around each ear. For the required ear comb guide, angle the clipper and lightly stroke around each ear to the back of the neck.
- ▶ To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

#### ■ TAPER LEVER (DIAGRAM 6)

This product has a taper lever located at the left side of the clipper near the blades. Adjust the lever to change the closeness of the cut gradually and also to improve the effectiveness of the comb attachments. The taper lever also extends the life of the blades because a different cutting edge is used in each setting.

# ENGLISH



## CARE FOR YOUR HAIRCLIPPER

Your clipper is fitted with high quality titanium blades. To ensure long lasting performance of your clipper, clean the blades and unit regularly. Always keep the protective cap on the trimmer blade.

### AFTER EACH USE

- ▶ Ensure the clipper is switched off and disconnected from the mains.
- ▶ Brush the accumulated hair from the blades. Do not submerge the clipper in water.
- ▶ To clean the unit, wipe with a damp cloth and dry immediately.
- ◆ Note: Ensure that the clipper is turned off when cleaning.

### EVERY SIX MONTHS

At regular intervals the Blade Set should be removed and cleaned.

- ▶ Remove the 2 screws retaining the fixed blade with a screwdriver. Do not remove blade set.
- ▶ Brush out hairs from between the blades with soft cleaning brush. Do not remove the lubricating grease from the blades. It is not necessary to remove the small moving blade from the unit.
- ▶ If the moving blade has been removed this can be re-fitted by slotting the long grooved edge of the blade onto the two white plastic guide ridges and then seating the blade over the plastic actuator bar. The fixed blade is fitted with the raised profile pointing outwards and fixed with the 2 screws.
- ▶ Before fully tightening the 2 screws, adjust the taper lever to the lower position and align the blades so that their cutting edges are parallel to one another. Tighten the 2 screws. Note that if the blades are not correctly aligned then cutting efficiency will be impaired.
- ◆ CAUTION: Do not use liquid cleaners on the blades or harsh or corrosive chemicals on the blade casing. Always use a soft brush to remove the accumulated hairs.
- ▶ Unplug the charge adaptor from the power outlet when fitting or removing attachments, or while cleaning the product.
- ▶ Always store this appliance in a moisture-free area.
- ▶ Do not wrap the cord around the appliance.



## TROUBLESHOOTING

If blades do not seem to cut hair easily, the taper lever (DIAGRAM 6) can be used to remove any hair caught between the comb and blade. Switch the clipper on and move the taper lever up and down a few times but do not force the lever in either direction. This should remove hairs and restore the cutting efficiency. If not, contact your nearest Remington® Service Centre.



## IMPORTANT SAFETY INSTRUCTIONS

### **WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:**

- ▶ An appliance should never be left unattended when plugged into a power outlet.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not plug or unplug the shaver with wet hands.
- ▶ Do not use the product with a damaged cord.  
A replacement can be obtained via the Remington® Service Centre.
- ▶ Charge, use and store the product at a temperature between 15°C and 35°C.
- ▶ Always unplug from the mains when cleaning.
- ▶ Only use the parts supplied with the appliance.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.



## PROTECT THE ENVIRONMENT

- ▶ Do not dispose the trimmer in household waste at the end of its useful life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.



For further information on recycling see [www.remington-europe.com](http://www.remington-europe.com)





# ENGLISH



**2**  
years

## SERVICE & WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to the faulty material or workmanship for a 2 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Centre in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and the cutters which are consumable parts. Also, not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.

