

REMINGTON

REMINGTON®

BEARD & GOATEE STUBBLE GROOMER

All technical modifications reserved. 1008.TSC.080711



MB975KOS

Model No. MB975KOS

I1/UK/MB975KOS Version 03/11 Part No. T22-31724
REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries
VARTA Consumer Batteries GmbH & Co. KGaA
Alfred-Krupp-Str.9
73479 Ellwangen
Germany
www.remington-europe.com

© 2008 SBI



REMINGTON



5.



6.





REMINGTON

 
 
 
 
 
 
 
 
◆ REMINGTON® SERVICE HOTLINES

United Kingdom

☎ +44 0800 212 438 (free call)

Spectrum Brands (UK) Limited,
Fir Street, Failsworth,
Manchester,
M35 0HS, UNITED KINGDOM

www.remington.co.uk

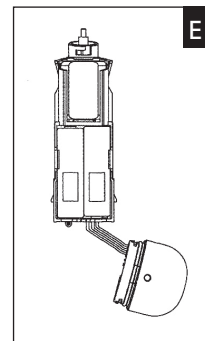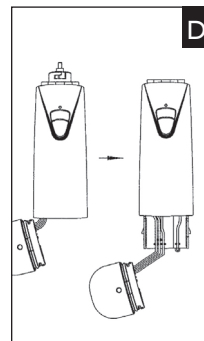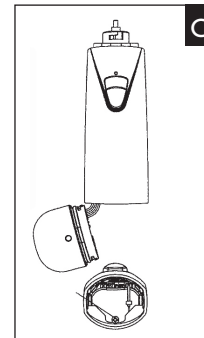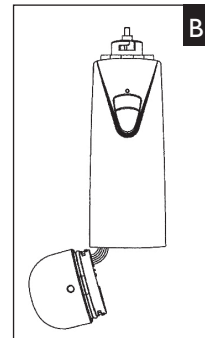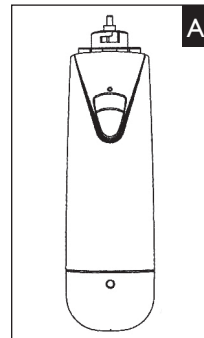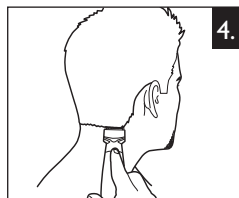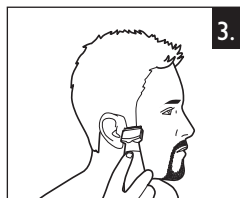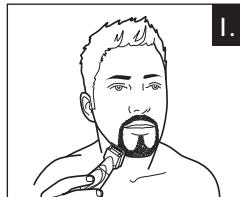

ENGLISH

REMINGTON

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® appliance. Please read the instructions for use carefully and keep in a safe place for future reference.



CAUTION

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



DESCRIPTION

1. On/Off Switch
2. 20mm trimmer attachment
3. 30mm trimmer attachment
4. Charging indicator light
5. Charging adaptor
6. 2 (reversible) guide combs

ENGLISH



GETTING STARTED

■ CHARGING YOUR TRIMMER

Before using your trimmer for the first time, charge for 14 - 16 hours.

- ▶ Ensure the product is switched off.
- ▶ Connect the charging adaptor to the product and then to the mains. The charging indicator will light up.

Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.

To preserve the life of your batteries, let them run out every six months then recharge for 14-16 hours.

■ CORDED USE

- ▶ Connect the charging adaptor to the product and then to the mains.

⚡ **CAUTION:** Extended mains only use will result in the reduction of the battery life.



HOW TO USE

■ BEFORE YOU BEGIN

Always comb your beard or moustache with a fine comb before you start trimming.

■ REVERSIBLE GUIDE COMBS

These attachment reversible guide combs are for use with the 30mm trimmer blade only. To attach, gently slide the comb over the trimmer blade. An arrow on the side of the comb indicates the length which the hair will be cut.

Settings	mm
No guide combs	0,5 mm
Small comb	3mm/6mm
Large comb	9mm/12mm

Replacement combs available: SP256

■ ATTACHING AND REMOVING THE GUIDE COMBS

- ▶ With the trimmer blade facing away from you, slide the guide comb on top of the clipper blade and click into position.
- ▶ With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

■ TO THIN AND TAPER THE BEARD/MOUSTACHE (Diagram 1)

- ▶ Attach a guide comb to the 30mm Trimmer Blade. If you are trimming for the first time start with the maximum trimming length setting.
- ▶ Turn the unit on.
- ▶ Place the flat top of the trimmer comb against the skin.
- ▶ Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- ▶ If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.

■ TO DEFINE THE BEARD/MOUSTACHE LINE (Diagram 2)

- ▶ Hold the trimmer with 20mm Trimmer Blade facing you.
- ▶ Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

■ TRIMMING EDGE OF SIDEBURNS (Diagram 3)

- ▶ Hold the trimmer with 20mm Trimmer Blade facing you.
- ▶ Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.

■ TRIMMING THE NAPE OF YOUR NECK (Diagram 4)

Note: You will need a hand mirror for this operation if performing it alone.

- ▶ Before you begin, attach the 30mm Trimmer Blade.
- ▶ Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the trimmer.
- ▶ Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.

Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

ENGLISH



CARE FOR YOUR TRIMMER

CLEANING AND MAINTAINING YOUR TRIMMER

AFTER EACH USE

1. Turn the trimmer off.
2. Gently brush the remaining hairs away/rinse under warm water from the guide comb and trimmer blade.

CLEANING CAUTIONS

- ▶ Only the guide comb attachment and trimmer blade may be removed from the product for cleaning.
- ▶ Cleaning should only be done with a soft brush, such as the brush supplied with the product.
- ▶ Only use light-grade oil or sewing machine oil on the blades.
- ▶ Do not use harsh or corrosive cleaners on the units or their blades.
- ▶ Do not submerge in water as damage will occur.

STORAGE

- ▶ Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- ▶ Do not wrap the cord of the charging adaptor around the appliance.



Suitable for cleaning under water



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged into a power outlet.
- ▶ **WARNING:** Detach the hand-held part from the supply cord before cleaning it in water.
- ▶ **WARNING:** The parts that have to be fixed must be installed so they cannot fall into water.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not plug or unplug the product with wet hands.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- ▶ Charge, use and store the product at a temperature between 15°C and 35°C
- ▶ Always unplug from the mains when cleaning.
- ▶ Only use the parts supplied with the appliance.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.



PROTECT THE ENVIRONMENT

This appliance contains an environmentally friendly rechargeable Nickel Metal Hydride battery. Do not dispose of the appliance or the battery in the household waste as restrictions exist in most countries. Adhere to national or local regulations for collection and disposal that apply to your specific location. In case you are required to remove the battery from the appliance for separate disposal see the instructions in the 'Battery Removal' section on how to open the housing.

- ◆ **CAUTION:** Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



For further information on recycling see www.remington-europe.com

ENGLISH



BATTERY REMOVAL

To remove the battery for safe disposal, please follow the instructions below:

- ▶ Turn the trimmer on and discharge all remaining power.
- ▶ Remove trimmer head (Diagram A)
- ▶ Hold the upper body of the trimmer in one hand and the lower 1/6th of the trimmer in the other hand and pull the battery cover off by force. (Diagram B)
- ▶ Remove the screw (Diagram C)
- ▶ Remove the motor bracket by pressing the eccentric with force (Diagram D)
- ▶ Disconnect the battery wire and remove the battery (Diagram E)

2
years

SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to the faulty material or workmanship for a 2 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Centre in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and the cutters which are consumable parts. Also, not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.