

# REMINGTON®

## Wet 2 Straight



S7300



**Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery**


Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)  
You must register within 28 days  
of purchase.


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.  
Remove all packaging before use.

---

## IMPORTANT SAFETY INSTRUCTIONS

---

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors. 
- 4 Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.
- 5 For UK, Household Use Only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 6 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 Do not use the product with a damaged power cord or plug.
- 10 Do not allow any part of the appliance touch the face, neck or scalp.
- 11 Do not leave the appliance unattended while plugged in.
- 12 Only set the appliance down on a heat-proof surface.
- 13 Do not place the appliance on any soft furnishings.
- 14 Do not use attachments other than those we supply.
- 15 This appliance is not intended for commercial or salon use.
- 16 Let the appliance cool down before cleaning and storing away.
- 17 Don't use a normal 'dry' straightener on wet hair.

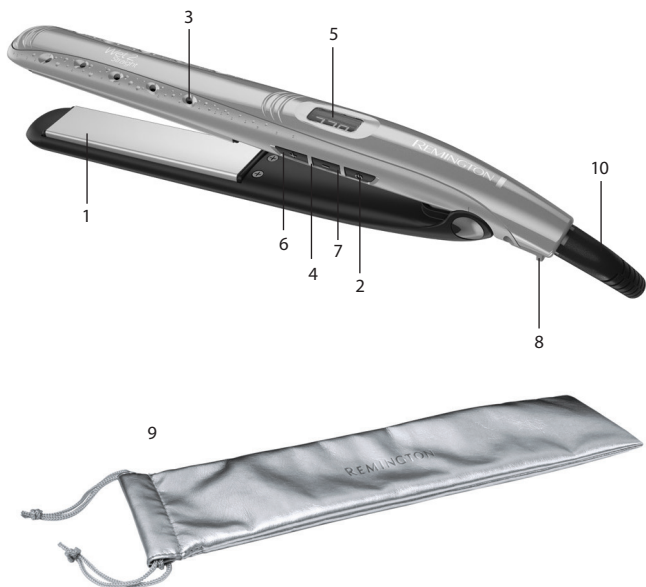

## KEY FEATURES

- 1 Advanced ceramic coated plates infused with frizz resistant micro conditioners
- 2 On-off switch
- 3 Vents to channel excess water away and allow water to evaporate quickly
- 4 Temperature controls
- 5 Temperature display
- 6 Temperature boost function
- 7 Temperature lock function
- 8 Hinge lock
- 9 Heat resistant pouch
- 10 Swivel cord

---

## PRODUCT FEATURES


---

- Can be used on wet or dry hair.
- Advanced ceramic coated plates infused with frizz resistant micro conditioners engineered to last the life time of the product.
- High heat – 150°C to 230°C.
- 110mm longer length floating plates – for even pressure on the hair as you straighten.
- Fast heat up - ready in 15 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

---

## INSTRUCTIONS FOR USE

---

- ★ This Straightener can be used on wet or dry hair.
  - Wash and condition your hair as normal.
  - Squeeze out excess moisture with a towel and comb through.
  - Section the hair prior to styling. Style the lower layers first.
  - Plug the product into the mains power supply.
  - When the styler is plugged in but not turned on a lock symbol will show in the display window indicating the styler is in standby mode .
  - Press and hold the on button to switch on.
- ★ **Wet Mode – Use on Towel Dried Hair.**
  - Towel dry hair well before styling.
  - Do not use on dripping wet hair.
  - When you turn on the straightener it will automatically set itself to wet mode.
  - It will default to 200°C which is the minimum temperature required for Wet mode straightening. This is indicated by the cloud icon.
  - Start styling on lower temperatures first. Select the appropriate temperature for your hair type using the controls on the side of the product. '+' increases the temperature '-' decreases the temperature.
  - The temperature bars and digital display will stop flashing when the desired temperature is reached.
  - Working on one section at a time, run the straightener through the entire length of the hair without stopping.

- Ensure the vent holes are directed away from the face, neck and scalp.
- When straightening wet hair you will hear a hissing sound and the unit will steam. This is a good thing – it is the sound of excess water in your hair evaporating and this is not harmful to the condition of your hair.

#### ★ **Dry Mode – Use on Dry Hair**

- Before use, ensure the hair is clean, dry and tangle-free.
- Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product. '+' increases the temperature '-' decreases the temperature.

#### ★ **Recommended Temperatures:-**

Temperature	Hair Type
150°C - 170°C	Fine
170°C - 200°C	Medium
200°C - 230°C	Thick

- ★ **Caution:** the hottest temperatures should only be used by experienced stylists.
- The temperature bars and digital display will stop flashing when the desired temperature is reached.
- Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- Only repeat twice per section to prevent damage to the hair.
- After use, press and hold the off button for two seconds to turn off then unplug the appliance.
- Let the appliance cool down before cleaning and storing away.

#### ★ **Temperature Lock Function**

- Set the desired temperature by pressing +/- buttons and lock the temperature controls by pressing the '-' button for 2 seconds.

#### ★ **Temperature Boost Function – Automatically Sets the Highest Temperature.**

- Hold the '+' button for 2 seconds and the temperature will boost to 230°C.
- Please note, the highest temperature is not suitable for every hair type.
- Please select a temperature depending on your hair texture.

### ✱ Hinge Lock for Storage

- The plates can be shut together for easy storage:
- To lock, push the hinge lock up to the locked position.
- To unlock, pull the hinge lock down to the unlocked position.

✱ NOTE: Do not heat the unit in the locked position.

---

## CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## ➡ SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## ➔ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

**Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.**

## **Model No. S7300**

15/UK/ S7300 T22-0003726 Version 08 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.  
Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2015 SBI