

REMINGTON®

PRO-Ion Straight



S7710


Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 5 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 6 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 7 Do not use the appliance if it is damaged or malfunctions.
- 8 Do not allow any part of the appliance touch the face, neck or scalp.
- 9 Do not leave the appliance unattended while plugged in.
- 10 Only set the appliance down on a heat-proof surface.
- 11 Do not place the appliance on any soft furnishings.
- 12 Do not use attachments other than those we supply.
- 13 This appliance is not intended for commercial or salon use.
- 14 Let the appliance cool down before cleaning and storing away.
- 15 The heat resistant pouch included with this product is only heat resistant on the inside. Do not let the product come into contact with the outside of the pouch while still hot.



KEY FEATURES

- 1 Advance ceramic ultra tourmaline coated plates
- 2 On-off switch
- 3 Temperature controls
- 4 Temperature display
- 5 Temperature boost function
- 6 Temperature lock function
- 7 Ion release channels
- 8 Hinge lock
- 9 Heat resistant pouch (not shown)
- 10 Swivel cord

PRODUCT FEATURES

- Advanced ceramic ultra tourmaline - now 75% smoother*
- *Vs Remington advanced ceramic coating
- Triple Ionic Technology
 - 1 Ionic generator
 - 2 Dual ion release channels
 - 3 Advanced ceramic ultra tourmaline coating
- Memory function automatically remembers the last temperature used
- High heat – 150°C to 230°C.
- 110mm longer length floating plates – for even pressure on the hair as you straighten.
- Fast heat up - ready in 15 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- 2 For extra protection use a heat protection spray.
- ★ Hairsprays contain flammable material – do not use while using this product.
- 3 Section the hair prior to styling. Style the lower layers first.
- 4 Plug the product into the mains power supply. Press and hold the on button to switch on.
- 5 When the styler is plugged in but not turned on a lock symbol will show in the display window indicating the styler is in standby mode.
- 6 Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product.
- 7 To adjust the temperature use the +/- temperature controls on the side of the product. '+' increases the temperature '-' decreases the temperature.

Temperature	Hair Type
150°C - 170°C	Thin/ Fine, damaged or bleached hair
170°C - 200°C	Normal, healthy hair
200°C - 230°C	Thick, very curly and difficult to style hair

- ★ Caution: the hottest temperatures should only be used by experienced stylists.
- 8 The digital display will stop flashing when the product is ready to use.
- 9 Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- 10 The negative ions will be released onto the hair with every stroke.
- 11 Only repeat twice per section to prevent damage to the hair.
- 12 After use, press and hold the off button to turn off then unplug the appliance.
- ★ Note: the buzzing noise you can hear is normal; it is the sound of the ions being generated and released. Do not worry if this noise fluctuates, this is normal.

★ Temperature Boost Function

- Automatically sets the highest temperature. Hold the '+' button for 2 seconds and the temperature will boost to 230°C.
- Please note, the highest temperature is not suitable for every hair type.
- Please select a temperature depending on your hair texture.

✱ Temperature Lock Function

- Set the desired temperature by pressing +/- buttons and lock the temperature controls by pressing the '-' button for 2 seconds.
- A 'padlock' symbol will appear next to the temperature.
- To unlock the temperature controls, press and hold the '-' button again for 2 seconds.

✱ Hinge Lock for Storage

- The plates can be shut together for easy storage:
- To lock, push the hinge lock up to the locked position.
- To unlock, pull the hinge lock down to the unlocked position.

✱ NOTE: Do not heat the unit in the locked position.

✱ Memory Function

- Each time you use the product it will automatically set to the last temperature it was used on.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at
<http://www.remington.co.uk/parts-accessories>

➡ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. S7710

14/UK/ S7710 T22-0002016 Version 01 / 14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI