

# REMINGTON®

## Keratin Radiance Straightener



S8596

**Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery**



Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.  
Remove all packaging before use.


---

## IMPORTANT SAFEGUARDS

---

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not leave the appliance unattended while plugged in.
- 3 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 4 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 5 Warning: do not use this appliance near bathtubs, showers or basins or other vessels containing water.
- 6 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 7 Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.
- 8 \*For UK, Household Use Only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 9 Do not plug or unplug the appliance with wet hands.
- 10 Do not use the product with a damaged power cord or plug.
- 11 Do not allow any part of the appliance touch the face, neck or scalp.
- 12 This appliance is not intended for commercial or salon use.
- 13 Only set the appliance down on a heat-proof surface.
- 14 Store the product at a temperature between 10°C and 35°C.



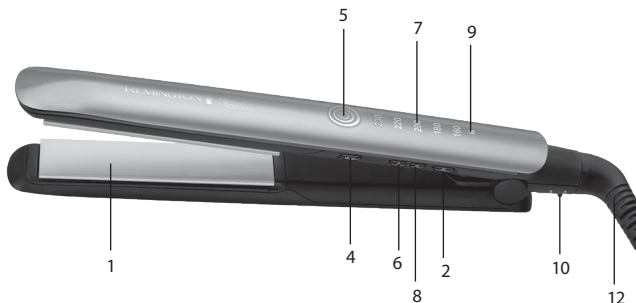


## KEY FEATURES

- 1 Advanced keratin and macadamia coated plates
- 2 On-off switch
- 3 Heat protection sensor
- 4 Heat protection sensor on-off switch
- 5 Heat protection sensor on indicator icon
- 6 Temperature controls
- 7 Temperature display
- 8 Temperature boost function
- 9 Temperature lock function
- 10 Hinge lock
- 11 Heat resistant pouch (not shown)
- 12 Swivel cord

## PRODUCT FEATURES


- Advanced ceramic coated plates infused with Keratin and Macadamia for smooth radiant, healthy looking hair.
- High heat - 160°C to 230°C.
- 110mm longer length with floating top plate – for even pressure on the hair as you straighten.
- Fast heat up - ready in 15 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

## INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- Section the hair prior to styling. Style the lower layers first.
- Plug the product into the mains power supply.
- When the styler is plugged in but not turned on a lock symbol will show in the display window indicating the styler is in standby mode .
- Press and hold the on button to switch on.
- The heat protection function is automatically activated when the styler is turned on – as indicated by the pulsing icon.
- To turn this function off, press and hold the Heat Protection Sensor On/Off button.
- Start styling on lower temperatures first. Select the appropriate temperature for your hair type using the controls on the side of the product. '+' increases the temperature '-' decreases the temperature.

### Recommended temperatures:-

Temperature	Hair Type
160°C - 180°C	Fine
180°C - 200°C	Medium
200°C - 230°C	Thick

-  **Caution:** the hottest temperatures should only be used by experienced stylists.
- The temperature display will stop flashing once the desired temperature is reached.
- Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- If the Heat Protection Sensor is on during styling, it will monitor moisture in the hair and continually optimise the temperature to prevent damage without compromising on results. These changes are not displayed by the straightener and happen quickly and automatically during styling.
- After use, press and hold the off button for two seconds to turn off then unplug the appliance.

### ✱ Temperature Lock Function

- Set the desired temperature by pressing +/- buttons and lock the temperature controls by pressing the 'L' button for 2 seconds. A 'L' symbol will appear next to the temperature.
- To unlock the temperature controls, press and hold the 'L' button again for 2 seconds.

### ✱ Temperature Boost Function

- Hold the 'L' button for 2 seconds and the temperature will boost to 230°C.

### ✱ Hinge Lock for Storage

- The plates can be shut together for easy storage:
- To lock, push the hinge lock up to the locked position.
- To unlock, pull the hinge lock down to the unlocked position.

- ✱ NOTE: Do not heat the unit in the locked position.

---

## CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## ➡ SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at

[www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## ➡ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.



## **Model No. S8596**

16/UK/ S8596 T22-0004296 Version 04 /16

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.  
Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2016 Spectrum Brands, Inc.