

Thank you for buying your new Remington[®] product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

✤ WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 5 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 6 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington[®] service dealer for repair or replacement in order to avoid a hazard.
- 7 Do not use the appliance if it is damaged or malfunctions.
- 8 Do not allow any part of the appliance touch the face, neck or scalp.
- 9 Do not leave the appliance unattended while plugged in.
- 10 Only set the appliance down on a heat-proof surface.
- 11 Do not place the appliance on any soft furnishings.
- 12 Do not use attachments other than those we supply.
- 13 This appliance is not intended for commercial or salon use.
- 14 Let the appliance cool down before cleaning and storing away.



KEY FEATURES

- 1 Advanced Ceramic plates infused with Keratin, Argan and Macadamia oils
- 2 On-off switch
- 3 Temperature controls
- 4 Temperature display
- 5 HydraCare release button
- 6 Hinge lock
- 7 Water reservoir
- 8 Heat resistant pouch and mat (not shown)
- 9 Swivel cord
- 10 Cool mist channel
- 11 Reservoir plug
- 12 Reservoir cap and wick (not to be removed)

PRODUCT FEATURES

- HydraCare Technology provides the perfect balance of moisture and heat.
- Advanced Ceramic coated plates infused with Keratin, Argan and Macadamia oils for shiny, healthy looking hair.
- 5 variable heat settings 150°C 230°C.

- 110mm longer length floating plates for even pressure on the hair as you straighten.
- Fast heat up ready in 15 seconds.
- Automatic safety shut off this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- The PROtect straightener can also be used without operating the HydraCare function, follow steps 6-12 and 17-18.
- 2 Before operating the HydraCare function, the reservoir must be filled with water.
- ✤ Do NOT operate HydraCare function if the reservoir is empty.









- 3 To fill the reservoir with water, remove the capsule from the base of the product (fig. 1).
- A full reservoir should last approximately 5 styling session depending on hair length, hair type and styling habits.
- 4 Gently, pull the plug using the tab to reveal the opening of the reservoir and fill with water (fig. 2).
- To prolong the life of the product we recommend using filtered or distilled water ONLY.
- 5 Dry off excess water and replace the plug securely, place the capsule back into the base of the product until you hear a 'click'
- 6 Section the hair prior to styling. Style the lower layers first.

- 7 Plug the product into the mains power supply. Press and hold the on button to switch on.
- 8 The recommended optimum temperature of 170°C is automatically selected.
- 9 To adjust the temperature use the +/- temperature controls on the side of the product. '+' increases the temperature '-' decreases the temperature.
- 10 Temperature Boost Function: To activate, press and hold '+' for 2 seconds, this automatically selects the highest temperature.
- 11 Temperature Lock Function: To activate, press and hold '-' for 2 seconds. The symbol will appear and all the keys will be locked. To de-activate press the '-' for 2 seconds.
- 12 The selected temperature will flash continuously until the desired temperature is reached.
- 13 Before styling, press and hold the HydraCare button for 2 seconds to activate (fig. 3).
- 14 The HydraCare button will pulse continuously as you style.
- 15 When the HydraCare function is ON, always ensure the Cool Mist Channel is facing towards the ends of the hair when styling (fig. 4). Styling the hair in the opposite direction when the HydraCare function is ON will leave the hair damp and performance will be restricted.
- 16 The cool mist will only activate when the plates are close together (fig. 5).
- 17 Working on one section at a time, run the straightener through the entire length of hair without stopping.
- 18 After use: Press and hold the off button to turn off and unplug the appliance, allow to cool and wipe away condensation/steam residue with a damp cloth before storing away.
- ✤ We recommend emptying the reservoir before storing away.

✤ Hinge Lock for Storage

- The plates can be shut together for easy storage:
- To lock, close the plates and push the hinge lock up to the locked position.
- To unlock, pull the hinge lock down to the unlocked position.
- ✤ NOTE: Do not heat the unit in the locked position.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.
- To prolong the life of the product, avoid touching the cap and wick on the water reservoir, refill using the plug only.

& ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

SERVICE CENTRE

United Kingdom

Tel 0345 6460 438 (free call mainland UK)
+44 161 947 3111 (call outside the UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland Tel 142 951 40 Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

ℬ REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery. Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. S8700

15/UK/ S8700 T22-0003232 Version 02 / 15 Remington" is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0HS www.remington.co.uk © 2015 SBI