

- 9 Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- 10 Only repeat twice per section to prevent damage to the hair.
- 11 After use, press and hold the off button to turn off then unplug the appliance.

★ **Temperature boost function:** For quick touch ups of stubborn, hard to style sections. The temperature boost function boosts the temperature to 240°C for 30 seconds after which it will return to the previously set temperature. Hold the '+' button for 2 seconds to operate. **Caution:** the highest temperature is not suitable for every hair type. If you plan to use this straightener on the boost setting of 240°C please test on a small section of your hair first.

★ **Temperature Lock Function**  
Set the desired temperature by pressing +/- buttons and lock the temperature controls by pressing the '-' button for 2 seconds. A 'padlock' symbol will appear next to the temperature. To unlock the temperature controls, press and hold the '-' button again for 2 seconds.

★ **Hinge Lock for Storage**  
The plates can be shut together for easy storage:  
To lock, push the hinge lock up to the locked position.  
To unlock, pull the hinge lock down to the unlocked position  
NOTE: Do not heat the unit in the locked position.

★ **Memory Function**  
Each time you use the product it will automatically set to the last temperature it was used on.

## 👁 CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

## ♻ ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.

## ➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.  
Consumables are excluded.  
Your statutory rights are not affected.  
If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.  
Replacement parts and accessories are available to buy at  
[www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)

## ➡ SERVICE CENTRE

### United Kingdom

☎ Tel 0800 212 438 (free call mainland UK)  
☎ +44 161 947 3111 (call outside the UK)  
Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK  
[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

☎ Tel 142 951 40  
Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12.  
[www.remington.co.uk](http://www.remington.co.uk)

## 📄 REGISTER ONLINE FOR


£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.  
Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington). You must register within 28 days of purchase.

## Model No. S9600

13/UK/ S9600 T22-0000951 Version 01 /13  
Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.  
Spectrum Brands (UK) Ltd  
Fir Street,  
Failsworth,  
Manchester  
M35 0HS  
[www.remington.co.uk](http://www.remington.co.uk)  
© 2013 SBI  
Background copyright Alexpi, 2013  
Used under license from Shutterstock.com

# REMINGTON®

## PROFESSIONAL SILK STRAIGHTENER

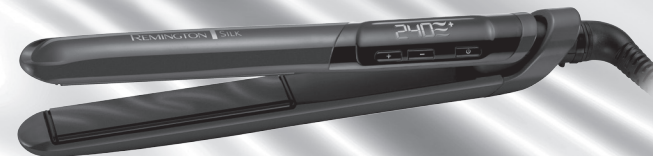

S9600

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery  
Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington).  
You must register within 28 days of purchase.



Thank you for buying your new Remington® product.  
Please read these instructions carefully and keep them safe. Remove all packaging before use.  
Claim your extra 1 year warranty by registering your product online.  
Simply go to: [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington)

## STOP IMPORTANT SAFEGUARDS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 5 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 6 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 7 Do not use the appliance if it is damaged or malfunctions.
- 8 Do not allow any part of the appliance to touch the face, neck or scalp.
- 9 Do not leave the appliance unattended while plugged in.
- 10 Only set the appliance down on a heat-proof surface.
- 11 Do not place the appliance down on any soft furnishings.
- 12 Do not use attachments other than those we supply.
- 13 This appliance is not intended for commercial or salon use.
- 14 Let the appliance cool down before cleaning and storing away.

# SILK STRAIGHTENER



## KEY FEATURES

- 1 Advanced Silk Ceramic coated plates
- 2 On-off switch
- 3 Temperature controls
- 4 Temperature display
- 5 Temperature boost function
- 6 Temperature lock function
- 7 Hinge lock
- 8 Heat resistant storage bag
- 9 3m swivel cord

## PRODUCT FEATURES

- Advanced silk ceramic coated plates for effortless glide and silky-smooth results.
- High heat – 150°C to 235°C with temperature boost to 240°C.
- 110mm longer length floating plates – for even pressure on the hair as you straighten.
- Fast heat up – ready in 10 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.
- 5 year guarantee.

## INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- 2 For extra protection use a heat protection spray.
- \* Hairsprays contain flammable material – do not use while using this product.
- 3 Section the hair prior to styling. Style the lower layers first.
- 4 Plug the product into the mains power supply. Press and hold the on button to switch on.
- 5 When the styler is plugged in but not turned on a lock symbol will show in the display window indicating the styler is in standby mode.
- 6 Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product.

### \* Recommended temperatures:-

Symbol	Temperature	Hair type
	150°C - 170°C	Thin/ Fine, damaged or bleached hair
	170°C - 200°C	Normal, healthy hair
	200°C - 235°C	Thick and difficult to style hair
	Temperature Boost to 240 °C	Quick touch ups for stubborn, hard to style sections

**Caution:** The hottest temperatures should only be used by experienced stylists. If you plan to use this straightener on the boost setting of 240°C please test on a small section of your hair first.

- 7 Recommended temperatures are indicated by the hair strand symbols on the right hand side of the temperature display. '+' increases the temperature '-' decreases the temperature.
- 8 The digital display will stop flashing when the product is ready to use.