

REMINGTON®

EP7030

Use and Care Guide



- A. Full size epilation head
- B. Perfect angle head
- C. Pivoting head
- D. Epilator head release button (on rear)
- E. Detail light
- F. On/off button & 2 speed setting
- G. Precision cap
- H. Massaging cap with Aloe Vera
- I. Foil head
- J. Bikini comb
- K. Power adaptor
- L. Power inlet

Usage Tips

Helpful Hints:

If you are new to epilation systems, you may experience some initial discomfort. This decreases with each use of the product. With cumulative use of the Remington® epilation system, you may find a decrease in both the quantity and the density of hair growth.

Be patient when first using your epilator, as with any new product, it may take a little while to familiarize yourself with the product. Take the time to acquaint yourself with your epilator, as we are confident you will receive years of enjoyable use and complete satisfaction.

Your new epilator is designed to make the removal of unwanted hair as efficient, gentle and easy as possible. The perfect angle cap ensures you are using your epilator at the optimal angle for tweezing. The rotary tweezers catch even the shortest hairs (minimum length .5mm) and pull them out by the root. The hair that grows back should be soft and thin.

Epilating leaves your skin smooth and hair-free for several weeks.

- Using an epilator may cause reddening or irritation of the skin. This is a normal reaction that will quickly disappear. However, you should consult your doctor if the irritation has not disappeared within three days.

- All methods of hair removal from the root can result in ingrown hairs depending on the condition of the skin and hair. Regular exfoliation helps to prevent ingrown hairs. In some cases inflammation of the skin could occur when bacteria penetrate the skin (e.g. when sliding the appliance

over the skin). Thorough cleaning of the epilation head before each use will minimize the risk of infection.

- When using an epilator for the first time it is best to try it on a small area to get used to the process of epilation.
- The optimum length for hair removal is between 2-5mm. Epilation is easier and more comfortable with this hair length.
- Take a warm bath or shower before epilating and exfoliate to remove dead skin cells. This will make your skin more pliable, making the epilation process less uncomfortable.
- Your skin should be clean and dry of creams or oils.

Why Exfoliate?

Exfoliation prevents in-growing hairs. Ingrown hairs occur when the growing hair curls up under the skin instead of growing out like it should. It results in an often painful red bump and possible infections. Rubbing your skin with an exfoliation glove in the shower or bath, or using a dry body brush will help reduce ingrown hairs or infections.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in the shower if the appliance is plugged in.
- Do not place in or drop into water or other liquid.
- Always unplug immediately after using.
- Always unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken tweezer barrel as injury may occur.

- Always store your appliance and cord in a moisture-free area. Make sure your cord is disconnected from the appliance.

- Make sure unit is "off" before plugging in, always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "off", then remove plug from the outlet, then detach power cord from the appliance for storage.
- For household use only.

- The power unit is intended to be correctly oriented in a vertical or floor mount position.

- For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice (Argentina/Chile).

SAVE THESE INSTRUCTIONS

How to Use



This epilator is a wet/dry epilator, it may be used in a bath or shower.

FIRST: CHARGE IT!

Before using your epilator for the first time, it must be fully charged. Plug it in for 4 hours before initial use and every charge thereafter. One full charge allows 40 minutes of cordless usage time.

To Charge Epilator:

- Make sure your epilator is turned off before charging.
- Connect the cord to the epilator, then plug the charging adaptor into the electrical outlet. A charging indicator light will come on.
- Your epilator automatically begins to charge as soon as it is plugged into the charging adaptor that is connected to electrical outlet.
- While charging, the green indictaor light will be illuminated.
- Your epilator will be fully charged when the green indicator light turns off.

- Use the product until the battery is low. This is indicated by a red indicator light. NOTE: Your epilator cannot be turned on while it is charging. Do not attempt to operate your epilator when it is plugged into the charging adaptor.
- Use only the charging adaptor supplied with the epilator.
- Charging should be done at temperatures between 40° and 95°F, or it could decrease the battery's life.
- If the unit is not going to be used for an extended period of time (2-3 months) fully recharge when you want to use it again.

Cleaning and Maintenance

Storage

Never wrap the cord around the epilator, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid twisting, jerking or straining it, especially at cord connections.

Caring For Your Epilator

To ensure long lasting performance of your epilator, clean the head assembly regularly.

CLEANING THE EPILATION HEAD AFTER EACH USE

- Ensure the epilator is turned off and disconnected from the outlet.
- Hold sides of epilator head and lift cap away from tweezing barrel from rear.
- Turn the head assembly upside down.
- Brush the accumulated hair from the tweezers by turning the barrel manually.
- The epilator head may be cleaned under water. To remove epilator head, press release button on rear of epilator to release head. Make sure to remove the epilator heads from the body and submerge ONLY the heads under water.
- For best results, remove the cap and brush the accumulated hairs from the tweezers before rinsing.
- Allow to dry completely before reattaching the cap.

NOTE: The body of the epilator is NOT washable.

DO NOT SUBMERGE IN WATER. YOU MAY ONLY SUBMERGE THE FULL EPILATOR AND SHAVER HEADS AFTER THEY HAVE BEEN REMOVED FROM THE BODY.

CAUTION:
Epilator head: Suitable for cleaning under water.

Epilator body: **NOT SUITABLE FOR CLEANING UNDER WATER.**

TO REMOVE RESIDUE
To remove residue from the stainless steel tweezers of the curved epilator head, dampen a swab with alcohol. Gently run the swab over the tweezers until the residue has been removed.

CAUTION: Make sure that the cotton swab is not soaked in alcohol as this may damage the epilator head.

NOTE: This appliance does not contain any user-serviceable parts.

Low Battery Indicator:

Your epilator will alert you when the battery charge is running low. The red indicator light will be illuminated to indicate low battery. When the low battery indicator is illuminated, you must return to charging mode.

Wet Use:

Ensure the skin is moist. For added comfort, shower gel can be added to the skin during use. It is best to try different methods to determine your preferred method of epilation.
NOTE: After each wet use with shower gel, clean the epilator under running water.

Dry Use:

Before epilating make sure that the skin is clean, dry and free from creams or oils. Rub the skin in the area to be epilated to lift short hairs to optimise hair removal.

Operating Instructions:

This epilator operates cordless only.

- Before epilating, make sure that your skin is clean, dry and free from creams or oils.
- Rub the skin in the area to be epilated to lift short hairs to optimize hair removal.
- Turn the epilator on to the desired speed. Low is recommended for fine hair and high is recommended for coarse hair or stronger hair growth.
- Using your free hand, hold the skin taut to make the hairs stand upright.
- Position the epilator flat so that the stainless steel discs are at 90° angle and flat against the skin. This is your optimal hair removal angle. The Remington® epilation head is designed with a staggered tweezer system to ensure maximum tweezing coverage within the area of hair removal.



Using small circular motions, slowly and gently glide the epilator over the skin.

This circular motion is the most effective method and makes the process more comfortable. Alternatively, guide the epilator in a slow, continuous movement against the hair growth. Either method, it is important to hold the skin taut, especially in delicate skin areas.

- Repeat within each area until all unwanted hair is removed.
- After epilating, turn the epilator off.

Pivoting Head:

- The epilator features a pivoting head to better adapt to your body curves for more comfort and effective epilating.

 
Detail Light:

- The detail light is incorporated with the switch to give you the best condition to remove even the finest hair.

Shaver Head

The shaver head provides a close shave for sensitive areas.

- Ensure the epilator is switched off.
- Press the head release button and remove the epilator head.
- Attach the shaver head until it clicks into place.
- Hold the shaver head at a 90° angle to the skin and move against the direction of hair growth.



Precision Cap:

For detailed hair removal use the precision epilator cap.

- Ensure the epilator is turned off.
- Remove full size epilator cap or massaging cap.
- Place the precision cap in the appropriate slots at the top of your epilator.
- Gently press the precision cap into place until you hear a "click."

 
Massaging Cap With Aloe Vera:

For gentler epilation, the massaging cap has flexible elements infused with aloe vera for a soothing experience.

- Ensure the epilator is turned off.
- Remove perfect angle or precision cap.
- Place the massaging cap in appropriate slots at the top of your epilator.
- Gently press the massaging cap into place until you hear a "click".

Arm/Leg Epilation

Epilate from the lower arm/leg and slowly move upwards. To epilate behind the elbow/knee, keep the arm/leg straight to stretch the skin.



Underarms and Bikini

Please be aware that these areas are particularly sensitive. However this sensitivity will reduce after repeated usage. The precision cap is recommended for these particularly sensitive areas.



For more comfort, ensure that the skin is held taut and that the hair is at the optimum length of 2-5mm. If it has been

an extended period of time since you have removed hair, trim the hair with a Remington® bikini trimmer or cosmetic trimmer before epilation.

When epilating the underarm area, raise your arm so that the skin is stretched. Guide the epilator in circular movements. Avoid using substances which may cause irritation, such as deodorants, directly after epilation (preferably overnight).



Facial Epilation

Epilate unwanted facial hair with the precision cap. Place epilator at a 90° angle to the skin and move the epilator head in a circular motion.

NOTE: Do not use for removing hair from the eyebrow.

Exfoliating Glove

- Use the exfoliating glove in the bath or shower to remove dead skin cells from the surface and help prevent ingrowing hairs.
- Wet the glove & your skin with warm water.
- Apply a few drops of liquid soap or exfoliating scrub directly onto the glove.
- Using gentle pressure, massage your skin in small circular motions.
- Avoid sensitive areas such as near the eyes.

Caution:

- For your protection your epilator may slow down or even stop if pressed too firmly against the skin.
- Do not use the epilating head on irritated skin or skin with varicose veins, rashes, spots, moles or wounds

without consulting a doctor. People with reduced immune response e.g. during pregnancy, or people who suffer from diabetes mellitus, hemophilia or immuno-deficiency should also consult their doctor before using this product.

- For hygiene reasons do not let another person use your epilator. It is recommended for use by one person only.



© Registered Trademark of Spectrum Brands, Inc.

© 2014 Spectrum Brands, Inc. 11/14 Job#11044-00

Spectrum Brands, Inc. Middleton, WI 53562

EP7030: Características eléctricas

110V: 100-240V 50/60Hz 200mA

220V: 100-240V 50/60Hz

T22-0003035