

REMINGTON

REMINGTON

BEARD & STUBBLE TRIMMER



MB4555

Model No. MB4555

11/UK/MB4555 Version 02/11 Part No. T22-0000570
REMINGTON is a Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str.9
73479 Ellwangen
Germany
www.remington-europe.com



© 2010 SBI

This product is not suitable for use in bath or shower.



HT382-K60-01

REMINGTON

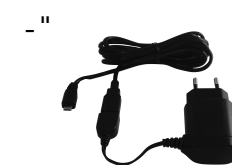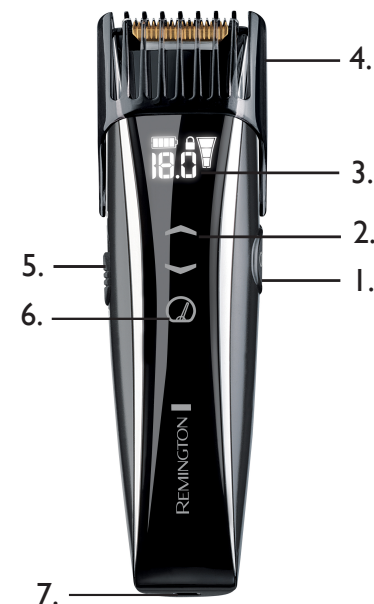



REMINGTON

REMINGTON® SERVICE HOTLINE



United Kingdom

+44 0800 212 438 (free call)

Spectrum Brands (UK) Limited

Fir Street

Failsworth

Manchester

M35 0HS United Kingdom

www.remington.co.uk

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® appliance. Please read the instructions for use carefully and keep in a safe place for future reference.



CAUTION

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



DESCRIPTION

1. On/Off Switch
2. Touch screen area
3. Digital display for:
 - Battery level
 - Length setting (mm)
 - Lock / unlock
 - Speed level
4. Motorised comb
5. Locked/ Unlocked switch
6. Tri Boost System
7. Micro USB port
8. USB cable
9. Adaptor
10. Storage pouch



GETTING STARTED

■ CHARGING YOUR TRIMMER

Before using your trimmer for the first time, charge for 14-16 hours.

- ▶ Ensure the product is switched off.
- ▶ Connect the charging adaptor to the product and then to the mains. The charging indicator will light up.
- ▶ Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.



ENGLISH

To preserve the life of your batteries, let them run out every six months then recharge for 14 - 16 hours.

■ CHARGING VIA STANDARD ELECTRICAL SOCKET

- ▶ Ensure the product is switched off.
- ▶ Connect the charging adaptor to the product and then to the mains.
- ▶ When charging the digital display will illuminate.
- ▶ Allow 90 minutes for a complete charge.

■ USB CHARGING VIA PC

- ▶ Ensure the product is switched off.
- ▶ Connect your USB cable to the USB port on the PC.
- ▶ Connect the USB cable to your trimmer.
- ▶ When charging the digital display will illuminate.
- ▶ Allow 90 minutes for a complete charge.

■ CORDED USE

- ▶ Connect the charging adaptor to the product and then to the mains.
- ▶ When the cord is connected to the mains, a digital display will be displayed on the trimmer.

◆ CAUTION: Extended mains only use will result in the reduction of the battery life.

◆ WARNING: The trimmer can not be operated in corded mode while connected to a PC via the USB port.

■ CORDLESS USE

- ▶ When the unit is switched on and fully charged, the product can be used in cordless mode for up to 40 minutes.



HOW TO USE

■ BEFORE YOU BEGIN

Always comb your beard or moustache with a fine comb before you start trimming.

■ USING THE TOUCH SCREEN

The trimmer comb can be adjusted to give you 175 different trim lengths, with 0.1mm increase, simply by pressing the arrows on the touch screen. Press and hold the arrow up to increase the cutting length and down to decrease it. The comb will move to reach each setting, the length will change slowly and then speeds up as you hold the up/down arrow, and the setting number will appear on the digital display.

- ◆ Note: Trimmer comb must be attached to the groomer in order to use the hair length selector. To achieve 0.4mm, the comb must be removed.

■ TO THIN AND TAPER THE BEARD/MOUSTACHE (DIAGRAM 1)

- ▶ Use the touch screen to set the trimmer comb to the desired length setting. The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting
- ▶ Turn the unit on.
- ▶ Place the flat top of the trimmer comb against the skin.
- ▶ Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- ▶ If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush off.

■ TO DEFINE THE BEARD/MOUSTACHE LINE

- ▶ Remove the trimmer comb attachment.
- ▶ Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin.
- ▶ Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.
- ▶ Shape as desired.

■ TRIMMING EDGE OF SIDEBURNS (DIAGRAM 2)

- ▶ Hold the trimmer with the trimmer blade facing you.
- ▶ Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.
- ▶ Shape as desired.

■ TRIMMING THE NAPE OF YOUR NECK

Note: You will need a hand mirror for this operation if performing it alone.

- ▶ Remove the trimmer comb attachment.
- ▶ Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- ▶ Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- ▶ Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

👍 Tips for best results

- ▶ Beard, moustache and sideburn hairs should be dry.
- ▶ Avoid using lotions before using your trimmer.

ENGLISH



CARE FOR YOUR PERSONAL GROOMER

CLEANING AND MAINTAINING YOUR TRIMMER

AFTER EACH USE

- ▶ Turn the trimmer off.
- ▶ Remove trimmer comb attachment and cutter assembly.
- ▶ Gently brush the remaining hairs away from the trimmer comb and trimmer blade.
- ▶ Do not rinse the cutter assembly under water

CLEANING CAUTIONS

- ▶ Only the trimmer comb attachment and trimmer blade may be removed from the product for cleaning.
- ▶ Cleaning should be done with a soft brush, such as the brush supplied with the product.
- ▶ This trimmer is not washable.
- ▶ Do not rinse under water.
- ▶ Do not use harsh or corrosive cleaners on the units or their blades.
- ▶ Do not submerge in water as damage will occur.

STORAGE

- ▶ Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- ▶ Do not wrap the cord of the charging adaptor around the appliance.

CLEANING

- ▶ Ensure the shaver is switched off and unplugged from the mains outlet.
- ▶ At regular intervals, put a drop of lubricant onto the trimming frame / head.

ENGLISH

REMINGTON



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged into a power outlet.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained from an International Service Centre.
- ▶ Use and store the product at a temperature between 15°C and 35°C.
- ▶ Only use the parts supplied with the appliance.

5Å



PROTECT THE ENVIRONMENT

This appliance contains an environmentally friendly rechargeable Nickel Metal Hydride battery. Do not dispose of the appliance or the battery in the household waste as restrictions exist in most countries. Adhere to national or local regulations for collection and disposal that apply to your specific location. In case you are required to remove the battery from the appliance for separate disposal see the instructions in the 'Battery Removal' section on how to open the housing.

⚠ **CAUTION:** Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



For further information on recycling see www.remington-europe.com



BATTERY REMOVAL

The battery must be removed from the appliance before it is scrapped.
To remove the battery for safe disposal, please follow the instructions below:

- ▶ Turn the personal groomer on and discharge all remaining power.
- ▶ Remove the comb attachment.
- ▶ Detach the blade head.
- ▶ Remove the head clip using a screw driver.
- ▶ Using a screwdriver carefully pull out the top housing.
- ▶ Unscrew the six screws on the motor bracket then lift out the bottom housing.
- ▶ Remove the upper circuit board.
- ▶ Cut the motor connecting wires and remove the motor bracket, front portion of motor bracket, comb rail, middle motor & gear chains.
- ▶ Disconnect the batteries from the lower circuit board by solder iron then remove.
- ▶ The batteries are to be disposed of safely.



ENGLISH



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to the faulty material or workmanship for a 3 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Centre in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and the cutters which are consumable parts. Also, not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.

