

REMINGTON®

TRAVEL FOIL SHAVER



TF70


Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors. 
- 3 **WARNING:** Keep the appliance dry.
- 4 Keep the power cord and plug away from heated surfaces.
- 5 Make sure the power plug and cord do not get wet.
- 6 Do not leave the appliance unattended while plugged in, except when charging.
- 7 Do not use attachments other than those we supply.
- 8 Do not twist or kink the cable, or wrap it round the appliance.
- 9 Do not use the appliance if it is damaged or malfunctions.
- 10 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 11 Do not plug or unplug the appliance with wet hands.
- 12 Store the product at a temperature between 15°C and 35°C.
- 13 For use on facial hair only. Not intended for shaving the hair on your head.
- 14 This appliance is not intended for commercial or salon use.

KEY FEATURES

- 1 On/Off switch/Travel lock
- 2 Foil screens
- 3 Cutter assembly
- 4 Hairpocket
- 5 Cleaning brush
- 6 Battery compartment



GETTING STARTED

- It is recommended that you use your new shaver daily for up to two weeks to allow time for your beard and skin to become accustomed to the new shaving system.
- Run time with new batteries is up to 60 mins.

INSTRUCTIONS FOR USE

- Make sure the batteries are correctly placed in the shaver.
- Switch the shaver on by rotating the travel lock 180 degrees so that it clicks into place with the head of the travel lock positioned directly under the base of the shaver.

SHAVING

- Stretch the skin with your free hand so the hairs stand upright.
- Hold the shaving head so that the foils touch your face.
- Use short linear strokes.

Tips for best results

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid irritation and damage to the foil heads.

CLEANING AND MAINTENANCE

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off
- ⚠ **Caution:** not suitable for cleaning under water.

DRY CLEANING

- Pull the foil assembly up to remove from the hair pocket.
- Gently tap out the excess hair shavings and use a cleaning brush to clean out the hair pocket if necessary.
- The cleaning brush can be found stored in the back of the shaver unit. Simply slide this out to use. When finished with slide the brush back into the housing until it clicks into place.
- Do not use a brush to clean the shaving foils.
- Replace the head assembly.
- Lubricate the teeth of the trimmer every six weeks with a drop of sewing machine oil.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. TF70

14/UK/TF70 T22-0002478 Version 10 / 14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI