

REMINGTON®

Volume & Curl



AS7051

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
 - Never leave the appliance unattended when it is connected to the power supply.
 - Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.

- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|---|-----------------------------------|
| 1. 1000W power handle | 6. Speed/ heat setting switch |
| 2. 50mm thermal mixed bristle brush | 7. Cool shot |
| 3. 30mm retractable bristle curling brush | 8. Attachment lock/release button |
| 4. 21mm thermal mixed bristle brush | 9. Heat proof storage bag |
| 5. Concentrator | 10. Swivel cord |
-

INSTRUCTIONS FOR USE

- Wash and condition your hair as normal.
 - Squeeze out excess moisture with a towel and comb through.
 - Hairsprays contain flammable material – do not use while using this product.
 - Section the hair prior to styling. Style the lower layers first.
 - Select your attachment before you turn on the appliance.
 - Attachments can be connected to the power handle by aligning the arrow above the attachment lock/release button with the power handle and clicking to the left to lock.
1. Plug the product into the mains power supply.
 2. The product can be switched on by sliding the heat/speed setting switch to position **⌘**
 3. Dry roots completely and dry length 90% dry, ready for styling.
 4. To dry hair use the concentrator attachment.
 5. For smaller and medium curls use the 21mm thermal bristle brush. Best for use on short and medium length or layered hair.
 6. To create medium to loose curls use the 30mm retractable brush.
 7. The 50mm thermal volume brush adds root volume and fullness. it can also be used to fix the ends of long hair and smooth out natural curls.
 8. Select the desired temperature and speed setting using the switch on the handle.

- To increase the setting slide the heat/speed setting switch to position 
- For all brush attachments: Take a section of hair and place the ends around the brush. Rotate the styler allowing the hair to wrap around the barrel of the brush drying and styling as you go.
- Hold the styler in the hair for 10-20 seconds then unwind the hair by rotating the styler in the opposite direction.
- Allow the hair to cool before styling.
- Let the attachments cool before removing.
- To remove the attachment press the attachment lock/release button, twist the attachment slightly to the right and pull attachment away from the main housing.
- After use, turn the appliance off and unplug.
- Let the appliance cool down before cleaning and storing away.

Cool shot

To set your style and add shine use the cool shot function. To operate press the cool shot button down and slide forward. Slide back to turn off.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Don't use harsh or abrasive cleaning agents or solvents.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: www.remington.co.uk/productregister

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

www.ie.remington-europe.com

REGISTER ONLINE

Register online for an EXTRA year guarantee*.

Visit www.remington.co.uk/productregister

*You must register within 28 days of purchase.



Model No. AS7051

18/UK/ AS7051 T22-7000659 Version 11 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2018 Spectrum Brands, Inc.