

# REMINGTON®

EST. NEW YORK 1937




## **PROluxe You Adaptive Styler CI98X8**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

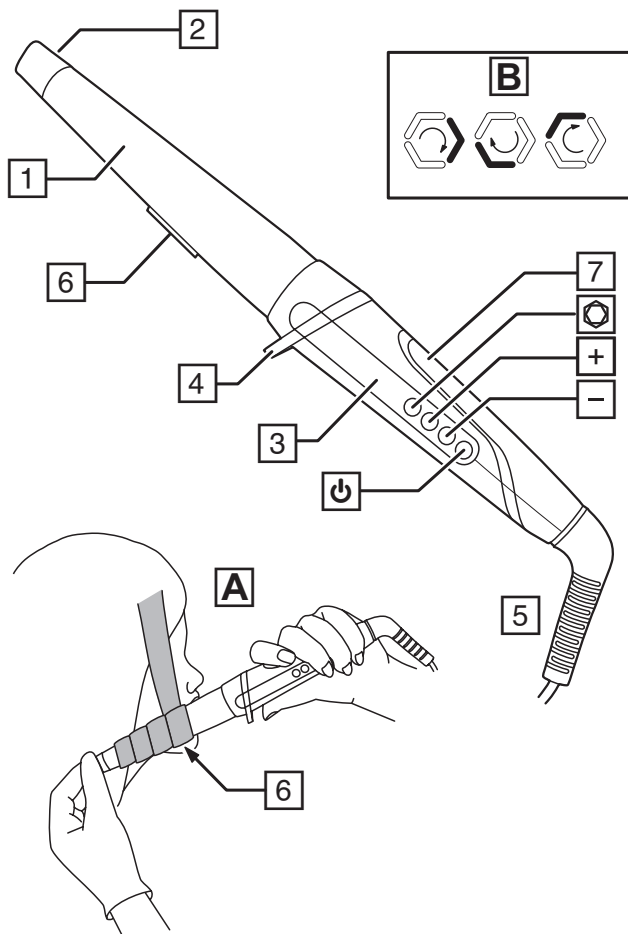


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**WARNING: This appliance is hot. Keep out of reach of children at all times.**

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
  - Never leave the appliance unattended when it is connected to the power supply.
  - Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.

- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- CAUTION: Always remove the appliance from the storage pouch/sleeve before heating and allow it to fully cool before placing it back.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

- |   |                            |
|---|----------------------------|
| 1. 19-32mm Advanced ceramic coated barrel | Controls:                  |
| 2. Cool tip                               | ⊗ StyleAdapt on/off button |
| 3. Display                                | ⏻ On/off button            |
| 4. Stand                                  | +/- Temperature functions  |
| 5. Swivel cord                            | Accessories (not shown):   |
| 6. StyleAdapt sensor                      | • Styling glove            |
| 7. StyleAdapt indicator                   | • Styling mat              |
- 

## ADDITIONAL FEATURES

---

- Fast heat up—ready to use in 30 seconds.
  - Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
  - Multivoltage: for home or abroad. At 120V times and temperatures may vary.
  - Styling mat - for placing your styler onto between uses.
- 

## INSTRUCTIONS FOR USE

---

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.
- Hairsprays contain flammable material – do not use while using this product.
- Section the hair prior to styling. Style the lower layers first.
- Use the styling glove to avoid accidental burns.

1. Plug your styler into the mains power supply.
2. Press the on (⏻) button to switch on.
3. When it is ready to use, your styler will beep three times and the display will stop flashing.

### StyleAdapt Mode

1. When first switched on your styler will be in StyleAdapt mode 1. The StyleAdapt indicator will be fully lit up and **StyleAdapt 1** will be shown on the display.
2. Working on one section at a time, hold the handle with the cool tip facing down and wrap a section of hair around the barrel.
  - **IMPORTANT:** When wrapping ensure that hair is wrapped around the StyleAdapt sensor (Fig. A).
3. Wait 10-20 seconds for your curl to form.
4. Unwind the hair to release the curl.
5. Repeat this around the head to create as many curls as desired.
  - Tip: let the curls cool before styling and brushing; this will help to prolong the curls.
6. After styling each section, the StyleAdapt indicator will spin (fig. B) indicating that your styler is learning about your hair and adjusting the barrel temperature to a heat that is personalised to you. The temperature changes are not shown on the display but happen quickly and automatically during styling.
  - If you are sharing your styler select StyleAdapt mode 2. This ensures that when the styler is used by someone else, it doesn't change what it has learned about your hair. To select, press the ⏻ button until **StyleAdapt 2** is shown on the display.


### Manual Mode

1. To override the StyleAdapt mode and use as a standard styler, press the ⏻ button several times until the display shows the temperature (e.g. 160°C) and the StyleAdapt indicator goes off. Note that in manual mode, your styler will no longer be learning about your hair and adapting the heat.
2. Select the appropriate temperature for your hair type using the "+" and "-" temperature controls on the side of the product. Start styling on lower temperatures first.
3. The "+" button will increase the temperature and the "-" button will decrease the temperature.


### Recommended Temperatures

Temperature	Hair type
130°C - 160°C	Thin / fine, damaged or bleached hair
170°C - 200°C	Normal, healthy hair
200°C - 210°C	Thick and difficult to style hair

**Caution:** the hottest temperatures should only be used by experienced stylists.

- Working on one section at a time, hold the handle with the cool tip facing down and wrap a section of hair around the barrel.
- Wait about 10-20 seconds for the curl to form.
- Unwind the hair and release the curl.
- Repeat this around the head to create as many curls as desired.
- To re-activate StyleAdapt mode press the  button until **StyleAdapt 1** is shown on the display and the StyleAdapt indicator is illuminated. Your styler will now be learning about your hair and adapting the heat again.
- After use, press and hold the off button for two seconds to turn off then unplug the appliance.

### Temperature Lock Function

- Set the desired temperature using the **+** and **-** buttons then lock the settings by pressing the **"—"** button for 2 seconds. The  symbol will appear on the temperature display.
- To unlock the temperature setting, press and hold the **"—"** button for 2 seconds.

### Memory Function

- Each time you use your styler it will automatically set itself to the last setting used.

---

## STORAGE, CLEANING AND MAINTENANCE

---

### Let the appliance cool down before cleaning and storing away

- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### United Kingdom

 0800 212 438 (free call mainland UK)


Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

### Ireland

 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

**Ref. No. CI98X8**

**Type No. CI21AV**

21/UK/ CI98X8 T22-7001890 Version 02 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[remington-europe.com](http://remington-europe.com)

© 2021 Spectrum Brands, Inc.