

# REMINGTON®



## AIR3D Dryer



**D7779**




[www.remington.co.uk](http://www.remington.co.uk)

**Register online for £10,000 prize draw**

**EXTRA year guarantee FREE rewards gallery**

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.



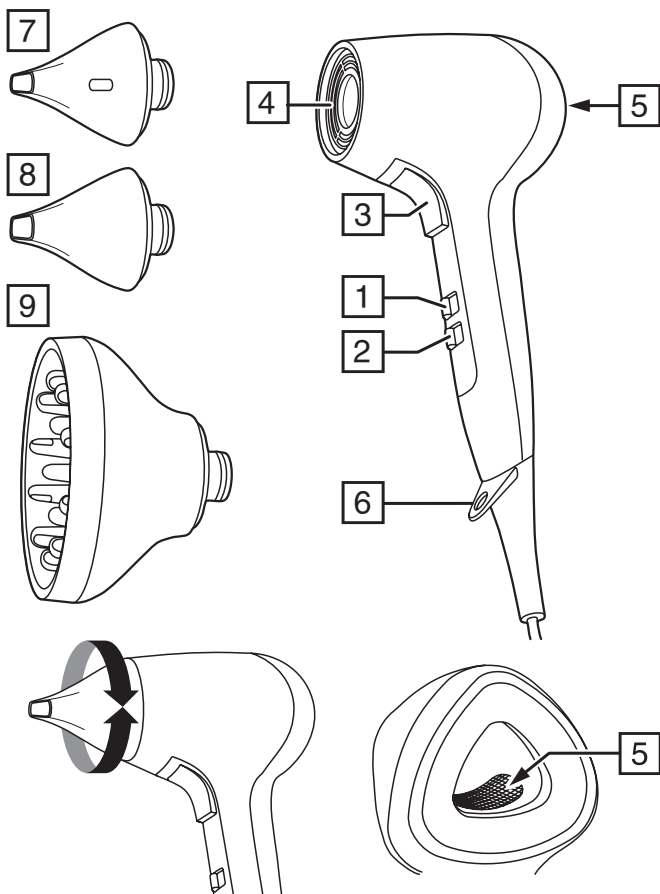


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**WARNING: This appliance is hot. Keep out of reach of children at all times.**

---

## IMPORTANT SAFEGUARDS

---


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.

- Keep direct airflow away from eyes or other sensitive areas.
- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

---


## PARTS

---

- |   |   |
|---|---|
| 1. Heat setting switch (I)  | 7. 7mm concentrator for precision styling |
| 2. Speed setting switch (0,  ) | 8. 11mm concentrator for faster drying    |
| 3. Cool shot button   | 9. Diffuser                               |
| 4. Ceramic back-lit grille  | 10. Mat (not shown)                       |
| 5. Inlet grille   | 11. Storage bag (not shown)               |
| 6. Hang up loop   |   |
- 

## INSTRUCTIONS FOR USE

---

- Wash and condition your hair as normal.
  - Squeeze out excess moisture with a towel and comb through.
  - Hairsprays contain flammable material – do not use while using this product.
1. Plug your hairdryer into the mains power supply.
  2. Switch your hairdryer on and select the desired speed setting (low **1** or high **2**) using the speed selector switch (0, ). The number below the switch will light up to show you which setting you have selected. The back-lit grille will light up white when you switch the hairdryer on.
  3. Select the desired heat setting (low **1**, medium **2** or high **3**) using the heat selector switch (I). The number above the switch will light up to show you which setting you have selected.
  4. Press and hold the cool shot button to direct cool air onto your hair to help set your style. The back-lit grille will illuminate blue when you use the cool shot feature.
  5. Between uses, place your hairdryer down onto the supplied mat.

6. After use, turn your hairdryer off and unplug it.
7. Let your hairdryer cool down before cleaning or storing away.

### Fitting attachments

1. Push the desired attachment onto the front of your hairdryer.
2. Concentrators can be rotated as required.

---

## TIPS

- For fast drying use high heat / high speed.
- To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- To enhance natural curls and waves, attach the diffuser to the hairdryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the hairdryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat / low speed setting.

**Caution:** Do not use the diffuser on the high heat (3) setting.

- To set your style, press the cool shot whilst styling.

---

## CLEANING AND MAINTENANCE

To maintain peak product performance and to prolong motor life, it is important to regularly clean the inlet grille.

- Unplug the appliance and allow it to cool.
- Use a lint free cloth or soft brush to gently remove dust and debris from the grille.

---

## RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

disposed of with unsorted municipal waste, but recovered, reused or recycled.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.ie.remington-europe.com](http://www.ie.remington-europe.com)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.

## **Model No. D7779**

18/UK/ D7779 T22-0005343-C Version 06 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2018 Spectrum Brands, Inc.