

REMINGTON®

Style Series Foil Shaver











F5

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

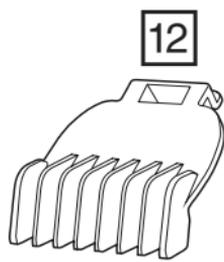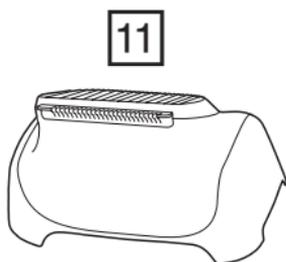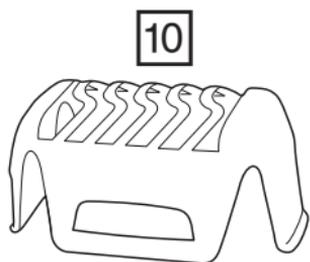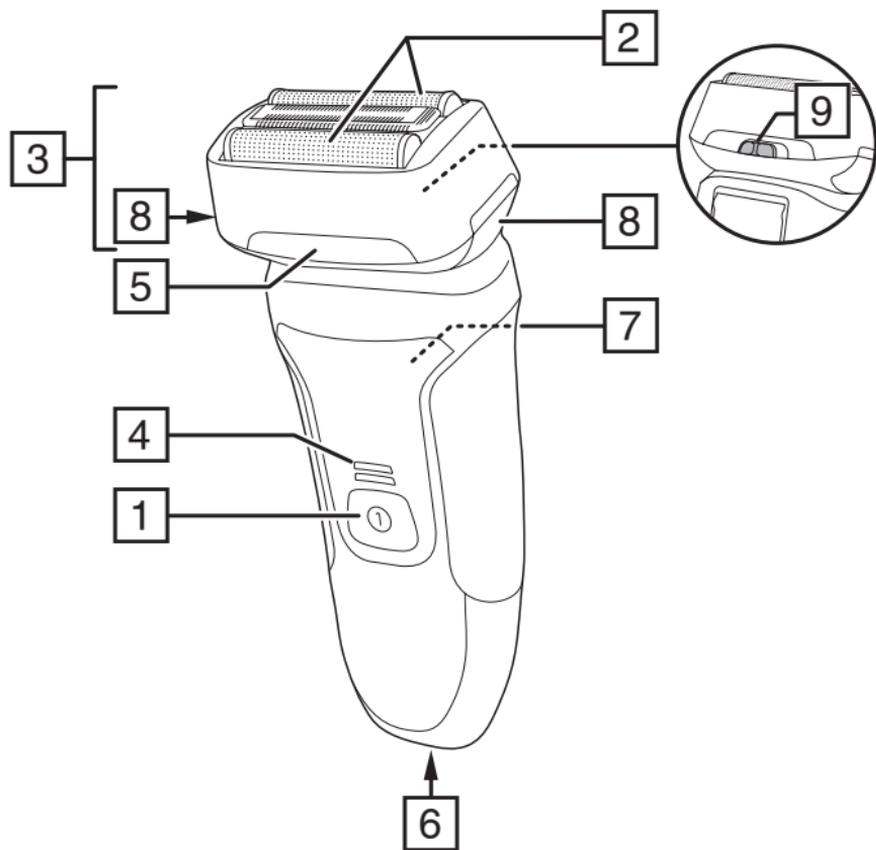

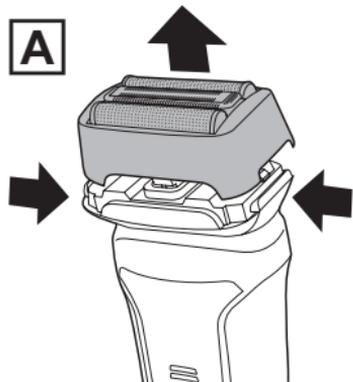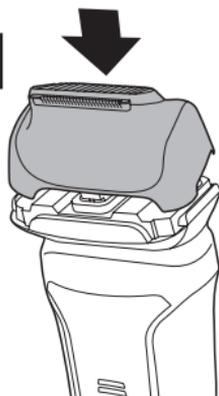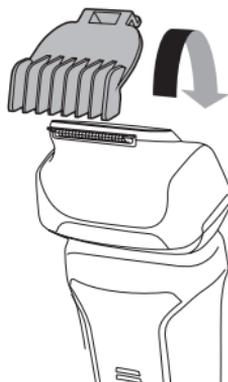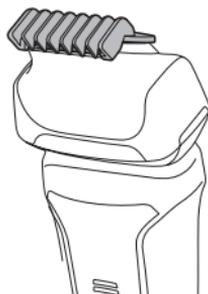A**B****C****D****E****F****G**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  Suitable for use in a bath or shower.
- **WARNING:** Detach the shaver from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-0510K (UK).
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|------------------------------|------------------------------|
| 1. On/off switch | 9. Head lock button |
| 2. Foil screens | 10. Stubble head guard |
| 3. Cutter assembly | 11. Beard trimmer attachment |
| 4. Charging indicator lights | 12. Guide combs (x 6) |
| 5. Hairpocket | <i>Not shown:</i> |
| 6. Power port | 13. Adaptor |
| 7. Pop-up trimmer | 14. Cleaning brush |
| 8. Head release buttons | |

GETTING STARTED

CHARGING YOUR APPLIANCE

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- The adaptor automatically adjusts to a main voltage between 100V and 240V.
- Connect the shaver to the adaptor and then to the mains.

CHARGING INDICATOR LIGHTS

Charge Level	Lights
Charging	The lights will come on one after the other then go off in a repeating pattern.
Fully Charged	Both lights will come on for 5 minutes then go out.
Low charge/charging required	The bottom light will flash rapidly.
Battery capacity 50% or higher	Both lights will come on.
Battery capacity 50% or lower	The bottom light will come on.

- Run time from fully charged is up to 50 mins.
- Charge time from empty is 2 hours.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

It is recommended that you use your new shaver daily for up to two weeks to allow time for your beard and skin to become accustomed to the new shaving system.

- Make sure your shaver is properly charged.
- Switch the shaver on by pressing the on/off switch.

SHAVING

- Stretch the skin with your free hand so the hairs stand upright.
- Hold the shaving head so that the foils touch your face.
- Use short linear strokes.

TRIMMING

- Slide up the trimmer release button to activate the trimmer.
- Hold the trimmer at a right angle to your skin.
- To retract the trimmer, push the top rear of the trimmer down until it locks under the trimmer release button.

STUBBLE LOOK

Fit the stubble head guard to your shaver for a 3-day stubble look.

HEAD LOCK

Normally, the head pivots freely but its movement can be restricted by sliding the head lock button to the locked  position.

BEARD TRIMMER ATTACHMENT

Use the beard trimmer without a comb fitted to trim hair close to the skin. This will trim hair to 1 mm. Holding the blades at right angles to the skin will trim hair to 1.5 mm.

To attach a comb to the beard trimmer

1. Press the two head release buttons and remove the foil head (Fig A).
2. Fit the beard trimmer (Fig B).
3. Hook the front edge of the selected guide comb over the beard trimmer blade (Fig C).
4. Press the comb downwards until it clicks into place (Fig D).

TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid irritation and damage to the foil heads.

CLEANING AND MAINTENANCE

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

DRY CLEANING

- Press the head release buttons and pull the head upwards (Fig E).
- Gently tap out the excess hair shavings and use a cleaning brush to clean out the hair pocket if necessary (Fig F).
- Note: Do not use a brush to clean the shaving foils.
- Replace the head assembly.

WASHABLE CLEANING

- Press the head release buttons and pull the head upwards (Fig E).
- Do not use the brush to clean the foils but blow the shavings out or rinse in running water (Fig G).
- Use the cleaning brush to sweep any loose hairs from the cutter and trimmer. Rinse in running water.
- Replace the head assembly.
- Lubricate the teeth of the trimmer every six weeks with a drop of sewing machine oil.

REPLACING THE FOILS AND CUTTERS

- To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced regularly.

Signs that your foil/s and cutter/s need replacing:

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL/CUTTERS

- Press the head release buttons and pull the head upwards.
- Fit the new head assembly over the hair pocket and press down to click into place.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
 - The appliance must be disconnected from the supply mains when removing the battery.
1. Pry off the two decorative side panels.
 2. Unscrew one screw from the bottom of the shaver and remove the bottom panel.
 3. Remove the foil assembly and unscrew the 4 screws underneath it.
 4. Remove the two E-rings one on each side of the head then lift off the upper head assembly.
 5. Unscrew the 2 screws below the upper head assembly then lift the rest of the head off the body.
 6. Pry off the upper decorative panel to expose 2 screws. Remove the screws.
 7. Remove the front panel to expose 4 screws. Remove the 4 screws then remove the back housing.
 8. Lift out the battery and printed circuit board assembly.
 9. Disconnect the battery from the circuit board.
 10. Dispose of the battery safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: www.remington.co.uk/productregister

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 Tel 0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

IRELAND

 Tel 142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
www.ie.remington-europe.com

REGISTER ONLINE

Register online for an EXTRA year guarantee*.

Visit www.remington.co.uk/productregister

*You must register within 28 days of purchase.

Ref. No. F5000

Type No. F10A

18/UK/ F5000 T22-7000445 Version 10 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2018 Spectrum Brands, Inc.