

REMINGTON®

EST. NEW YORK 1937




All In One Grooming Kit PG6020

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

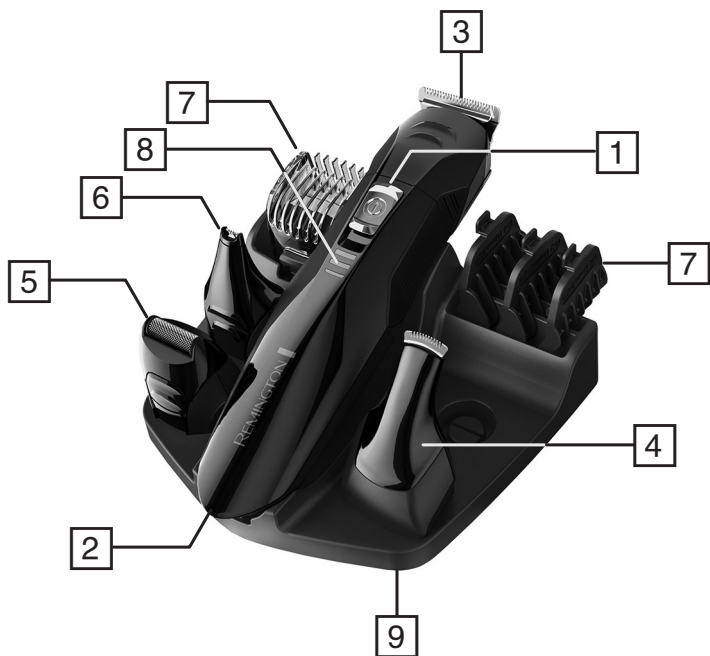

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-04701U or SW-047010BS.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|----------------------|-------------------------------|
| 1. On/off switch | 6. Nose, ear, eyebrow trimmer |
| 2. Groomer | 7. Attachment guide combs |
| 3. Wide trimmer | 8. Charging indicator |
| 4. Precision trimmer | 9. Stand |
| 5. Mini foil shaver | • Adaptor (not shown) |
-

GETTING STARTED

CHARGING YOUR APPLIANCE

- Before using your groomer for the first time, charge for 14-16 hours.
 - Ensure the product is switched off.
 - Place your groomer into the stand, connect the adaptor to the product and then to the mains.
 - The charging indicator will illuminate.
 - The charging indicator will remain illuminated once fully charged.
 - Your appliance cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
 - Fully recharge your appliance for 16 hours when you would like to use it again.
 - To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.
-

INSTRUCTIONS FOR USE

ATTACHING AND REMOVING GUIDE COMBS

To attach:

With the trimmer blade facing away from you, slide the guide comb on top of the trimmer blade and click into position.

To remove:

With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

BEFORE YOU BEGIN

- Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the wide trimmer blade.
- Place the hair length attachment on the trimmer blade, select the desired length and switch on.

- Start trimming under the chin, following the jawbone line. Work toward the ear and upper beard line using an upward motion.

TO TRIM EDGE OF BEARD OR MOUSTACHE

- Attach the wide trimmer blade.
- Hold the groomer with the cutting blade facing you.
- Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/moustache line.

TO TRIM SIDEBURNS

- Hold the groomer with the cutting blade facing you.
- Use a small comb to lift the hairs. Hold the comb at the desired beard or moustache length.
- Move the groomer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

TRIMMING THE NAPE OF YOUR NECK

- Attach the wide trimmer blade.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

TO REMOVE HAIR FROM NOSE AND EAR

- Attach the nose, ear, eyebrow attachment.
- Insert the groomer's cutting unit gently into the nostril or ear.
- Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

TO REMOVE HAIR FROM EYEBROWS

- Attach the nose, ear, eyebrow attachment.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely lower onto the skin and move over desired area.

TIPS FOR BEST RESULTS

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.

ATTACHING AND REMOVING THE TRIMMER ATTACHMENTS

Note: Always ensure the groomer is switched off before changing any attachments.

To remove, hold the groomer with one hand and turn the trimmer head anti-clockwise with the other.

To attach, hold the groomer with one hand and turn the trimmer head clockwise with the other.

USING THE PRECISION TRIMMER ATTACHMENT

- Fit the precision trimmer attachment
- Hold the precision trimmer perpendicular to the skin and apply gentle pressure.
- Edge and shape facial hair as desired.

USING THE MINI FOIL SHAVER

- Hold the groomer so the mini foil shaver gently touches your face.
- Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright making it easier to shave.
- Note: The mini foil shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

CARE FOR YOUR GROOMER

- Care for your product to ensure a long lasting performance. We recommend that you clean your groomer after each use.
- The easiest and the most hygienic way to clean the groomer is by rinsing the product head after use with warm water.

AFTER EACH USE

- Rinse the accumulated hair from the cutters and shake off excess water, alternatively, use a small soft brush.
- Gently tap on a flat surface to remove hair particles, and brush the remaining hairs away.
- Place one or two drops of cutter oil or sewing machine oil on the blades.
- Turn the clipper on to distribute the oil evenly, wipe off any excess oil.
- Wipe the main unit with a damp cloth and dry immediately.

BATTERY REMOVAL

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Ensure that the battery is fully discharged. To do this, operate the device until it stops.
 2. Pry the upper housing from the product with a flat head screwdriver. This will expose the batteries.
 3. Using wire cutters, clip the wires leading to the batteries.
- The battery must be disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the device once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk
productsupport@Remington.co.uk

IRELAND

 142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>
productsupport@Remington.co.uk

Ref. No. PG6020

Type No. PG6020

21/UK/ PG6020 T22-7001904 Version 01 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2021 Spectrum Brands, Inc.