REMINGTON®

Rotary Shaver



PR1330

 \mathcal{O} www.remington.co.uk

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.















Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- WARNING: Keep the appliance dry.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- Do not leave the appliance unattended while plugged in.
- · Keep the power plug and cord away from heated surfaces.
- Make sure the power plug and cord do not get wet.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- 1. On/off switch
- 2. Pivoting head and cutter assembly
- 3. Flexing heads
- 4. Hairpocket
- 5. Detail trimmer

- 6. Trimmer release button
- 7. Power port
- 8. Power cord (not shown)
- 9. Cleaning brush (not shown)
- 10. Head guard (not shown)

INSTRUCTIONS FOR USE

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system. The shaver automatically adjusts to a mains voltage between 100V and 240V.

SHAVING

Note: this product is for corded use only.

- 1. Connect the shaver to the power cord and then to the mains.
- 2. Slide the power switch to turn on.
- 3. Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
- 5. Use short, circular strokes.

TRIMMING

- 1. Slide the trimmer button to release the detail trimmer.
- 2. Hold the trimmer at a right angle to your skin.
- 3. Place the trimmer at desired trim line for a quick, easy professional trim.
- 4. To retract the trimmer, push down until it locks into position.

TIPS FOR BEST RESULTS

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

CARE FOR YOUR SHAVER

Care for your appliance to ensure a long lasting performance. We recommend you clean your appliance after each use.

- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- 1. Open the shaver head by pressing the release button (Fig. A).
- 2. Empty out any hair clippings.
- 3. Pull the shaver head upwards to remove it from the body (Fig. B).
- Locate the centre arrow and slide the retainer in the opposite direction to release it. Once released, lift it out of the shaver head (Fig. C). Make a note of the correct orientation of the retainer to make refitting easier.
- 5. Carefully brush away any hairs from the cutters.
- 6. For a more thorough cleaning, lift out the three cutters (Fig. D).
- 7. Wash the shaving head unter running water (Fig. E). Allow to dry thoroughly.
- 8. Carefully refit the three cutters.
- 9. Refit the retainer. Locate the centre arrow and slide the retainer in the same direction as the arrow until it clicks into place (Fig. F).

 Once the shaver head is assembled, align the spring hinge with the slot at the back of the hair pocket and press into place (Fig. G). Snap the head assembly closed.

TRIMMER

Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: https://uk.remington-europe.com/product-registration Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK) Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0HS, UK www.remington.co.uk

IRELAND

142 951 40 Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12 https://ie.remington-europe.com

Model No. PR1330

19/UK/ PR1330 T22-7000608 Version 06 /19 Remington" is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd Fir Street, Failsworth, Maschester M35 0HS www.remington.co.uk

© 2019 Spectrum Brands, Inc.