

REMINGTON®



Official Electrical Styling Partner of Manchester United

Power Series Aqua Rotary Shaver
















PR1355

 www.remington.co.uk

Register online for an EXTRA year guarantee

             Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

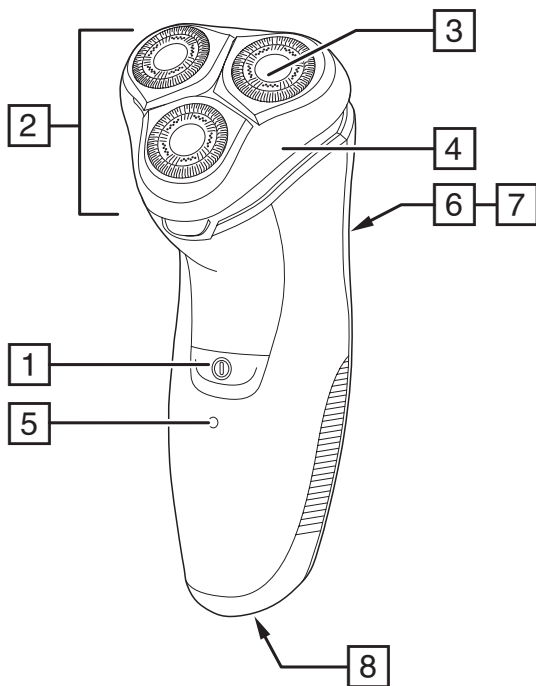

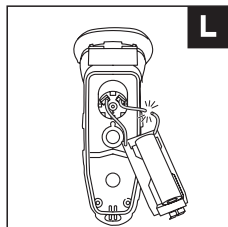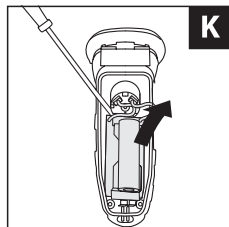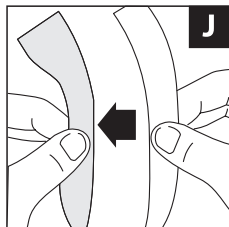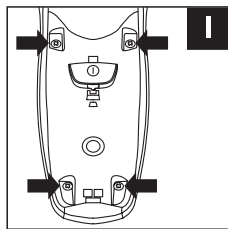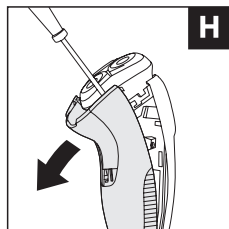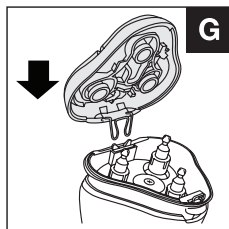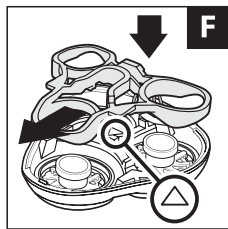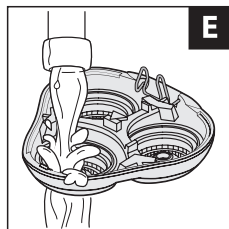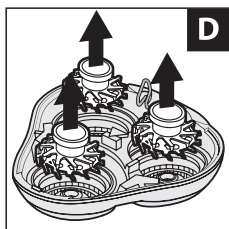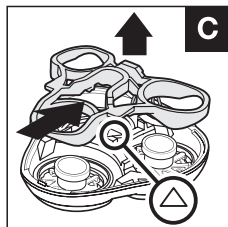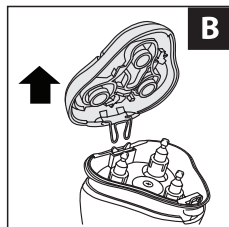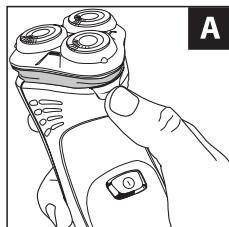

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.



The shaver is suitable for cleaning under an open water tap.



Suitable for use in a bath or shower.

- **WARNING:** Detach the shaver from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Always replace a damaged adaptor with one of the original type.
- Do not use the shaver, charging adaptor, charging stand or any other part if it is damaged, as this may cause injury.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|--------------------------------------|-------------------|
| 1. On/off switch | 8. Power port |
| 2. Pivoting head and cutter assembly | <i>Not shown:</i> |
| 3. Flexing heads | • Adaptor |
| 4. Hairpocket | • Cleaning brush |
| 5. Charging indicator light | • Head guard |
| 6. Trimmer release button | • Face towel |
| 7. Detail trimmer | |
-

GETTING STARTED

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

CHARGING YOUR SHAVER

- Ensure the appliance is turned off.
 - Connect the shaver to the adaptor and then to the mains.
 - Charge for at least 24 hours when using for the first time.
 - Allow 4 hours for a full charge.
 - When charging, the green indicator light will show solid. When fully charged, the green indicator light will turn off.
 - To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.
 - The shaver automatically adjusts to a mains voltage between 100V and 240V.
-

INSTRUCTIONS FOR USE

SHAVING

- Make sure your shaver is properly charged.
- Switch the shaver on.
- Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
- Use short, circular strokes.

TRIMMING

- Slide the trimmer button to release the detail trimmer.
- Hold the trimmer at a right angle to your skin.
- Place the trimmer at desired trim line for a quick, easy, professional trim.
- To retract the trimmer, push down until it locks into position.

TIPS FOR BEST RESULTS

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

SHAVING WITH SHAVING GEL

- Follow the same instructions as dry shaving, noted above in the Shaving section, if using with gel.
- Caution: After use with shaving gel, please rinse the head and cutters under warm water to clean away any excess gel and debris.

CARE FOR YOUR SHAVER

Care for your appliance to ensure a long lasting performance. We recommend you clean your appliance after each use.

- Ensure the appliance is switched off and unplugged from the mains before cleaning.
1. Open the shaver head by pressing the release button (Fig. A).
 2. Empty out any hair clippings.
 3. Pull the shaver head upwards to remove it from the body (Fig. B).
 4. Locate the centre arrow and slide the retainer in the opposite direction to release it. Once released, lift it out of the shaver head (Fig. C). Make a note of the correct orientation of the retainer to make refitting easier.
 5. Carefully brush away any hairs from the cutters.
 6. For a more thorough cleaning, lift out the three cutters (Fig. D).
 7. Wash the shaving head under running water (Fig. E). Allow to dry thoroughly.
 8. Carefully refit the three cutters.
 9. Refit the retainer. Locate the centre arrow and slide the retainer in the same direction as the arrow until it clicks into place (Fig. F).
 10. Once the shaver head is assembled, align the spring hinge with the slot at the back of the hair pocket and press into place (Fig. G). Finally, close the head assembly.

TRIMMER

Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

REMOVING THE RECHARGEABLE BATTERY

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Run the shaver until the motor stops.
 2. Unplug the shaver.
 3. Using a small screwdriver, pry the front cover from the shaver (Fig. H).
 4. Remove the rear cover (Fig. I).
 5. Remove the 4 screws located on the front of the shaver (Fig. J).
 6. Pry the battery carrier and circuit board from the shaver body then cut the wires (Fig. K-L).
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the shaver once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **<https://uk.remington-europe.com/product-registration>**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd


Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

productsupport@Remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

productsupport@Remington.co.uk

Ref. No. PR1355

Type No. PR1350

20/UK/ PR1355 T22-7000985-B Version 03 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,

Fairsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2020 Spectrum Brands, Inc.