

# REMINGTON®


EST. NEW YORK 1937



## **Complete Hair Gift Pack S3500GP**

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

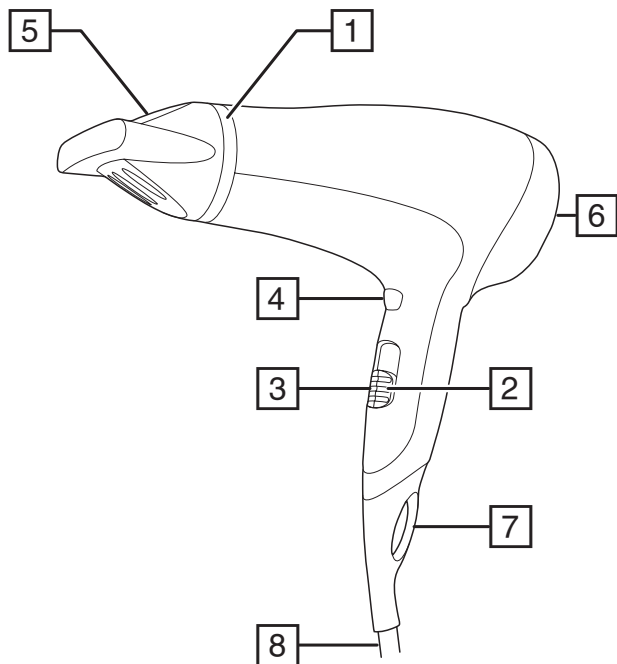

## Power Dry 2000


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**WARNING: This appliance is hot. Keep out of reach of children at all times.**

---

### HAIR DRYER - IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
  - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.

- Keep direct airflow away from eyes or other sensitive areas.
- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

---




## HAIR DRYER - PARTS

---

- |                                |                                     |
|--------------------------------|-------------------------------------|
| 1. Ceramic-Ionic coated grille | 5. Concentrator                     |
| 2. 3 heat settings             | 6. Removable easy clean rear grille |
| 3. 2 speed settings            | 7. Hang up loop                     |
| 4. Cool shot                   | 8. Cord                             |
- 

## HAIR DRYER - INSTRUCTIONS FOR USE

---

1. Wash and condition your hair as normal.
2. Squeeze out excess moisture with a towel and comb through.
3. Hairsprays contain flammable material – do not use while using this product.
4. Plug the product into the mains power supply.
5. To switch the product on slide the speed setting switch up once to the medium speed setting .
6. Select the desired temperature and speed setting using the switch on the handle.
7. To select heat setting slide the temperature setting switch to the low  or high setting .
8. For fast drying use the high heat / high speed function.
9. To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
10. To set your style, press the cool shot button whilst styling then release it to reactivate the heat.
11. After use, turn the appliance off and unplug.
12. To turn off slide the speed setting switch down to the '0' position.
13. Let the appliance cool down before cleaning and storing away.

## ECO SETTING

- To use the dryer on the eco setting align the heat and speed setting switches with the eco symbol (🌿).

---

## HAIR DRYER - CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- To remove the rear grille, for cleaning, hold the dryer handle in one hand, then with the other place your thumb and index finger either side of the rear grille. Pull the rear grille away from the dryer.
- To replace the rear grille hold in place with thumb and index finger again and click back onto the dryer.

## Straightener 230 and Curl Create Wand


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**WARNING: This appliance is hot. Keep out of reach of children at all times.**


---

### STRAIGHTENER AND WAND - IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
  - Never leave the appliance unattended when it is connected to the power supply.

- Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

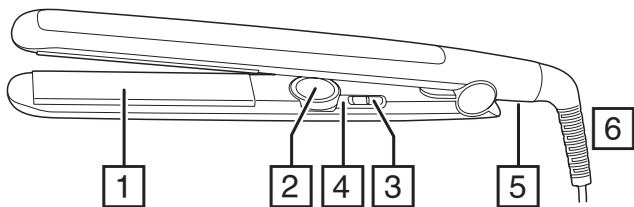


---

## STRAIGHTENER - PARTS

---

- |                                      |                        |
|--------------------------------------|------------------------|
| 1. Ceramic coated plates             | 4. LED indicator Light |
| 2. Variable temperature setting dial | 5. Hinge Lock          |
| 3. On/Off switch                     | 6. Swivel Cord         |
- 

## STRAIGHTENER - ADDITIONAL FEATURES

---


- Fast heat up—ready to use in 15 seconds.
- Automatic safety shut off – The unit will automatically turn itself off if left on after 60 minutes and no button is pressed
- Worldwide voltage: for home or abroad. At 120V times and temperatures may vary.

---

## STRAIGHTENER - INSTRUCTIONS FOR USE

---

- Before use, ensure the hair is clean, dry and tangle-free.
  - For extra protection use a heat protection spray.
  - Hairsprays contain flammable material – do not use while using this product.
  - Section the hair prior to styling. Style the lower layers first.
1. Plug the product into the mains power supply.
  2. Slide the switch, which is located on the side of the product, to the left to switch on.
  3. Working on one section at a time, run the straightener through the entire length of the hair without stopping.
  4. Only repeat twice per section to prevent damage to the hair.
  5. After use, turn the appliance off and unplug.
  6. To turn off slide the on/off switch to the right.

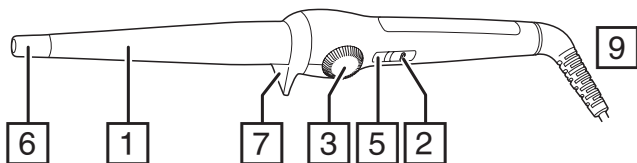

---

## WAND - PARTS

---

- |                                 |  |
|---------------------------------|--|
| 1. 4 x Protection coated barrel | 7. Stand   |
| 2. On-off switch                | 8. Heat resistant glove – first line protection only (not shown) |
| 3. Temperature controls         | 9. Swivel cord   |
| 4. Temperature level indicator  | 10. Heat resistant mat (not shown)                               |
| 5. Ready indicator light        |  |
| 6. Cool tip                     |  |

---

## WAND - ADDITIONAL FEATURES

---

- Fast heat up—ready to use in 30 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.



## WAND - INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
  - Section the hair prior to styling. Style the lower layers first.
  - Use the heat resistant glove to avoid any accidental burns.
1. Plug the product into the mains power supply.
  2. Switch the appliance on.
  3. Select the desired temperature.
  4. Start styling on lower temperatures first.
  5. To increase the temperature rotate the temperature control to the right moving the temperature level indicator towards the top temperature. To decrease the temperature rotate the control to the left moving the temperature level indicator towards the lowest temperature.

### TEMPERATURE SETTINGS:

- 130°C = Lowest temperature
- 200°C = Maximum temperature

#### Recommended Temperatures

Temperature	Hair type
130°C - 150°C	Thin / fine, damaged or bleached hair
150°C - 170°C	Normal, healthy hair
170°C - 200°C	Thick and difficult to style hair

**Caution:** the hottest temperatures should only be used by experienced stylists.

6. The indicator light will stop flashing once the desired temperature is reached.
7. Use the heat protection glove to avoid accidental burns.
8. Hold the handle and wrap the hair around the heated barrel.
9. Wait about 10 seconds for curl to form.
10. Unwind the wand and release the curl.
11. Allow the hair to cool before styling.
12. Repeat this around the head to create as many curls as desired.
13. Between uses, place your straightener down onto the supplied mat.
14. When finished slide the switch down to turn off and unplug the appliance.
15. Let the appliance cool down before cleaning and storing away.

---

## STRAIGHTENER AND WAND - CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

### IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

**Ref. No. S3500GP**

**Type No. S3500, D3010, CI52W0**

20/UK/ S3500GP T22-7001656 Version 10 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.  
Spectrum Brands (UK) Ltd

Fir Street,  
Failsworth,  
Manchester

M35 0HS

[remington-europe.com](http://remington-europe.com)

© 2020 Spectrum Brands, Inc.