 

REMINGTON®

Colour Protect Straightener



S6300



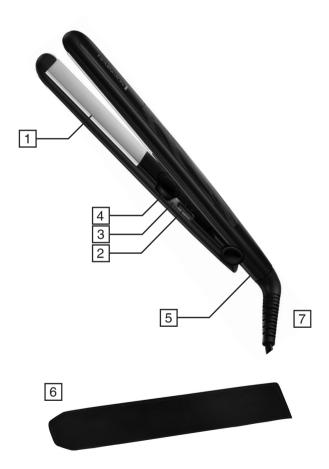

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and
 persons with reduced physical, sensory or mental capabilities or lack of
 experience and knowledge if they have been supervised/instructed and
 understand the hazards involved. Children shall not play with the
 appliance. Cleaning and user maintenance shall not be done by children
 unless they are older than 8 and supervised. Keep the appliance and cable
 out of reach of children under 8 years.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the
 proximity of water presents a hazard even when the appliance is switched
 off
- For additional protection, the installation of a residual current device (RCD)
 having a rated residual operating current not exceeding 30 mA is advisable
 in the electrical circuit supplying the bathroom*.
 - * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
- Never leave the appliance unattended when it is connected to the power supply.
- Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface

- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any signs of damage.
- · This appliance is not intended for commercial or salon use.

PARTS

- Advanced ceramic colour protect coated plates
- Indicator light
- 2. On/Off switch
- 4. Temperature controls
- 5. Hinge lock
- 6. Heat resistant pouch
- 7. Swivel cord

ADDITIONAL FEATURES

- Fast heat up—ready to use in 15 seconds.
- Automatic safety shut off this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- · For extra protection use a heat protection spray.
- Hairsprays contain flammable material do not use while using this product.
- Section the hair prior to styling. Style the lower layers first.
- Plug in the styler and slide the switch to turn on.
- Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product.

Recommended Temperatures

Temperature	Hair type
150°C - 170°C	Thin / fine, damaged or bleached hair
170°C - 200°C	Normal, healthy hair
200°C - 230°C	Thick and difficult to style hair

- 3. The on indicator will flash whilst the styler is heating up and come on when the styler is ready to use this will be about 15 seconds.
- 4. Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- 5. Repeat only twice per section to prevent damage to the hair.
- 6. When finished, slide the switch down to turn off and unplug the appliance.

CLEANING AND MAINTENANCE

- · Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

RECYCLING





To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: www.remington.co.uk/productregister

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kinadom

Tel 0800 212 438 (free call mainland UK) Spectrum Brands (UK) Ltd. Fir Street, Failsworth, Manchester M35 0HS, UK www.reminaton.co.uk

Ireland

Tel 142 951 40 Reminaton Consumer Products. Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12 www.ie.remington-europe.com

𝔔 REGISTER ONLINE

Register online for an EXTRA year quarantee*. Visit www.remington.co.uk/productregister *You must register within 28 days of purchase.

Model No. S6300

18/UK/ S6300 T22-7000632 Version 11 /18
Remington* is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,

Manchester M35 0HS www.remington.co.uk

© 2018 Spectrum Brands, Inc.