

REMINGTON®

EST. NEW YORK 1937

 
 
 


Rechargeable Ladyshaver WDF5030

 www.remington.co.uk


Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

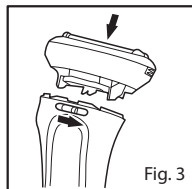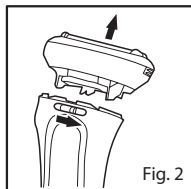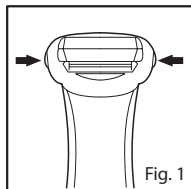

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  Suitable for use in a bath or shower.
- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance – type reference PA-04701U.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.
- **WARNING:** Contains traces of nuts.

PARTS

- | | |
|--|----------------------------------|
| 1. Shaving head | 8. Massage strip with almond oil |
| 2. Foil holder | 9. Soft touch anti-slip grip |
| 3. Foil holder release buttons | 10. On/off button |
| 4. Shaving head release button | 11. Charging indicator light |
| 5. 2 hypoallergenic flexing anti-clog shaver foils | 12. Charging stand |
| 6. Flexible trimmer | 13. Charging adapter (not shown) |
| 7. Bikini trimmer comb guard | 14. Beauty bag (not shown) |
| | 15. Cleaning brush (not shown) |
-

GETTING STARTED

Be patient when first using your lady shaver, as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your shaver, as we are confident you will receive years of enjoyable use and complete satisfaction.

CHARGING YOUR APPLIANCE

- Always ensure that your hands, shaver and mains adaptor are dry before charging.
- Ensure the product is switched off.
- Your shaver can be charged by connecting the adaptor to the charge stand or directly to the product. The charge indicator light on the appliance will illuminate green when your shaver is charging.
- Before using your Remington lady shaver for the first time charge it for 24 hours. For subsequent uses, charge for 20 hours before use. One full charge allows 40 minutes of cordless usage time.
- Use the product until the battery is low. This is indicated by the shaver working distinctly slower.
- Your shaver cannot be overcharged. However, if the product is not going to be used for an extended time period (2-3 months), unplug it from the mains and store. Fully recharge your shaver when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 20 hours.

CHARGING CAUTIONS

- Do not attach the mains adaptor to the mains with wet hands.
- Always charge your shaver in a cool, dry place.
- Do not charge your shaver in close proximity to water.
- The shaver can be attached to an electrical outlet voltage of 100V - 240V.

INSTRUCTIONS FOR USE

Your lady shaver is suitable for legs, underarms and the bikini area. It can be used dry or in the shower.

FOR REGULAR SHAVING

- Switch the shaver on.
- Hold the shaver at a right angle to your skin and move the shaver against the direction of the hair growth.
- After shaving, turn the shaver off.
- Note: before dry shaving, ensure the area is clean, dry and free from creams or oils.

FOR LONGER HAIRS

- If you have not shaved for a while, use the trimmer before shaving. This will help you achieve a more effective shaving result.
- Hold the shaver with the trimmer facing your leg and slightly tilted towards you (approximately a 45° angle).
- Move the trimmer slowly against the direction of hair growth.

EDGING AND SHAPING

- Attach the bikini trimmer attachment.
- Hold the shaver at a right angle to your skin and press down gently.
- Edge and shape the area as desired.

FOR BEST SHAVING PERFORMANCE

- We recommend that you use your new shaver daily for 2-3 weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.

CAUTION

- If your skin is easily irritated by shaving or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver.

CARE FOR YOUR SHAVER

To ensure long lasting performance of your shaver, clean the head assembly regularly. The easiest and most hygienic way to clean the shaver is by rinsing the shaver head after use with warm water.

AFTER EACH USE

- Ensure the shaver is switched off.
- Remove the foil holder assembly by pressing the foil holder release button on both sides of the shaving head (Fig. 1).
- Blow any loose debris from the foil.

- Remove the shaver head assembly by sliding and holding the shaver head release button on the back of the shaver to the right. At the same time pull the shaver head assembly firmly to remove (Fig. 2).
- Brush or rinse any accumulated hair from the main body of the shaver, head assembly, foil holder and cutter assembly.
- Leave the head assembly and foil holder open to let the shaver dry completely.
- Reassemble the shaver head and body by sliding and holding the shaving head release button to the right and securely snapping the head back onto the body (Fig. 3).
- Reassemble the foil holder to the shaver head by securely snapping into place.
- Do not rinse with water hotter than 70°C.
- Do not submerge the appliance.
- Do not clean the shaving foil with a brush.
- At regular intervals, put a drop of sewing machine oil onto the foils and cutters head. Remove excess oil.

REPLACING THE FOILS AND CUTTERS

- To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutter are replaced every 6 months. These can be obtained from your nearest Remington Service Centre.

SIGNS THAT YOUR FOILS AND CUTTERS NEED REPLACING

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling through your hair.
- Wear through: you may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

- Ensure the shaver is switched off.
- Firmly press the foil holder release buttons at either end of the foil. The foil holder should then easily detach from the head assembly.
- Hold the foil holder with the foils facing towards you. Place your thumbs on each side of the foil plastic guards and press firmly until the foil snaps free. Repeat this for the second foil.
- To reassemble turn over the foil holder. Position the new replacement foils in the foil holder and pressing gently, click them into place.
- Reassemble the foil holder and the shaver head by securely snapping in place.

CAUTION

- Only hold the plastic to prevent damage to the foil.
- Do not press on the foil when replacing.

REPLACING THE CUTTERS

- Ensure the shaver is switched off and open the foil holder (as above).
- Grasp the flat edges of the cutter between your thumb and forefinger and pull upwards.
- To reassemble the cutter, insert the protruding pin on the shaver head into the hole in the middle of the cutter. Gently push the cutter down, until it clicks in place.
- Reassemble the foil holder and shaver head by securely snapping in place.

BATTERY REMOVAL

The battery must be removed from the appliance before it is scrapped.

The appliance must be removed from the charging stand when removing the battery.

- Ensure the battery is discharged.
- On the back of the shaver, press the shaving head release button to the right, grip the head and remove the shaving head.
- Using a small screwdriver, remove the 4 screws from the inside top of the shaver and the single screw from the bottom of the shaver.
- Separate the top and bottom housing.
- Push the inner frame up and out through the centre of the top housing.
- Prise out the batteries from the inner frame.
- Cut or break the wire stamps on both ends of the batteries.
- The batteries are to be disposed of safely.

ADAPTER SPECIFICATIONS

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	PA-04701U
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	4.7 V ---
Output current	0.1 A
Output power	0.47 W
Average active efficiency	≥40.4%
Efficiency at 10%	-
No load power consumption	≤0.1W

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Model No. WDF5030

20/UK/ WDF5030 T22-7001548 Version 04 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,
Failsworth,
Manchester

M35 0HS

www.remington.co.uk

© 2020 Spectrum Brands, Inc.