

REMINGTON®

CORDLESS LADY SHAVER



WDF4830C

£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details



Thank you for buying your new Remington® product.

Before use, please read these instructions carefully and keep them safe. Remove all packaging before use.



CAUTION

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.



KEY FEATURES

- 1 Head assembly
 - 2 Head release button
 - 3 On/Off button
 - 4 2 hypoallergenic flexing shaver foils
 - 5 Bikini trimmer comb guard
 - 6 Flexible trimmer
 - 7 Charging indicator light
 - 8 Moisturising Massage strip with Aloe Vera
 - 9 Charging stand
 - 10 Beauty bag(Not Shown)
 - 11 Cleaning brush (not Shown)
- 2 year guarantee



GETTING STARTED

Be patient when first using your lady shaver, as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your shaver, as we are confident you will receive years of enjoyable use and complete satisfaction.



INSTRUCTIONS FOR CHARGING

- Always ensure that your hands, trimmer and mains adaptor are dry before charging.
- Before using your REMINGTON® lady shaver for the first time charge it for 24 hours. For subsequent uses, charge for 20 hours before use. One full charge allows 30mins of cordless usage time.
- Use product until the battery is low. This is indicated by the lady shaver running distinctly slower.
- Your lady shaver cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store. Fully recharge your lady shaver when you would like to use it again.
- To preserve the life of your batteries, let them run out every six months then recharge for 20 hours.



CHARGING CAUTIONS

- Do not attach the power cord to the mains with wet hands.
- Always charge shaver in a cool, dry place.
- Do not charge the shaver in close proximity to water.
- The shaver can be attached to an electrical outlet voltage of 220V – 240V.



HOW TO USE



Your lady shaver is suitable for legs, underarms and the bikini area.
It can be used dry or in the shower.

✱ FOR REGULAR SHAVING

- Remove protective cap before shaving.
- Turn the lady shaver on.
- Hold the lady shaver at a right angle to your skin and move the shaver against the direction of the hair growth.
- After shaving, turn shaver off.

✱ Note: Before dry shaving, make sure that the area is clean, dry and free from creams or oils.

✱ FOR LONGER HAIRS

If you have not shaved for a while, use the trimmer before shaving. This will help you achieve a more effective shaving result.

- Hold the shaver with the trimmer facing your leg and slightly tilted towards you (approximately at a 45° angle).
- Move the trimmer slowly against the direction of the hair growth.

✱ TRIMMING AND SHAPING

- Attach the bikini trimmer attachment.
- Hold the shaver at a right angle to your skin and press down gently.
- Edge and shape the areas as desired.

✱ FOR BEST SHAVING PERFORMANCE

- We recommend that you use your new shaver daily for two or three weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.



CAUTION

- If your skin is easily irritated by shaving, or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver.

CARE FOR YOUR SHAVER

To ensure long lasting performance of your shaver, clean the head assembly regularly. The easiest and the most hygienic way to clean the shaver is by rinsing the shaving head after use with warm water. Always keep the protective cap on the shaving head when the shaver is not in use.

AFTER EACH USE

- Ensure the shaver is turned off.
- Press the side release button to slip open the head assembly.
- Blow any loose debris from the foil.
- Brush or rinse the accumulated hair from the main body of the shaver, head assembly and cutter assembly.
- Leave the head assembly open to let the shaver dry completely.

NOTE

- The lady shaver is suitable for use in the bath or shower.
- Do not rinse with water hotter than 70°C.
- Do not completely submerge the lady shaver in water.
- Ensure that the lady shaver is turned off when cleaning.
- Do not clean the shaving foils with the brush.
- At regular intervals, put a drop of sewing machine oil onto the foils and cutter heads.

Replacement parts and accessories available to buy at <http://www.remington.co.uk/parts-accessories>

REPLACING YOUR FOILS AND CUTTERS

To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutter are replaced every 6 months. These can be obtained from our nearest Remington® Service Centre

Signs that your foils and cutters need replacing:

- **Irritation:** As foils get worn, you may experience skin irritation.
- **Pulling:** As the cutters wear, your shaver may not feel as close and you may feel the cutter pulling your hair.
- **Wear through:** You may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

- Ensure the lady shaver is switched off.
- Gently push the small plastic area at either end of the foil. The foil should then easily detach from the head assembly.
- To reassemble, slide the foils into foil brackets and click into position.
- Close the head assembly.



CAUTION

- Only hold the plastic to prevent damage to the foil.
- Do not press on the foil when replacing.

✱ TO REPLACE THE CUTTERS

- Ensure the shaver is switched off and open the head assembly (as above).
- To remove cutter, grasp cutter between thumb and forefinger and pull upward.
- To reassemble cutter, place cutter onto oscillator tip. Gently push down clicking into position.



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- Do not leave the appliance unattended while plugged in.
- Only set the appliance down on a heat-proof surface.
- Do not use accessories or attachments other than those we supply.
- Do not twist or kink the cable, and don't wrap it around the appliance.
- Store the product at a temperature between 15°C and 35°C.
- Do not use the appliance if it is damaged or malfunctions.
- If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.
- The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach. Use, cleaning or maintenance of the appliance by children over eight or by anyone with a lack of knowledge, experience or with reduced physical, sensory or mental capabilities should only be undertaken after receiving appropriate instruction and under the adequate supervision of a responsible adult to ensure that they do so safely and that the hazards involved are understood and avoided.



WIRING INSTRUCTIONS UK Plugs only

The product doesn't need an earth.


It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place.

If you remove the plug, dispose of it.

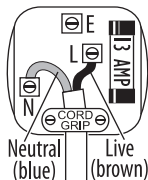



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

This product has been checked and is free of defects.

We guarantee this product against any defects that are due to faulty material or workmanship for the guarantee period from the original date of consumer purchase.

If the product should become defective within the guarantee period, we will repair any such defect or elect to replace the product or any part of it without charge, provided there is proof of purchase.

This does not mean an extension of the guarantee period.

In the case of a guarantee simply call the Service Centre in your region.

This guarantee is offered over and above your normal statutory rights.

The guarantee shall apply in all countries in which our product was sold via an authorised dealer.


This guarantee does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required.

This guarantee shall not apply if the product has been dismantled or repaired by a person not authorised by us.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it.

It's on the rating plate which can be found on the appliance.

UNITED KINGDOM

 +44 0800 212 438 (free call)

Customer Service
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester M35 0HS

12/UK/WDF4830C Version 08/12 Part No T22-33168
Remington® is a Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries
Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk

© 2012 SBI

REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.
Visit www.productregister.co.uk/remington