



Russell Hobbs®

A BRITISH ICON SINCE 1952

Noir Gold Knife Block

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

Knives are intended for domestic kitchen use only. Always use a plastic or wooden cutting board to avoid blunting the blades. Knives require regular sharpening and should be cleaned after each use. The knives should be checked for damage before each use. If there are any signs of damage, they should be disposed of carefully.



WARNING: SHARP BLADES; HANDLE WITH CARE. KEEP OUT OF THE REACH OF CHILDREN. NOT TO BE SOLD TO ANY PERSONS UNDER THE AGE OF 18.

BEFORE FIRST USE

Hand-wash thoroughly.

CLEANING AND MAINTENANCE

Not safe for dishwasher use. Clean the knives in warm, soapy water with a soft cloth, rinse and dry thoroughly. Do not soak. Do not use harsh or abrasive cleaning detergents or scourers. Wipe the knife block with a soft, damp cloth and dry thoroughly.

STORAGE

Store the knives carefully and safely within the knife block.

Dimensions stated are approximate internal measurements taken rim to rim. If this product proves unsatisfactory or if you have any further queries, please contact your retailer.

Made in China.

Distributed by:

Spectrum Brands Australia Pty Ltd – 11B Chifley Drive, Mentone, VIC, 3194.

Spectrum Brands New Zealand Ltd – Level 1, 8 Hugo Johnston Drive, Penrose, Auckland, 1061.

Supplied by:

Ultimate Products UK Ltd., Victoria Street, Manchester OL9 0DD. UK under licence from Spectrum Brands (UK) Limited. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Limited.

www.russellhobbs.com.au

www.russellhobbs.co.nz

Subject to care and use instructions being followed, the Russell Hobbs 5-Year warranty promises to replace, substitute or refund any product that fails due to faulty workmanship or materials. This 5-year warranty does not cover any damage caused by accident or misuse and is in addition to your statutory rights. The warranty does not cover scratches to the coating, or discolouration of the coating as a result of ageing. Should any defects due to faulty workmanship or materials appear within the warranty period, please return the goods with proof of purchase to the retailer.

AUS: For full warranty details, visit

www.russellhobbs.com.au/cookware-kitchenware-warranty.

NZ: For full warranty details, visit

www.russellhobbs.co.nz/cookware-kitchenware-warranty.