

REMINGTON®

EST. NEW YORK 1937

3 IN 1 CURL & WAVE MULTISTYLER



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

3 YEAR WARRANTY

CI97MS3AU

IMPORTANT SAFEGUARDS

Warning: When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.

- Your appliance must never be left unattended when plugged in to a power outlet.
- Burn Hazard. Keep the appliance out of reach of young children, particularly during use and cool down.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.

CAUTION: The appliance will remain hot for some time after being switched off. Do not touch the barrel or surrounding areas or set the appliance down onto surfaces that may be affected by heat until it has cooled.

- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not let bare skin touch heated surfaces.
- Never place the appliance on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.
- Do not use on wet hair

SAVE THESE INSTRUCTIONS

CI97MS3AU 3 IN 1 CURL & WAVE MULTISTYLER USE AND CARE INSTRUCTION MANUAL

Thank you for purchasing your Remington® 3 in 1 Multistyler. This on-trend styling tool features 3 interchangeable barrels to curl & wave, creating effortless looking results.



KEY PARTS

- | | |
|-------------------------------|----------------------------------|
| 1. 19mm tong (defined curls) | 6. Integrated counter rest |
| 2. 32mm tong (loose curls) | 7. Locking ring |
| 3. Conical wand (beach waves) | 8. LED on ready indication light |
| 4. Clamping tong(s) | 9. On/Off switch |
| 5. Cool tip | 10. Swivel cord |

BASIC HAIR CARE INSTRUCTIONS

The 3 in 1 Multistyler is designed to Curl and Wave: the 3 interchangeable barrels allow to create 3 styles depending on your desired result - defined curls, loose curls and beach waves.

- For optimal results, shampoo and condition your hair prior to styling, then dry your hair thoroughly and make sure that it is tangle free.
- For extra protection use a heat protection spray.
- Hairsprays contain flammable material - do not use while using this product.

Note: This appliance is not suitable for use on synthetic wigs or hair extensions.

HOW TO ATTACH THE BARRELS

- Turn the locking ring on the handle anti-clockwise.
- Plug the selected barrel fully into the power handle socket and turn the locking ring fully clockwise to hold it firmly in place.

Caution: Be careful to let the attachments cool before removing as they can get very hot in use and may remain hot for a period of time after use.

HOW TO USE YOUR 3 IN 1 MULTISTYLER TO CURL & WAVE

- Select the barrel you wish to use and plug it into the power handle.
- Place the styler on a flat, hard, heat resistant surface ensuring the barrel does not come into contact with the surface. Plug in to any household (120/240V AC) power outlet.
- Slide the on/off switch to the left to switch the styler on. The LED on and ready indicator light next to the switch will illuminate.
- To adjust the temperature, slide the on/off switch to the left. "I" is for low heat, and will heat up to 160°C. "II" is for medium heat, and will heat up to 190°C. "III" is for high heat and will heat up to 220°C. The LED on and ready indicator light will stop flashing when the selected temperature has been reached.

Caution: Take extra care when using the styler, as it can get very hot. It is important to establish the correct temperature for your hair type prior to use. If in doubt, start with a low temperature setting first and increase the temperature gradually.

19MM BARREL: DEFINED/TEXTURED CURLS

Note: Results may depend on hair type

- Separate small sections of hair (about 5cms wide) and place the ends of one section under the clamping tong.
- Hold at a vertical angle, and then rotate the barrel, rolling hair up

towards the roots trying not to overlap the hair.

- Use the cool tip if you need to get a better grip of the unit without having to grip the heated barrel and clamping tong. The swivel cord ensures you can turn the unit easily without getting tangled.

Note: The tightness of the curl is determined by how tightly you wrap the hair around the barrel and how long you hold the set in place.

- Hold the clamping tong for 10 to 20 seconds, depending on the texture and length of your hair.
- To release the curl, simply press the clamping tong and remove the barrel from the curl. The ceramic coating will ensure that the hair slides smoothly from the barrel.
- After removing the barrel from your hair, wrap the ringlet around your finger and secure it with a bobby pin.
- Allow the curls to cool fully before styling, as this ensures a long-lasting style. When the curls have cooled (allow approximately 5 – 10 minutes) unpin and comb through with your fingers.
- Complete your style with a finishing balm or spray.

32MM BARREL: LOOSE CURLS/WAVES & VOLUME

Note: Results may depend on hair type.

- Separate small sections of hair (about 5cms wide) and place the ends of one section under the clamping tong.
- Hold at a vertical angle, and then rotate the barrel, rolling hair up towards the roots trying not to overlap the hair.
- Use the cool tip if you need to get a better grip of the unit without having to grip the heated barrel and clamping tong. The swivel cord ensures you can turn the unit easily without getting tangled.

Note: The tightness of the curl is determined by how tightly you wrap the hair around the barrel and how long you hold the set in place. Curls will loosen and create beautiful, sleek waves.

- When you have unpinned the curls, lean forward and brush the hair through. This will create a soft, free flowing look.
- If your hair is flat and limp, add loads of volume at the roots by placing the barrel under each section of hair near the root and holding it there for 10-20 seconds.
- Complete your style with a mist of hair spray.

13 MM-25MM CONICAL BARREL: BEACH WAVES, MEDIUM CURLS

- Separate small sections of hair (about 5cms wide).
- Hold the section of hair at a vertical angle starting at the thicker portion of the barrel, and wrap around the conical barrel up to the cool tip until the entire length of hair has been wrapped around.
- Use the cool tip if you need to get a better grip of the unit without having to grip the heated barrel. The swivel cord ensures you can turn the unit easily without getting tangled.
- Hold the length of hair around the barrel at the cool tip for 10 to 20 seconds, depending on the texture and length of your hair.
- To release the curl, simply unravel the length of hair around the barrel. The ceramic coating will ensure that the hair slides smoothly from the barrel.
- Allow the curls to cool fully before styling.

Tip: For medium curls, loosen the curls with your fingertips. For natural looking waves, brush curls out using a paddle brush.

- Complete your style with a finishing balm or spray.

AUTOMATIC SAFETY SHUT OFF

If the straightener is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

However, the appliance must never be left unattended when plugged into a power outlet.

AUTOMATIC WORLDWIDE VOLTAGE

This product is 'multi-voltage', for use at home and abroad, and is designed to operate on voltages from 120V~ to 240V~. At 120V~, the times and temperatures stated in this booklet may vary.

Note: Some countries will require the use of a plug adaptor (not included).

STORAGE, CLEANING AND MAINTENANCE

Let the appliance cool down before cleaning and storing away

- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

This product conforms to radio frequency interference requirements.
Any product purchased and used commercially carries a limited 90 Day Warranty.
We suggest you use local waste management centres to recycle this product at end of life.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2021 Spectrum Brands Inc.

Rev. 05/21

Part No. T22-7002016

Type: CI97M1

