

REMINGTON®

EST. NEW YORK 1937

POWER SERIES F2



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

F2000AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks or cutters, as injury may occur.
- Do not plug or unplug the appliance with wet hands.
- For household use only.

- Do not place or store the appliance or power adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the power adaptor from the electrical outlet immediately after shaving.
- Do not use while bathing or in the shower.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the power adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

F2000AU POWER SERIES F2

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Power Series F2 foil shaver. Inside this manual you will find tips on using and caring for your shaver.



KEY PARTS

- | | |
|-------------------------------|---------------------------|
| 1. On/Off Switch | 7. Charging Indicator |
| 2. Foils | 8. Power Port (not shown) |
| 3. Cutter Assembly | |
| 4. Head Release Button | Also Includes |
| 5. Hair Pocket | • Head Guard |
| 6. Pop Up Trimmer (not shown) | • Cleaning Brush |
| | • Power Adaptor |

F2000AU SPECIFICATIONS	
Power System	Cordless (Rechargeable)
Initial Charge Time	16 Hours
Full Charge Time	16 Hours
Cordless Shave Time	40 Minutes
Indicators	LED
Voltage Type	Worldwide
Replacement Head & Cutters	SPF-F2000AU



Power System: Cordless – shaver can only be used without the power cord.

Indicator: Charging – green light that glows when the shaver is being charged.

Voltage Type: Worldwide Voltage – shaver automatically adapts to an outlet voltage between 100V and 240V.

Note: Some countries will require the use of a plug adaptor that is not included with your shaver.

CHARGING

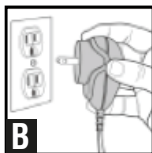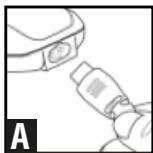

Before using, read the important safety instructions in this manual.

1. Ensure the product is switched off. Connect the shaver to the adaptor (Diagram A).
2. Connect to the mains (Diagram B) and charge for at least 16 hours when using for the first time (Diagram C). This first charge is important to the shaver's battery life.
3. When plugged, the charging indicator will light up.
4. When empty, the battery should be charged for 16 hours and will provide 40 minutes of shaving time.
5. To preserve the life of the batteries, allow them to fully discharge every six months, and then recharge them for 16 hours

Caution:

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

GETTING STARTED

Before operating your shaver, remove the protective head guard, which protects the foils and cutter assembly. It is important to remove it correctly to avoid damaging the clips that hold it to the shaver.

1. Press lightly on the top of the protective head guard.
2. Lift the lower rear edge.
3. Pull the protective head guard away from the shaver.

When the shaver is not in use, always keep the protective head guard on the shaver head and keep the trimmer in the OFF position.

SHAVING



1. Remove power adaptor from the shaver (Diagram A).
2. Press the power button to the ON position to activate the shaver for shaving.
3. Use your free hand to stretch your skin so that the hairs stand upright. This encourages your facial hair to stand out, making it easier for them to enter the foil (Diagram D).
4. Hold the shaver so that the foils touch your face (Diagram E). Ensure that you hold the shaver at an angle where both foils are touching the skin. This allows the shaver to work the way it was designed for the closest shave with minimum wear.
5. After shaving turn the shaver off.

SHAVING TIPS

For a smoother, more comfortable, moisture-free shave, use a Remington® Pre-Shave Powder Stick (SP5).



- Ensure your skin is dry and free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Hold the shaver at 90° to your skin.
- Stretch your skin and shave against the direction of your beard growth using linear strokes.
- For areas such as the chin and neck where hair grows in different directions use small circular strokes.
- While shaving do not press hard against the skin to avoid skin irritation and/or damage to the foils.

TRIM

Pop-up Trimmer:

1. Push trimmer release button to engage trimmer. (Diagram F)
2. Trim long, difficult hairs and side burns. (Diagram G)
3. Close trimmer by pressing down. (Diagram H)

Note: Lubricate teeth with oil every 6 months.

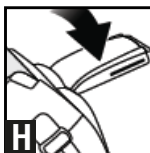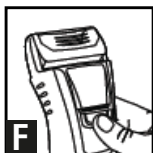

CLEANING & MAINTENANCE



Note: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

Caution:

Cleaning Your Shaver

To ensure long lasting performance, it is important to clean your shaver regularly. We recommend you clean your shaver after each use. The easiest and most hygienic way to clean the shaver is by rinsing the shaver head after use with warm water.

Weekly Cleaning

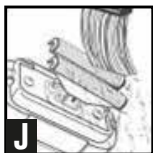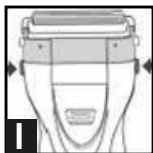

Clean under the assembly at least once a week:

1. Turn the shaver off.
2. Remove the head assembly from the shaver body (Diagram I).
3. Gently tap the shaver head on a flat surface to remove any loose hair particles, and rinse the shaver head under warm water (Diagram J). Never submerge your shaver under water.
4. Thoroughly clean the cutter and trimmer with a brush (Diagram J).
5. Never use the cleaning brush on the foils, as damage may occur.
6. Shake off any excess water.
7. Leave the shave unit open to allow the shaver to dry completely.
8. Lubricate the shaver with a spray of Remington® Shaver Saver (SP4) on the foil and cutters.
9. Replace the head assembly, simply by pushing it on the shaver.

Note: Cover shaver head with the head guard between uses. When removing the head guard or placing it back onto the shaver, do not apply pressure to the floating cutter surfaces, as you may damage them.

PLEASE USE BLOCK LETTERS

* INDICATES REQUIRED INFORMATION

*NAME:

*ADDRESS:

*CITY:

*STATE: *POSTCODE:

*CONTACT NUMBER: AREA CODE Ph:

*PAYMENT INSTRUCTIONS:

☐ I enclose my cheque/money order (make payable to Spectrum Brands Australia Pty Ltd or Spectrum Brands New Zealand Limited)

OR

☐ Please charge this purchase to my credit card account: ☐ Mastercard ☐ Visa

Card Number

Expiry Date /

CARD HOLDER NAME:

ADDRESS:

CITY:

STATE:

POSTCODE:

SIGNATURE:

ACCESSORY ORDER FORM

Article		Part No.	Price each AUD	Price each NZD	Qty	Amount
Replacement Shaving Head & Cutters for F2000AU		SPF-F2000AU	\$29.95 AUD	\$34.95 NZD		\$
Shaver Saver: Aerosol Spray Cleaner		SP4	\$11.95 AUD	\$14.95 NZD		\$
Face Saver: Pre-shave Powder Stick		SP5	\$11.95 AUD	\$14.95 NZD		\$
IMPORTANT: Pricing in effect at time of publication, inclusive of GST. Subject to change without notice. Postage & handling \$7.50 standard for Australia & New Zealand.			Sub Total			\$
			Postage & handling			\$ 7.50
			TOTAL			\$

For help or to place an order on the phone
call Remington Customer Service:

- ① Australia: 1800 623 118 (toll free)
- ① New Zealand: 0800 736 776 (toll free)



MAIL YOUR ORDER FORM TO:

AUSTRALIAN RESIDENTS:

Spectrum Brands Australia Pty Ltd
Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA

NEW ZEALAND RESIDENTS:

Spectrum Brands New Zealand Pty Ltd
PO BOX 9817
Newmarket, 1149, Auckland
New Zealand



Remington is a Registered Trademark
of Spectrum Brands, Inc., or one
of its subsidiaries.

MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State: Postcode: DOB:

Contact No: Area Code: Ph:

Product Model number:

Is this the first Remington shaver you have owned/purchased? Yes ☐ No ☐

Why are you returning this shaver?

Skin Irritation ☐ Shave is not close enough ☐ Prefer a rotary/foil shaver ☐

Other:



Spectrum Brands Australia Pty Ltd
Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA
Customer service in Australia: 1800 623 118
E-mail: consumer.enquiry@remington-products.com.au
Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited
PO Box 9817
Newmarket, Auckland 1149
NEW ZEALAND
Customer service in New Zealand: 0800 736 776
E-mail: info@remington.co.nz
Website: www.remington.co.nz

Lubricate

Remington® Shaver Saver (SP-4) lubricates, cleans and protects your shaver's foil and cutter assembly. The lubricant helps remove hair clippings while reducing wear. Spray on the foil and cutters after each shave to keep your shaver operating at peak performance.

REPLACING THE FOIL & CUTTERS

It is very important to replace the foil and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Replacement foil & cutters may be obtained from your local retailer, or directly from Remington®. Simply fill out the enclosed accessory order form - refer to pages 9 & 10, or alternatively your order can be processed over the phone via the Remington® Service Hotline.

HOW TO REPLACE THE FOIL & CUTTERS

Please refer to the specifications' table on page 5 of this manual that lists the correct replacement part number of your shaver.

Remove the foil assembly by pressing the foil assembly release buttons on either side of the head and lifting the assembly upwards to remove from the hair pocket

- Grasp each cutter between your thumb and forefinger and pull upwards to remove
- Snap each new cutter into the top of the drive shaft.

Note: Do not push on the ends of the cutters as this may cause damage and reduce their effectiveness.

- Insert the new foil assembly on top of the hair pocket, press down and click into place.

BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The F2000AU contains a nickel metal hydride battery. Once the shaver has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.



This product is not suitable to use in the bath or shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2019 Spectrum Brands Inc.

Rev. 09/19

Part No. T22-7000858

Type: PF7200

