

**REMINGTON®**  
EST. NEW YORK 1937

# ULTIMATE SERIES Rx7 HEAD SHAVER

USE & CARE  
MANUAL

PLEASE READ  
PRIOR TO USE



To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

3 YEAR WARRANTY

HC7500AU

## IMPORTANT SAFETY INSTRUCTIONS

**When using electrical appliances, basic precautions should always be observed, including the following.**

### **READ ALL INSTRUCTIONS BEFORE USING**

**DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

**For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

### **WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**


- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- For use on head hair only. Not intended for shaving the hair on your face.

- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging cable where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging cable from the electrical outlet immediately after fully charging.
- Unplug the USB cable and port from the appliance before cleaning the appliance in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging cable in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

**SAVE THESE INSTRUCTIONS**

## HC7500AU ULTIMATE SERIES Rx7 HEAD SHAVER USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Ultimate Series Rx7 head shaver. Inside this manual you will find tips on using and caring for your shaver.

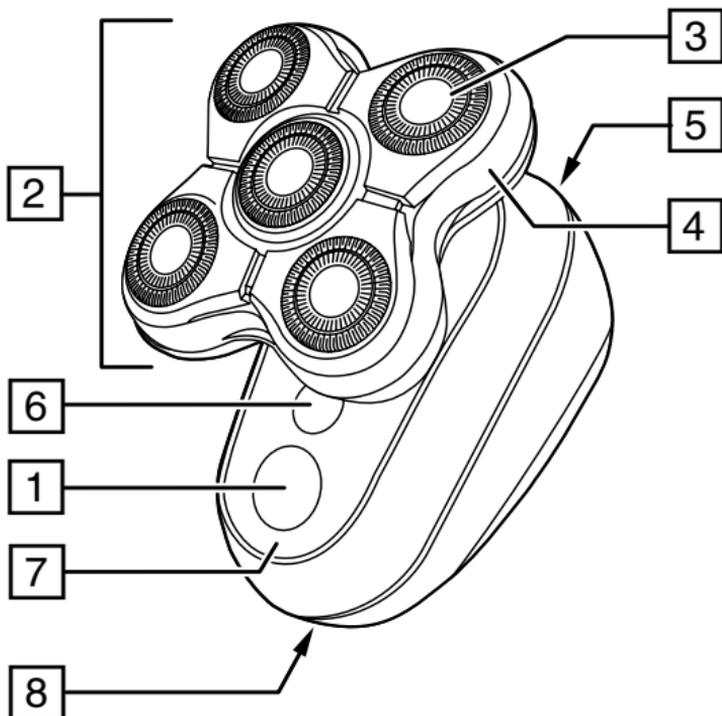

### KEY PARTS

- |                              |                       |
|------------------------------|-----------------------|
| 1. On/off button             | 8. Charging connector |
| 2. Head assembly             | <b>Also Includes:</b> |
| 3. Individual flexing blades | • Head Guard          |
| 4. Hairpocket                | • Storage Bag         |
| 5. Pop-up trimmer            | • Cleaning Brush      |
| 6. Turbo button              | • USB cable           |
| 7. Charging indicator lights | • Lubricating Oil     |

## HC7500AU SPECIFICATIONS

Power System	Cordless (Rechargeable)
Initial Charge Time	2 Hours
Full Charge Time	2 Hours
Cordless Run Time	Up to 60 Minutes
Indicators	4 LEDs
Voltage Type	Worldwide 100 - 240V
Waterproof	Yes
Replacement Head & Cutters	SP-HC7500AU-BA

**Power System:** Cordless - shaver can only be used when disconnected from the charging cable. The shaver will not run while it is charging.

### CHARGING

Before using, read the important safety instructions in this manual.

1. Ensure the product is switched off.
2. Connect the product to the USB cable and then connect the USB end of the cable to a powered USB port.
3. Charge for 2 hours when using for the first time. This first charge is important to the shaver's battery life.
4. When empty, the battery should be charged for 2 hours for a full charge and will provide up to 60 minutes of shaving time.

### Caution:

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

### CHARGING INDICATOR LIGHTS

#### During charging

Lights	Charge level
○	0-25%
●○	25-50%
●●○	50-75%
●●●○	75-99%

● = on ○ = flashing

Once fully charged, all 4 lights will stay on for 5 minutes and then go off.

### **Charge remaining**

After use, when you switch off your shaver, the charging indicator lights show the remaining charge for 5 seconds.

<b>Lights</b>	<b>Charge remaining</b>
●●●○	99-75%
●●○	75-50%
●○	25-50%
○	25% or less

### **DURING USE**

The lights will illuminate backwards and forwards during use in a cycling pattern.

- Your head shaver cannot be used when it is charging.
- When empty, the battery should be charged for 2 hours for a full charge and will provide up to 60 minutes of shaving time.
- To preserve the life of the battery do not charge the battery after each use. The best practice is to use the shaver until there is only a single light left flashing and then recharge.

Note: Some countries will require the use of a plug adaptor that is not included with your shaver.

### **SHAVING YOUR HEAD**

1. Hold the head shaver body in the palm of your hand. Press the On / Off switch to turn the head shaver on.
2. Press the five cutting heads against your scalp. It is not necessary to press hard to shave. Pressing hard does not cut closer and could increase irritation. The cutting head will flex to follow the contours of your head.
3. Move the shaver slowly around your head. You may use linear strokes, or rotating motion, whichever you feel is most effective picking up and cutting your hair.
4. Use a hand held mirror to check the back of your head to confirm a complete and thorough shave. You may also use your other hand to feel for complete and consistent cutting.
5. It is not recommended to use the head shaver for facial hair.
6. When finished turn the shaver off.

## **TURBO FEATURE**

Use the Turbo feature to shave thick hair. Press the turbo button to operate the shaver in Turbo mode. The charging indicator light pattern will speed up. Press the turbo button again to deactivate turbo mode.

## **SHAVING TIPS**

- Do not attempt to shave head hair that is longer than 4 days growth or 2.0 mm. The Ultimate Series Rx7 head shaver is intended to maintain the shaved look and can be used daily or every two or three days.
- The Ultimate Series Rx7 head shaver cannot shave long hair down to the shaved length. If your hair is longer than 2.0 mm you should trim it down with a hair clipper first before using the head shaver.
- The Ultimate Series Rx7 head shaver can be used dry or it can be used with shaving cream or gel in the shower.

## **TRIMMING**

### **Pop-up Trimmer:**

The pop-up trimmer is located at the top of the shaver body. It can be used for trimming edges of beards, sideburns or ears.

1. To activate the trimmer, turn the shaver on. Slide down the release button for the trimmer to pop the trimmer up.
2. Use cutting strokes in the direction opposite to the direction that the trimmer folds away.
3. When finished fold the trimmer into its stored position.

Note: Lubricate teeth with oil every 6 months.

## **CLEANING & MAINTENANCE**

- Care for your product to ensure a long lasting performance. We recommend that you clean it after each use.
- The Ultimate Series Rx7 head shaver is designed to collect all the hair clippings while it cuts. This avoids clippings spilling onto bathroom counters or shower stalls making clean up easy.
- When cleaning your shaver, make sure it is turned off and disconnected from the charging cable.
- The shaver is washable and can be cleaned by rinsing under warm water.
- When using shaving creams or gels with the shaver it is especially important to clean after each use to prevent the gel from drying and clogging the cutters.

- When cleaning the external surfaces of the shaver, do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver head and neck assembly is designed to be detachable from the shaver body. Simply pull upwards from the neck of the shaver for easy release. To reattach the neck, align it with the neck attachment cavity so that it clips back into position.
- If your unit start pulsating, this can be simply resolved by applying a very small amount of light lubricating oil onto each separate cutter head whilst the unit is turned off.
- Place a small drop of oil onto a fingertip and then touch the oiled fingertip to each cutter head, gently wiping the oil onto the cutter. Wipe any excessive oil off the surface of the cutters. Re-oil only as required.
- Hair clipper oil, sewing machine oil, or olive oil are all suitable for this purpose.

Note: The cutter heads should be cleaned under running water after each use.

## **SAFETY MODE**

- Your head shaver will turn itself off and enter safety mode if the demand on the battery is too high. This can be because of inadequate cleaning or excessive hair clippings in the hair pocket.
- If this occurs, open and clean your shaver. The left and right charging indicator lights will flash for ten seconds. After an additional 5 seconds your shaver will reset itself and be ready to operate as normal.



# ACCESSORY ORDER FORM

Article	Part No.	Price each	Price each	Qty	Amount
		AUD	NZD		
Replacement Shaving Head & Cutters for HC7500AU	SP-HC7500AU-BA	\$39.95 AUD	\$44.95 NZD		\$
<b>IMPORTANT:</b> Pricing in effect at time of publication, inclusive of GST. Subject to change without notice. Postage & handling \$7.50 standard for Australia & New Zealand.					
		Sub Total			\$
		Postage & handling			\$ 7.50
		TOTAL			\$

For help or to place an order on the phone  
call Remington Customer Service:

- ① Australia: 1800 623 118 (toll free)
- ① New Zealand: 0800 736 776 (toll free)

**REMINGTON**<sup>®</sup>  
EST. NEW YORK 1937

Remington is a Registered Trademark  
of Spectrum Brands, Inc., or one  
of its subsidiaries.



## MAIL YOUR ORDER FORM TO:

### AUSTRALIAN RESIDENTS:

Spectrum Brands Australia Pty Ltd  
Locked Bag 3004  
Braeside, VIC 3195  
Australia

### NEW ZEALAND RESIDENTS:

Spectrum Brands New Zealand Pty Ltd  
PO BOX 9817  
Newmarket, 1149, Auckland  
New Zealand

## MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State:  Postcode:  DOB:  |  |

Contact No: Area Code:  Ph:

Product Model number:

Is this the first Remington shaver you have owned/purchased? Yes  No

Why are you returning this shaver?

Skin Irritation  Shave is not close enough  Product didn't meet expectation

Other:

**REMINGTON®**  
EST. NEW YORK 1937

**Spectrum Brands Australia Pty Ltd**

Locked Bag 3004  
Braeside, VIC 3195  
AUSTRALIA

Customer service in Australia: 1800 623 118  
E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)  
Website: [www.remington-products.com.au](http://www.remington-products.com.au)


**Spectrum Brands New Zealand Limited**

PO Box 9817  
Newmarket, Auckland 1149  
NEW ZEALAND

Customer service in New Zealand: 0800 736 776  
E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)  
Website: [www.remington.co.nz](http://www.remington.co.nz)

## CLEANING & LUBRICATION INSTRUCTIONS

- After each use, hold the shaver over a bin and remove the top of the shaving head.
- Pull the cutting head unit off the head assembly (fig. A).
- Empty the clippings that have collected inside the hair pocket into the bin.
- The head can be rinsed under a running tap (fig. B).
- Use a cleaning brush to remove any shaving debris.
- Shake off excess water and allow to dry before reassembly.
- To maintain optimum performance, the blades must be kept lubricated.
- Apply a very small drop of light oil onto the inside of each separate cutter head. Hair clipper oil or sewing machine oil are suitable for this purpose.
- Oil should be applied weekly or if the shaver begins to 'pulse' indicating lubrication is required.  
(Silicone based pressure pack lubricants are not recommended.)

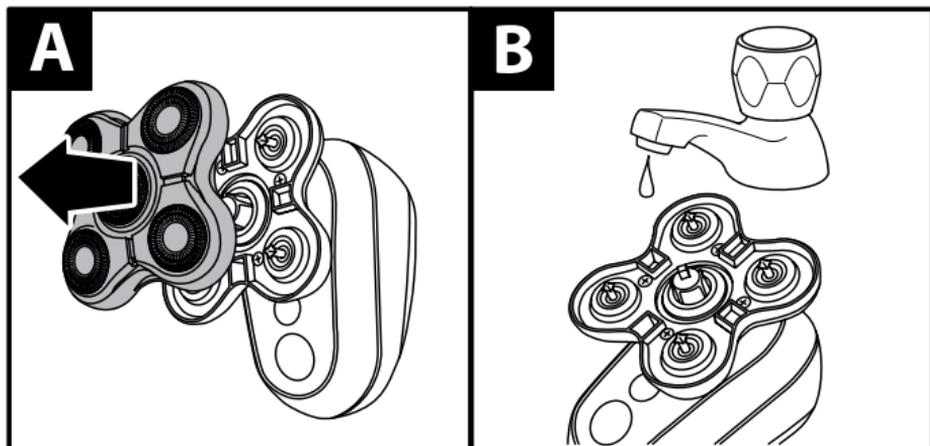

## REPLACING SHAVING HEADS & CUTTERS

Please refer to the specifications' table on page 5 of this manual that lists the correct replacement part number for your shaver.

It is very important to replace the shaving heads and cutters when necessary to ensure a close, comfortable shave without irritation.

We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturising lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace the shaving heads and cutters.

Please ensure you keep the neck of the head shaver when replacing the heads & cutters.

Replacement heads & cutters may be obtained from your local retailer, or directly from Remington®. Simply fill out the enclosed accessory order form - refer to page 8 & 9, or alternatively your order can be processed over the phone via the Remington® Service Hotline.

## **BATTERY REMOVAL**

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
  - Disconnect the charging adapter before removing the battery.
1. Ensure the device is discharged of all power. To do this, switch it on and allow it to run until it stops.
  2. Remove the head assembly by pulling it off.
  3. Using a small screwdriver, pry the front panel off the handle.
  4. Pry off then remove the two side panels.
  5. Using a small flat screwdriver, pry off the display panel.
  6. Unscrew the 4 screws and open the front housing.
  7. Unscrew the 4 screws and remove the rear housing.
  8. Pry the battery from the circuit board.
  9. Disconnect the battery from the two connection wires.
- The battery is to be disposed of safely.
  - Do not attempt to operate the shaver once you have opened it.

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



### **Suitable for use in bath and shower.**

This product conforms to radio frequency interference requirements.  
Any product purchased and used commercially carries a limited 90 Day Warranty.

**Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited**  
**WARRANTY AGAINST DEFECTS**

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

**Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON**<sup>®</sup>  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

①Australia 1800 623 118 (toll free)

①New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2022 Spectrum Brands Inc.

Rev. 05/22

Part No. T22-7002634

Type: R29A

