

# QUICK SHAVE PRO TURBO ROTARY SHAVER



To register your product go to www.remington-products.com.au www.remington.co.nz

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

### READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

# WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is
  not working correctly, if it has been dropped or damaged, or dropped
  into water. If the supply cord or plug of the appliance is damaged it
  must be replaced by the manufacturer, its service agent or similarly
  qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.

- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug the power adaptor from the appliance before cleaning the appliance in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

### SAVE THESE INSTRUCTIONS

## R8500AU QUICK SHAVE PRO TURBO ROTARY SHAVER USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Quick Shave Pro Turbo rotary shaver. Inside this manual you will find tips on using and caring for



### **KEY PARTS**

- 1. On/Off Switch
- 2. Shaving Head
- 3. Pop Up Trimmer (not shown)
- 4. 360° Pivoting Neck
- 5. LED Battery Indicators
- 6. Charging Pins
- 7. Trimmer head
- 8. Adjustable comb

- 9. Storage bag
- 10. Deep cleansing brush
- 11. Brush mount
- 12. Daily cleansing brush
- 13. Pre-shave brush

### Also Includes:

- Head Guard
- Cleaning Brush
- Power Adaptor

R8500AU SPECIFICATIONS	
Power System	Cordless
Initial Charge Time	1.5 Hours
Full Charge Time	1.5 Hours
Cordless Run Time	60 Minutes
Quick Shave	Yes (5 Minutes)
Turbo Function	Yes
Indicators	3 LEDs / Fuel Gauge
Voltage Type	Worldwide 100 - 240V
Waterproof	Yes
Replacement Head & Cutters	SPR-XR1415AU

**Power System:** Cordless - shaver can only be used without the power cord. The shaver will not run while it is charging.

Quick Charge: A 5 minute quick charge will allow for 3 minutes shaving.

**Turbo:** To activate the Turbo function, with the shaver already on, press the On/Off button. The LEDs will flash faster to denote that the Turbo speed is active. To deactivate the Turbo function press the On/Off button and the shaver will turn off.

Indicators: Lights display the battery charge level

- Low Charge: Bottom LED light will flash for 5 seconds to indicate the shaver needs to be recharged. There is less than 3 minutes of run time remaining.
- Charging: The LEDs will successively light up to indicate the battery is taking a charge.
- Full Charge: When fully charged the entire LED lights strip will be on for 5 minutes and then turn off.

**Voltage type:** Worldwide voltage - shaver automatically adapts to an outlet voltage between 100V and 240V.

**Travel Lock:** To engage the travel lock, press and hold the On/Off button for 5 seconds. The bottom and top LED will flash for 5 seconds. While the travel lock is set, if the On/Off button is pressed, the bottom and top LED will flash for 5 seconds to indicate the shaver is in travel lock mode. To deactivate the travel lock, press and hold the On/Off button for 5 seconds. The bottom and top LED will flash for 5 seconds and the shaver will turn on.

Note: Some countries will require the use of a plug adaptor that is not included with your shaver.

### CHARGING

Before using, read the important safety instructions in this manual.

- 1. Ensure the product is switched off. Connect the shaver to the adaptor
- 2. Connect to the mains and charge for 1.5 hours when using for the first time. This first charge is important to the shaver's battery life.
- 3. When plugged, the LEDs will successively light up.
- When empty, the battery should be charged for 1.5 hours, and will provide 60 minutes of shaving time.
- 5. To preserve the life of the batteries, allow them to fully discharge every six months, and then recharge them for 1.5 hours.

### Caution:

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

### **SHAVING**

- 1. Press power button to turn on. (Diagram A)
- 2. Shave face and neck using short, circular strokes. (Diagram B)
- 3. After shaving, turn the shaver off. (Diagram A)





### **SHAVING TIPS**

- The Remington Quick Shave Pro Turbo rotary shaver is waterproof. You
  may use shaving foam or gel with your shaver. You may also shave in
  the shower.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so that all three heads are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow circular stroking movement.
- The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin to avoid skin irritation and/or damage to the rotary heads.
- As with every shaver, your shave will improve over time. Allow up to four weeks of daily shaving to develop an effective shaving style and for your skin to adjust to the new shaver. The adaptation period might take a little longer if your skin is sensitive, if you are switching from a different method of shaving, or if you alternate between shaving methods.

### **TRIMMING**

### Pop-up Trimmer:

- Pull down the pop up trimmer release button to engage trimmer (Diagram C).
- Trim and shape sideburns and facial hair to the desired length and shape.
- 3. Close trimmer by pressing down (Diagram D).





Note: Lubricate teeth with oil every 6 months.

# PLEASE USE BLOCK LETTERS \* INDICATES REQUIRED INFORMATION

POSTCODE:	STATE:	CITY:	ADDRESS:	CARD HOLDER NAME:	Expiry Date	Card Number	Please cha	IS .	I enclose m	*PAYMENT INSTRUCTIONS:	*CONTACT NUMBER:	*STATE:	*CITY:	*ADDRESS:	*NAME:
OG GIVA	2 DANATI IDE.			ER NAME:			Please charge this purchase to my credit card account: Mastercard Visa		<ul> <li>I enclose my cheque/money order (make payable to Spectrum Brands Australia Pty Ltd or</li> <li>Spectrum Brands New Zealand Limited)</li> </ul>	STRUCTIONS:	WBER: AREA Ph:	*POSTCODE:			

# SPARE PARTS ORDER FORM

Article	Part No.	Price each AUD	Price each NZD	Qty	Qty Amount
Replacement Shaving Heads & Cutters for R8500AU	SPR-XR1415AU	\$39.95 AUD	\$44.95 NZD		\$
Beard Trimmer Attachment for R8500AU	SPR-XTAU	\$37.95 AUD	N/A		€
Brush Mount for Brush Heads	SPR-XFOAU	\$9.95 AUD	\$14.95 NZD		\$
Pre-Shave Brush	SPR-XFMAU	\$19.95 AUD	\$24.95 NZD		\$
Charcoal Infused Deep Cleansing Brush	SPR-XFNAU	\$19.95 AUD	\$24.95 NZD		\$
Daily Cleansing Brush	SPR-XFDAU	\$19.95 AUD	\$24.95 NZD		\$
Shaver Saver: Aerosol Spray Cleaner	SP4	\$11.95 AUD	\$14.95 NZD		\$

IMPORTANT: Pricing in effect at time of publication, inclusive of GST. Subject to change without notice Postage & handling \$7.50 standard for Australia & New Zealand.

<del>€</del>	\$7.50	\$
Sub Total	Postage & handling	TOTAL

For help or to place an order on the phone call Remington Customer Service:

- Australia: 1800 623 118 (toll free)
- New Zealand: 0800 736 776 (toll free)

# MAIL YOUR ORDER FORM TO: **ZEMINGTON**

**AUSTRALIAN RESIDENTS:** Locked Bag 3004 EST. NEW YORK 1937

Remington is a Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

Braeside, VIC 3195

Australia

Spectrum Brands New Zealand Pty Ltd **NEW ZEALAND RESIDENTS:** PO BOX 9817 Spectrum Brands Australia Pty Ltd

PO BOX 9817 Newmarket, 1149, Auckland New Zealand

### CLEANING & MAINTENANCE

Note: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

The shaver is a washable appliance. The head and body may be cleaned under warm water.

### Caution:

When cleaning the external surfaces of the shaver, do not use strong detergents or other chemicals.

To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.

Note: The shaver head and neck assembly is designed to be detachable from the shaver body. Simply pull upwards from the neck of the shaver for easy release.

To reattach the neck, align it with the neck attachment cavity so that it clips back into position.

### **CLEANING YOUR SHAVER**



- Head & cutter (hair pocket) assembly
- 2. Detachment grooves
- 3. Neck assembly
- 4. Neck attachment cavity

### **DAILY CLEANING**

- Locate the detachment grooves on the head & cutter assembly. Gently
  pull to detach the hair pocket from the neck assembly (Diagram E).
- 2. Tap out excess hair shavings (Diagram F).
- 3. Rinse the head of the shaver in running water.
- Gently reattach the hair pocket to the neck assembly until it locks in place on all three sides. The hair pocket may be reattached in any configuration (Diagram K).

11















### **WEEKLY CLEANING**

- 1. Perform the daily cleaning steps 1 and 2.
- 2. Place the body of the shaver aside.
- Slide the blue cutter support frame upwards towards the direction of the two cutters to release it from the assembly (Diagram G).
- **4.** Lift and remove the cutter support frame away from the cutters.
- Remove the cutters (Diagram H).
- **6.** Thoroughly rinse away any debris from inner and outer cutters with warm water.
- **7.** Replace the inner cutters (Diagram I).
- 8. Hold the cutter support frame with the raised centre section facing upwards. Place it over the cutters so that the centre mouth opening is facing the bottom cutter. Slide the cutter carrier downwards until the locking tab locks under the centre triangle (Diagram J).
- 9. Lubricate each cutter with Remington Shaver Saver (SP4).
- Gently reattach the hair pocket to the neck assembly until it locks in place on all three sides. The hair pocket may be reattached in any configuration (Diagram K).

### REPLACING SHAVING HEADS & CUTTERS

Please refer to the specifications' table on page 5 of this manual that lists the correct replacement part number for your shaver.

It is very important to replace the shaving heads and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- Irritation: As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturising lotion.
- Pulling: When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace the shaving heads and cutters.

Replacement heads & cutters may be obtained from your local retailer, or directly from Remington®. Simply fill out the enclosed accessory order form - refer to page 9 & 10, or alternatively your order can be processed over the phone via the Remington® Service Hotline.

### BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The R8500AU contains a lithium-ion battery. Once the shaver has
  reached the end of its life, to ensure proper disposal of the product,
  please take the appliance to a recycling centre, where the internal
  rechargeable battery should be removed by a professional and
  recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

**Caution:** Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.



### Suitable for use in bath and shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

### MONEY BACK OFFER - AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:
Address:
City:
State: Postcode: DOB:
Contact No: Area Code: Ph:
Product Model number:
Is this the first Remington shaver you have owned/purchased? Yes No
Why are you returning this shaver?
Skin Irritation Shave is not close enough Prefer a rotary/foil shaver
Other:



**Spectrum Brands Australia Pty Ltd** Locked Bag 3004 Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118
E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz Website: www.remington.co.nz

### 0

## Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

### Manufacturer, We or us means:

- for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
- for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
   You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
- 3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (Warranty Period). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### **Warranty Conditions**

- 4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
- Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
- 6. The warranty granted under clause 3 is limited to repair or replacement only.
- Any parts of the Goods replaced during repairs or any product replaced remain the
  property of the manufacturer. In the event of the Goods being replaced during the
  Warranty Period, the warranty on the replacement Goods will expire on the same
  date as for the Warranty Period on the original Goods which are replaced.

- 8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
- 9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced:
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
- 10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
- 11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
- 12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

### Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

### Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

**NEW ZEALAND** 

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz Website: www.reminaton.co.nz



### REMINGTON SERVICE HOTLINE

②Australia 1800 623 118 (toll free)

New Zealand 0800 736 776 (toll free)

### AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details. ® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2022 Spectrum Brands Inc.

Rev. 03/22

Part No. T22-7001004

Type: R19A

