



Russell Hobbs



ELITE CARVE ELECTRIC KNIFE

2 YEAR WARRANTY

RHEK600

RHEK600_IB_FA_270617
Part no. T22-9000715

INSTRUCTIONS & WARRANTY

IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including the following:

Read all instructions before, and follow whilst using this appliance.

1. To protect against electrical hazards, do not immerse cord, plugs or appliance in water or other liquid.
2. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
3. Do not operate the knife in water or under running water.
4. Do not use outdoors.
5. Do not let the cord hang over the edge of a table or counter top.
6. Do not let the cord come in contact with hot surfaces, including stoves.
7. Carefully route the power cord to avoid damage from the knife blades while cutting.
8. Always store blades with cutting edge away from you.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. This appliance is NOT a toy. Children should be supervised to ensure they do NOT play with this appliance.
11. Always follow the instructions when using this appliance.
12. There are no user serviceable parts. If the power cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid hazard.
13. Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner. Contact Customer Service for examination, adjustment, repair or replacement.
14. Unplug from wall outlet when not in use, before putting on or taking off parts and before cleaning.
15. Unplug when changing blades.
16. CAUTION: Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Avoid contacting moving parts.
17. To disconnect, turn off the wall power outlet then grasp the plug and remove from wall power socket. Never pull by the cord.
18. Do not use accessories or attachments other than those supplied as specifically for use with the electric knife.
19. Do not use the electric knife for any purpose other than that described in these instructions.
20. Misuse may cause injury.
21. For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD), also often referred to as a 'Safety Switch'. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.




This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels, and other residential type environments;
- Bed & breakfast type environments.

SAVE THESE INSTRUCTIONS

Congratulations on the purchase of your new Russell Hobbs Elite Carve Electric Knife. Each unit is manufactured to ensure safety and reliability. Before using the Electric Knife for the first time, please read this instruction booklet carefully and keep it for future reference. Pass it on if you pass on the product.

When using this appliance, basic safety precautions should always be followed.

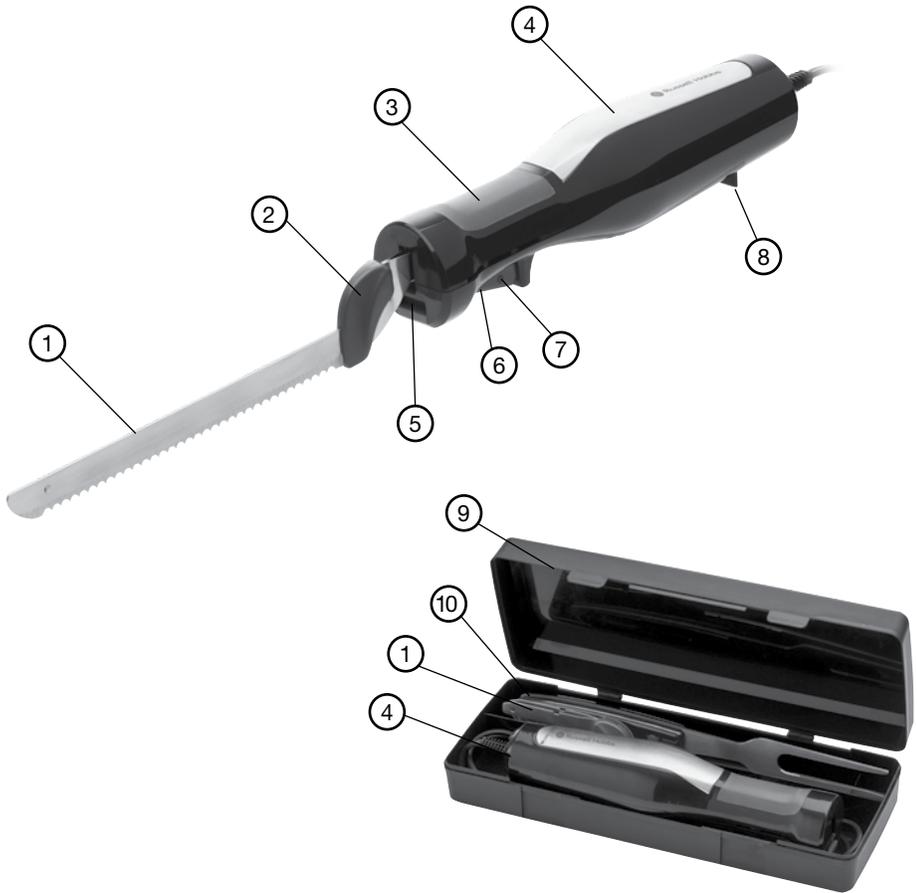


- 1. Slicing blades
- 2. Grip tabs
- 3. Soft-grip handle
- 4. Knife base
- 5. Blade release button
- 6. Operating trigger (ON/OFF)
- 7. Safety lock pin
- 8. Knife stand
- 9. Storage Case
- 10. Carving Fork


BEFORE FIRST USE

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Remove and save instruction booklet.
- All parts of the electric knife need to be thoroughly cleaned before being used for the first time (see 'Care and Maintenance').


HOW TO USE

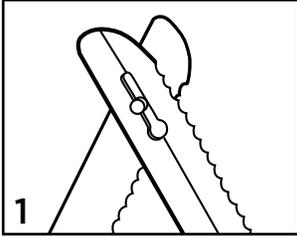


1
Slip the rivet at the top of one blade into the keyhole slot on the other.

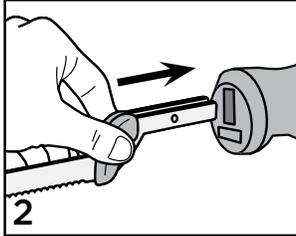


2
Holding the grip tabs, with the serrated blades edges down and away from you, slide blades into the knife base slots until both blades click into place.

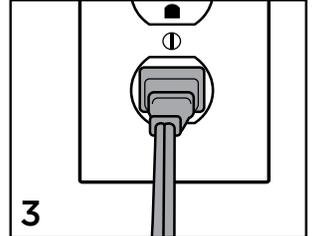

3
Plug power cord into outlet.

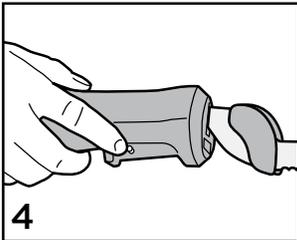

4
With the serrated edges down, press the right side of the safety lock pin so that it extends towards Unlock .

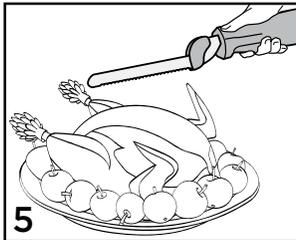

5
Squeeze the operating trigger to turn the unit on. Guide the knife blades down through the food.


NOTE:

- When the safety lock pin is in the Lock position , the operating trigger cannot be pressed inward, and the knife will not operate, even when plugged in.
- Use the carving fork to hold the food.
- Use an even downward motion and don't saw at the food. The blades are designed to automatically slide back and forth for cutting. Let them do the work for you.


CAUTION:

- Make sure the knife is unplugged and the safety lock pin is in the Lock position  before inserting or removing blades.
- Never place your hands close to or over the blade to support it while operating the knife.


HOW TO REMOVE THE BLADES

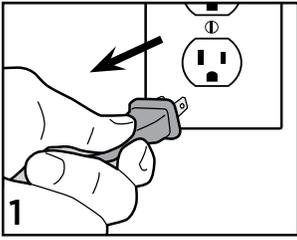


Unplug power cord.

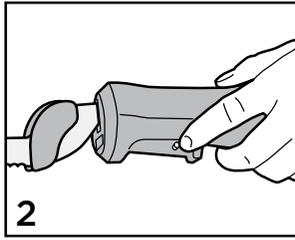

With the serrated edges down, press the left side of the safety lock pin so that it extends towards Lock .

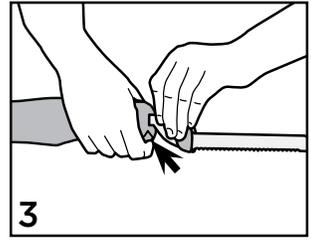


Press the blade release button on the knife handle, located just behind the grip tabs on the blades.

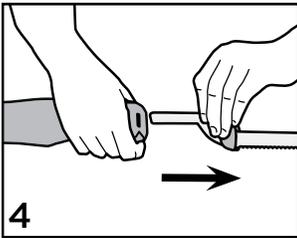


Grip the blades by the grip tabs and pull away from the knife handle.


CARE AND MAINTENANCE

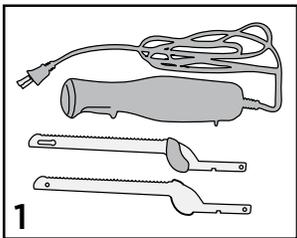

Make sure safety lock pin is in Lock  position, knife is unplugged, and blades are removed.

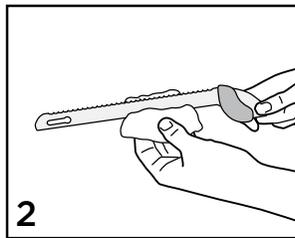

Wash blades, carving fork, and storage case with hot water and dish soap or in the dishwasher (top rack only).

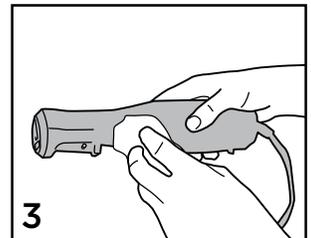

Clean knife handle and cord with a damp cloth or sponge.

CAUTION:

Electrical Shock Hazard: Do not immerse the electric knife handle or cord in water or other liquid.

Note: To avoid damaging the electric knife, do not use abrasive cleaners or scouring pads.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118

Email: info@spectrumbrands.com.au

Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

TollFree: 0800 736 776

Email: service@spectrumbrands.co.nz

Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or **us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for a period of 2 years (**Warranty Period**) from the date of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
 5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
 6. The warranty granted under clause 3 is limited to repair or replacement only.
 7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
 8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
 9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
 10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
 11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
 12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.
- Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty

If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.



www.russellhobbs.com.au

www.russellhobbs.co.nz