

REMINGTON®

Curl and Straight Confidence Rotating Hot Air Styler










AS8606

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

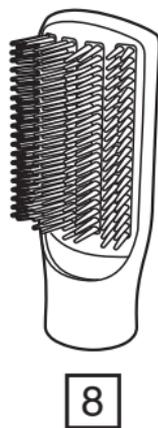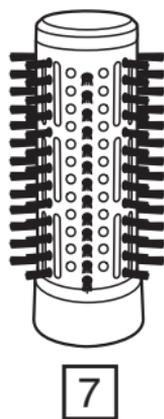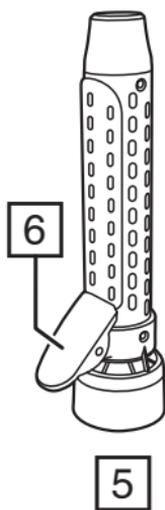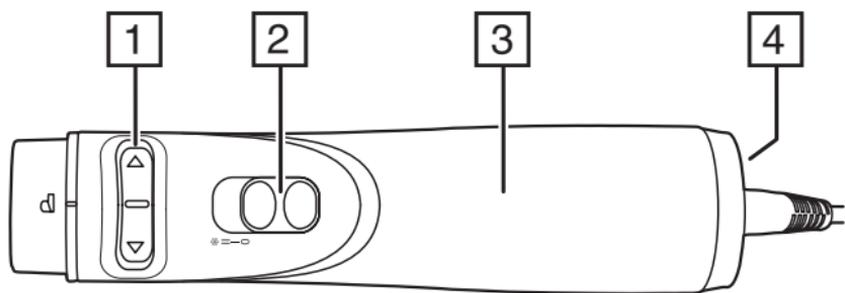

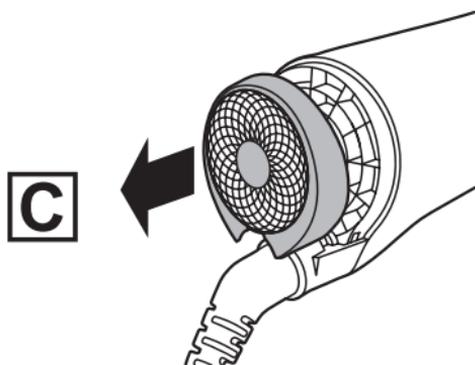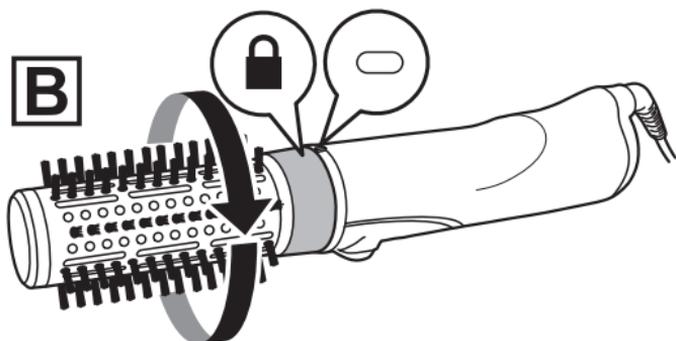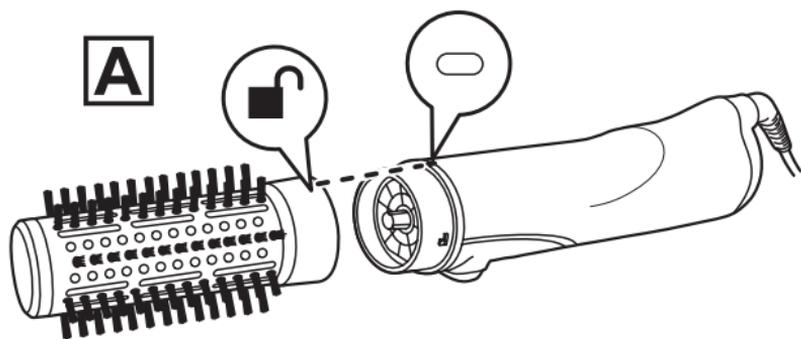

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 - ⊘ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
 - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.

- Keep direct airflow away from eyes or other sensitive areas.
- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-------------------------------|-----------------------------|
| 1. Rotation switch | 7. 40 mm soft bristle brush |
| 2. Temperature control switch | 8. Firm paddle brush |
| 3. Handle | 9. Pre-styling nozzle |
| 4. Inlet grille | Not shown: |
| 5. 30 mm rotating tong | • Luxury storage case |
| 6. Tong clip | • Protective cover |
-

INSTRUCTIONS FOR USE

- Plug the product into the mains power supply.
- Select your attachment before you turn on the appliance.

To fit an attachment:

- Align the  symbol on the attachment with the  mark on the body (fig. A).
- Turn the ring on rotating attachments (30 mm tong and 40mm brush), or the attachment itself (paddle brush or pre-styling nozzle) until the  symbol is aligned with the  mark to secure (fig. B).

To remove an attachment

- Align the  symbol with the  mark and pull the attachment off the handle.

Temperature settings

- There are three temperature settings on the styler High, Low and Cool (for setting the style).
- To turn the appliance on slide the temperature control switch to **I** for low heat, **II** for high heat or  for the cool setting.

- Select the appropriate temperature for your hair type:

Temperature	Hair Type
Low	Thin/fine, damaged or bleached hair
High	Thick and difficult to style hair

Rotation settings

- Only the 30 mm tong and the 40 mm brush rotate.
- To use the rotating function press the right arrow (▶) on the rotation switch to rotate the attachments clockwise and the left arrow (◀) to rotate the attachments anti clockwise.
- NOTE: The brush and tong attachments will only start rotating when a temperature setting has been selected.

Prepare the hair for styling

- Wash and condition the hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- Using the pre-styling nozzle rough dry the length and roots until 80% dry.
- Divide the hair into sections, style the lower layers first.

Create volume and shape using the 40mm rotating brush

- To dry your roots and add volume, place the brush underneath the section close to the roots and hold for a few seconds, lifting the hair as you dry.
- Move the styler downwards through the hair section, at the same time rotate the brush away from the head by pressing and holding ◀ or ▶ as required.
- Keep moving the styler downwards to resist the brush rotation. Doing this will create tension through the section of hair.
- If the brush spins too quickly release the rotation switch and remove the brush from your hair.
- To create shape, continue rotating the brush until you reach the ends of the hair and then roll the ends under.
- For even more volume, wrap the bottom of the hair section around the brush. Press and hold the applicable rotation switch (◀▶) and wind the entire length of the section around the barrel, stopping at the roots. Release the rotation switch and hold the brush in the hair for a few seconds or until the section is dry.
- Repeat this around the head.
- Let the hair cool before styling.
- Let the attachment cool before removing.
- Place the protective cover over the brush head to protect the bristles from damage in storage.

Create loose curls with the 30 mm rotating tong

- Place the end of a section of hair underneath the tong clip.
- Press and hold the applicable rotation switch (◀▶) and wind the entire length of the section around the barrel, stopping at the roots.
- Release the rotation switch and hold the tong in your hair for 10 seconds or until the section is dry.
- Unwind the tong and release the curl.
- Repeat this around the head.
- Let the hair cool before styling.
- Let the attachment cool before removing.

Create smooth, sleek hair using the firm paddle brush

- Starting at the roots, slowly brush through each section just as you would with a normal brush.
- To add additional volume tip your head upside down and brush the underneath of your hair.
- When dry use your fingers to shape the hair and ends.
- Let the attachment cool before removing

Cool setting

- To set your style whilst using any of the attachments, use the cool setting. To operate slide the temperature control switch to the ❄️ position.

STORAGE, CLEANING AND MAINTENANCE

- After use, turn the appliance off by moving the temperature control switch to the **O** position.
- Unplug the appliance and allow to cool before cleaning and storing away.
- Wipe all surfaces with a damp cloth
- Don't use harsh or abrasive cleaning agents or solvents,
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the inlet grille.
- Remove the grille as shown (fig. C), clean with a cloth or soft brush, then replace it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Ref. No. AS8606

Type No. AS13A

19/UK/ AS8606 T22-7001155 Version 09 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.