

# REMINGTON®

EST. NEW YORK 1937





## **Apprentice Hair Clipper HC5020**

 [remington-europe.com](http://remington-europe.com)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

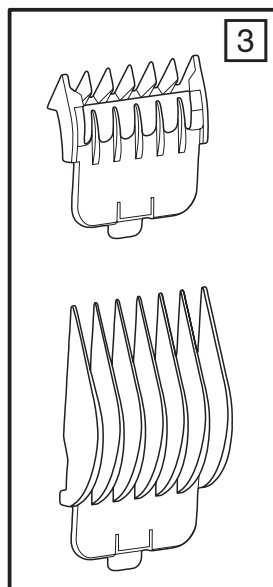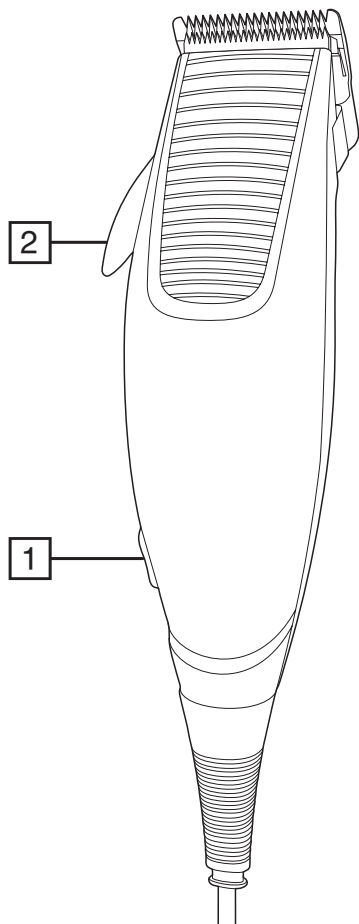

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- **WARNING:** Keep the appliance dry.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- Do not leave the appliance unattended while plugged in.
- Keep the power plug and cord away from heated surfaces.
- Make sure the power plug and cord do not get wet.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

- |                             |                   |
|-----------------------------|-------------------|
| 1. On/off switch            | <i>Not shown:</i> |
| 2. Taper lever              | • Neck brush      |
| 3. 5 attachment guide combs | • Cleaning brush  |
|                             | • Styling comb    |

---

## INSTRUCTIONS FOR USE

---

### BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Before cutting, always comb the hair so it is tangle free and dry.

## TO ATTACH A COMB

1. Hold the comb with its teeth upward.
2. Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper blade.
3. Gently push the back of the comb down so it snaps into place.

## TO REMOVE THE COMB

- Holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.

Guide Combs	Hair Length
1 (Grade 1)	3mm
2 (Grade 2)	6mm
3 (Grade 3)	9mm
4 (Grade 4)	12mm
5 (Grade 5)	18mm

- Each comb attachment is marked accordingly on its outside middle surface (3mm, 6mm, 9mm, 12mm, 18mm).
- Use the clipper without any fixed combs for trimming hair close to the skin.
- This will trim hair to 1mm, holding the clipper so the blades are perpendicular to the skin will trim hair to 0.5mm.
- This is with the taper setting set at the closest gap between the blades.

## INSTRUCTIONS FOR CUTTING HAIR

For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.

### STEP 1 – NAPE OF THE NECK

1. Use 3mm or 6mm guide comb.
2. Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
3. Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

### STEP 2 – BACK OF THE HEAD

With the 12mm comb attached, cut the hair at the back of the head.

### STEP 3 – SIDE OF THE HEAD

With the 3mm or 6mm guide comb attached, trim sideburns. Then change to the longer 12mm or 18mm guide comb and continue to cut up to the top of the head.

#### **STEP 4 – TOP OF THE HEAD**

- With the 12mm or 18mm guide comb attached, cut hair on top of the head against the direction in which the hair normally grows.
- For longer hair on top, use without a guide comb. Lift the hair on top of the head with a small hand comb. Cut over the hand comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- Always work from the back of the head.

#### **STEP 5 – THE FINISHING TOUCHES**

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

#### **TAPER LEVER**

The taper lever adjusts the length of cut when not using comb attachments.

It is suggested to set the blades closest together when using the comb attachments. Half grade sizes can be achieved by using the taper lever with comb attachments.

---

### **CARE FOR YOUR HAIRCLIPPER**

---

Your clipper is fitted with high quality blades. To ensure long lasting performance of your clipper, clean the blades and unit regularly. Always keep the attachment guide comb on the trimmer blade.

#### **AFTER EACH USE**

- Ensure the clipper is switched off and disconnected from the mains before cleaning.
- Brush the accumulated hair from the blades.
- Do not submerge the clipper in water.
- To clean unit, wipe with damp cloth and dry immediately.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

#### **EVERY SIX MONTHS**

- At regular intervals the blade set should be removed and cleaned.
- The blade set can be removed and reinstalled by using a screwdriver.
- Brush out hair and do not use water or cleaners on the blade set or internal body housing.

**CAUTION:** Do not use liquid cleaners on the blades or harsh or corrosive chemicals on the blade casing.

- Always use a soft brush to remove the accumulated hairs.
- Always store this appliance and cord in a moisture-free area.
- Do not wrap the supply cord around the appliance.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.


\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

### IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

# **Ref. No. HC5020**

## **Type No. RG043A**

21/UK/ HC5020 T22-7002434 Version 10 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[remington-europe.com](http://remington-europe.com)

© 2021 Spectrum Brands, Inc.