

REMINGTON®

EST. NEW YORK 1937



QuickCut Pro Hair Clipper HC4300

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

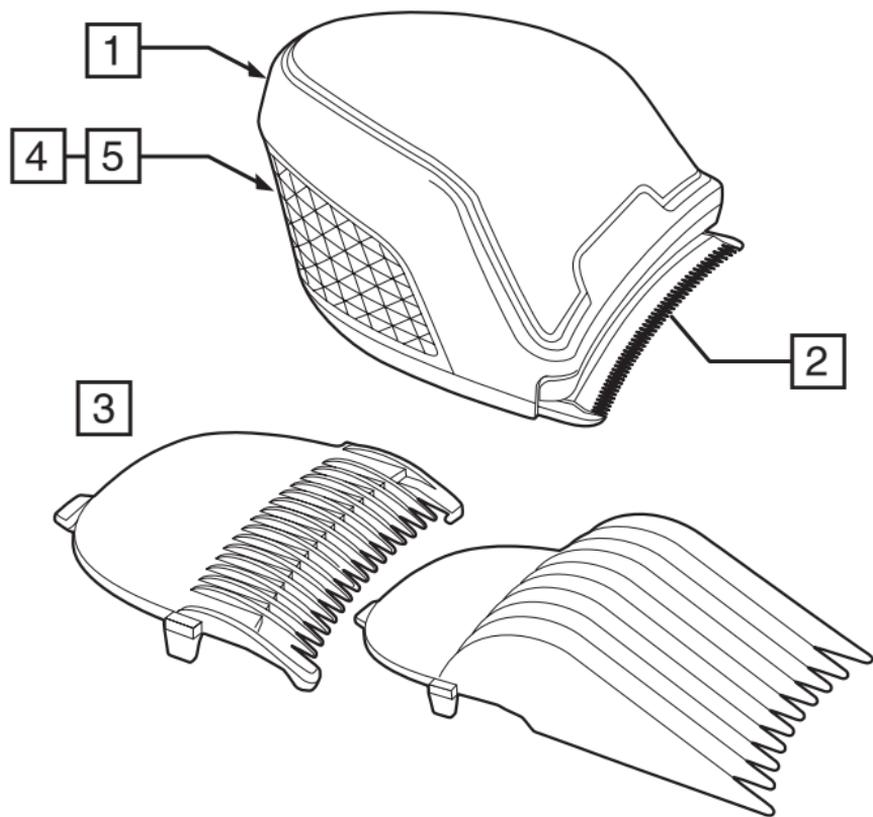


Fig. 1



Fig. 2



Fig. 3



Fig. 4

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  The blades are washable under a running tap.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- **WARNING:** Detach the appliance from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-4515U.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.

- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|------------------------------|-------------------|
| 1. On/off/turbo switch | <i>Not shown:</i> |
| 2. Blade set | • Cleaning brush |
| 3. 12 attachment guide combs | • Oil bottle |
| 4. Charger connector | • Adaptor |
| 5. Charging indicator | • Travel pouch |

GETTING STARTED

CHARGING YOUR APPLIANCE

Note: It is recommended to fully charge your appliance before using for the first time. Please refer to the charge times shown in this book.

- Connect the product to the adaptor and then to the mains.
- When charging the charge indicator will slowly flash.

CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED blinks
Fully charged	LED solid

- Run time from fully charged is up to 70 minutes.
- Charge time from empty is 4 hours.

Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

QUICK CHARGE FUNCTION

- 5 minutes charging will give an emergency burst of run time.

INSTRUCTIONS FOR USE

- For corded use connect the product to the adaptor, then to the mains.
- CAUTION Extended mains only use will result in the reduction of the battery life.

CORDLESS USE

- When the unit is switched on and fully charged, the product can be used in cordless mode for up to 70 minutes.
- Switch the product on by pressing the on/off switch.

BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Before cutting, always comb the hair so it is tangle free and dry.

Guide Comb	Cutting length
1 (Grade 0)	1.5mm
2	2mm
3	2.5mm
4 (Grade 1)	3mm
5	4.5mm
6 (Grade 2)	6mm
7 (Grade 3)	9mm
8 (Grade 4)	12mm
9 (Grade 5)	15mm
10 (Grade 6)	18mm
11 (Grade 7)	21mm
12 (Grade 8)	25mm

- Use the clipper without any fixed combs for trimming hair close to the skin.
- This will trim hair to 1mm, holding the clipper so the blades are perpendicular to the skin will trim hair to 0.5mm.

TO ATTACH A COMB

- Hook the front edge of the comb to the front teeth of the wide trimmer blade. Then push the back of the comb down until it snaps in place.

TO REMOVE THE COMB

- Push up the back of the comb until it clicks off the clipper blade.

INSTRUCTIONS FOR CUTTING HAIR

- The QuickCut Clipper's ergonomic design provides many different ways of holding the clipper in use.
- For clipping the top of the head (see fig. 1).
- For clipping the back of the head (see fig. 2).
- For clipping the sides of the head (see fig. 3).

- For detailing (see fig. 4).
- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.
- For one all over cut length, attach the desired guide comb and slowly guide the clipper through the hair against the direction the hair normally grows.
- Remove the guide comb. To produce a clean straight line at the sideburns and the base of the neck, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

The following instructions are for those users who want different trimming lengths on the sides, back and top of the head

STEP 1 – NAPE OF THE NECK

- Set the comb to 3mm or 6mm.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 – BACK OF THE HEAD

- With the comb set at 9mm or 12mm, cut the hair at the back of the head.

STEP 3 – SIDE OF THE HEAD

- With the comb set at 3mm or 6mm, trim sideburns. Then change to the longer 9mm guide comb and continue to cut the top of the head.

STEP 4 – TOP OF THE HEAD

- Use the longer length comb attachment and set it to 12mm or 15mm then cut hair on top of the head against the direction in which the hair normally grows.

STEP 5 – THE FINISHING TOUCHES

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck and around the ears.
- To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

TURBO

- To run in Turbo mode, slide the on/off switch to the turbo position.

CARE FOR YOUR HAIRCLIPPER

- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
- Always keep the clipper in the provided travel pouch.
- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Do not use harsh or corrosive cleaners on the unit or blades.
- Cleaning should be done with a soft brush.
- After each use - brush the accumulated hair from the blades.

WASHABLE CLEANING

Note: Never rinse, wash or otherwise subject this product to liquid whilst the power cord is connected.

- The Clipper is fully washable for easy cleaning.
- Ensure the appliance is switched off and unplugged from the mains.
- For best results, keep trimmer running while running it under the tap. Allow water to run through the washout port and over the blades. Recommended to rinse after each use.
- Ensure the clipper is dry after cleaning.
- For more thorough cleaning the blade set can be easily removed to wash any hair trimmings from the blades. To release the blade set, push the blade set release button found on the base of the clipper.
- Ensure the blades are dry after rinsing under the tap. To reattach, align the blade set onto the clipper and push the blade set towards the clipper body until it clicks into place.
- Place a small drop of cutter or sewing machine oil onto the blades at each end and at the middle point of the blades. Turn the unit on for a few seconds to distribute the oil then turn off and wipe off excess oil.

BATTERY REMOVAL

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. To do this, operate the device until it stops.
 2. Starting at the seam on either side of the top panel, pry open the seam working back and forth from one side to the other, following the seam until the top panel has been pried apart all the way from the rest of the clipper.
 3. Remove the two screws from the inner housing.

4. Gently pry off the side panel and remove it.
5. Gently pry off the back panel (with switch) and remove it.
6. Gently pull the inner housing straight up and away to remove the inner housing shell.
7. Remove the two screws from the inner structure located on each side of the unit.
8. Remove the motor assembly and motor bracket.
9. Gently pull the circuit board and battery up out of the clipper.
10. Cut the red and black wires which lead to the battery.
 - The battery is to be disposed of safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

ADAPTER SPECIFICATIONS

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	PA-4515U
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	4.5 V ===
Output current	1.5 A
Output power	6.75 W
Average active efficiency	≥75.88%
Efficiency at 10%	-
No load power consumption	≤0.1W

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. HC4300

Type No. HC10A

21/UK/ HC4300 T22-7002156 Version 09 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2021 Spectrum Brands, Inc.