

REMINGTON®

EST. NEW YORK 1937




PROluxe You™ Adaptive Hairdryer AC9800



remington-europe.com


Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

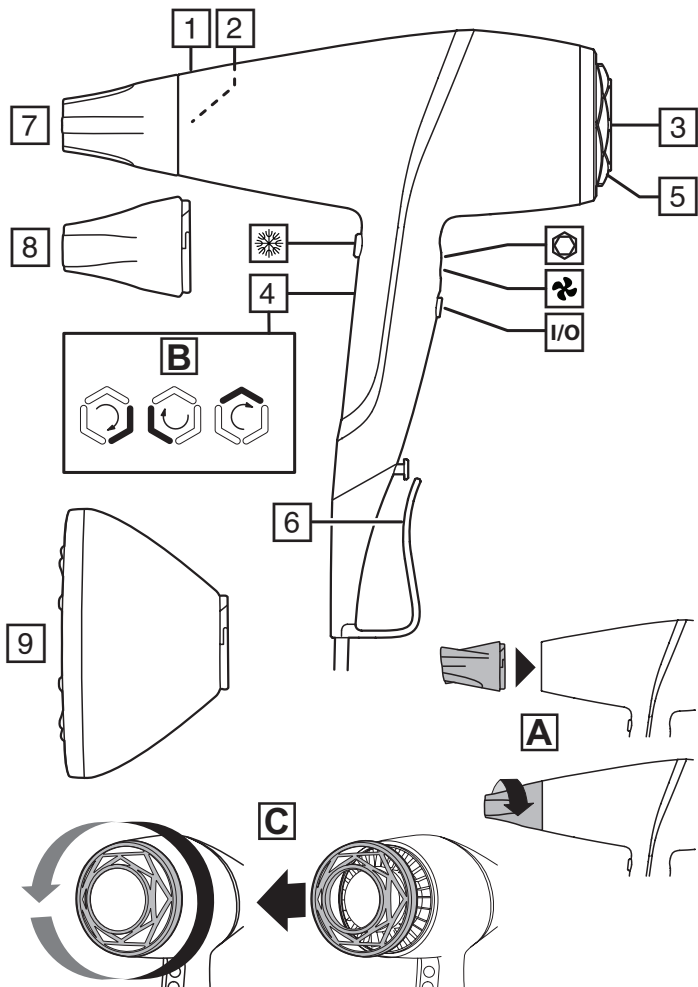





Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
 - Keep direct airflow away from eyes or other sensitive areas.
 - Do not allow any part of the appliance touch the face, neck or scalp.
 - During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.

- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.


PARTS

- | | |
|--|---|
| 1. Outlet grille with advanced ceramic coating | 8. Wide drying concentrator |
| 2. StyleAdapt™ Sensor | 9. Diffuser |
| 3. Display | Controls: |
| 4. StyleAdapt™ indicator |  On/off switch |
| 5. Removable inlet grille |  StyleAdapt™ button |
| 6. Hang up loop/cord storage |  Speed selector button |
| 7. Slim styling concentrator |  Cool shot on/off button |
-


INSTRUCTIONS FOR USE

 


- Wash and condition your hair as normal.
 - Squeeze out excess moisture with a towel and comb through.
 - Hairsprays contain flammable material – do not use while using this product.
 - Attach diffuser/concentrators by fitting them to the front of the hairdryer and twisting clockwise to lock (Fig. A). Take care when you do this because the attachments can become hot during use. TIP: Holding the cool shot button for a few seconds before removing accessories can help to reduce their temperature.
1. Plug the product into the mains power supply.
 2. Slide the on/off switch (**I/O**) to switch on.

StyleAdapt Mode

1. When first switched on your dryer will be in StyleAdapt™ mode. The StyleAdapt™ indicator on the dryer handle will spin (Fig. B) and **Quick Dry** will be shown on the display.
2. Select the desired mode using the  button. Each press of the button will select a different mode. The mode will be displayed on the display:



StyleAdapt Mode	Use for:	Recommended Accessory
Diffuse	Maintaining your curl's natural shape	Diffuser
Style	Smoothing and shaping	Slim styling concentrator
Quick Dry	Fast drying	Wide Drying Concentrator

 


3. Select the desired air speed using the speed selector  button. The segments lit up on the display will show the selected air speed:


Setting	Speed
	Low
	Medium
	High

4. During styling the StyleAdapt™ indicator will spin (fig. B) indicating that your dryer is learning about your hair and adjusting the air temperature to a heat that is personalised to you. The temperature changes are not shown on the display but happen quickly and automatically during styling.


Manual Mode

1. To override the StyleAdapt™ mode and use as a standard hairdryer, press the  button several times until the display shows **Manual** and the StyleAdapt™ indicator goes off. Note that in manual mode, your dryer will no longer be learning about your hair and adapting the heat.
2. Select the desired heat and speed setting using the speed selector  button. The segments lit up on the display will show the selected setting.

Setting	Speed/Heat
	Low speed / low heat
	Medium speed / medium heat
	High speed / high heat

3. To re-activate StyleAdapt™ mode press the  button until one of the StyleAdapt™ modes is selected and the StyleAdapt™ indicator is illuminated. Your dryer will now be learning about your hair and adapting the heat again.
4. After use, slide the (I/O) button to turn off and then unplug your dryer.

Cool shot

To set your style with cold air, press and hold down the  button whilst drying.

Memory Function

Each time you use your dryer it will automatically set itself to the last mode and speed used.

TIPS

- To create smooth styles and shape use the slim styling concentrator and a round hair brush (not included) whilst drying.
- For fast drying use the highest speed setting and wide drying concentrator.
- To help maintain your curls natural shape use the lowest speed setting and diffuser attachment. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of your head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on the low speed setting.
- CAUTION: Do not use the diffuser on the highest manual heat setting.

STORAGE, CLEANING AND MAINTENANCE

Let the appliance cool down before cleaning and storing away

- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the inlet grille.
- Remove the grille as shown (FIG C), clean with a cloth or soft brush, then replace it.

OVERHEAT PROTECTION

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air. Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to STORAGE, CLEANING AND MAINTENANCE to clean the grille/filter. If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. AC9800

Type No. D25A

21/UK/ AC9800 T22-7001886-B Version 06 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2021 Spectrum Brands, Inc.