

REMINGTON®

EST. NEW YORK 1937





PROluxe You Adaptive Hot Airstyler AS9880

 remington-europe.com

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

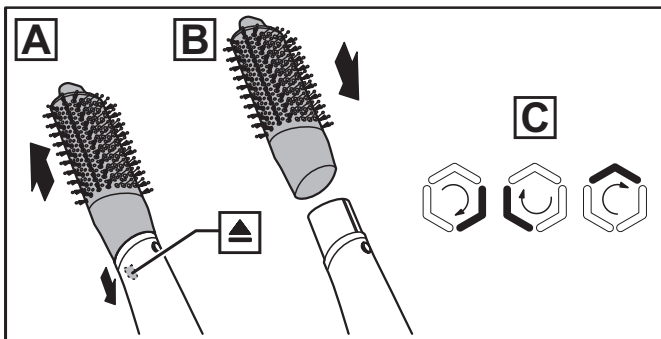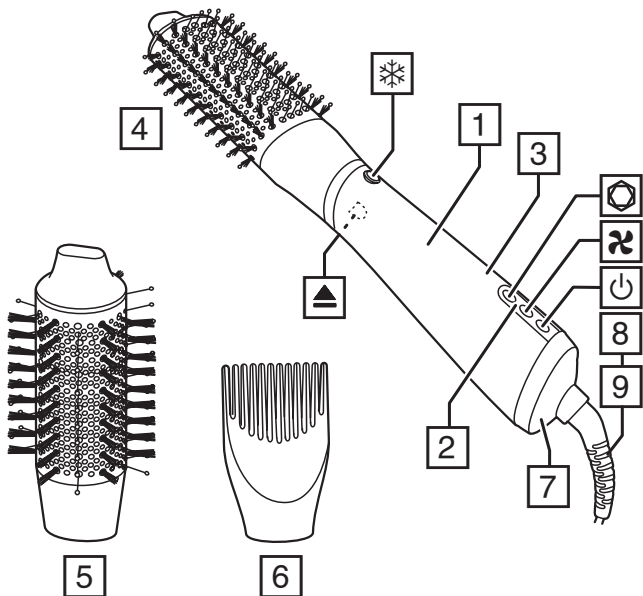

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.






WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
 - Never leave the appliance unattended when it is connected to the power supply.
 - Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.

- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- This appliance must not be connected to a switching device like a timer, or connected to a mains supply that may become interrupted by the electricity provider. This prevents a hazard which may occur if the thermal cut-out becomes activated for any reason, and is then reset by disconnection of the supply causing the appliance to reheat once the supply is restored.
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-----------------------------|---|
| 1. 1000W power handle | 9. Swivel cord |
| 2. Air speed LED indicators | Controls: |
| 3. StyleAdapt™ indicator |  On/off button |
| 4. Oval mixed bristle brush |  Speed selector button |
| 5. 50mm mixed bristle brush |  StyleAdapt™ button |
| 6. Root boost attachment |  Accessory release button |
| 7. Inlet grille |  Cool shot button |
| 8. Hang up loop | |

INSTRUCTIONS FOR USE

To fit/remove attachments


Fit the attachment before you turn on the appliance.

CAUTION: Attachments can become hot during use, let them cool before removing.


1. To fit an attachment, slide it into place onto the power handle until it clicks.




2. To remove, slide the accessory release button (▲) backwards and remove the accessory.

Prepare the hair for styling

- Wash and condition the hair as normal.
 - Squeeze out excess moisture with a towel and comb through.
 - Using the pre-styling nozzle rough dry the length and roots until 80% dry.
 - Divide the hair into sections, style the lower layers first.
1. Plug your air styler into the mains power supply.
 2. Press the  button to switch on.



StyleAdapt™ Mode




- StyleAdapt™ mode can only be selected if either of the two brushes are fitted. It is disabled if the root boost attachment is fitted.
1. When first switched on your air styler will be in StyleAdapt™ mode.
 2. Select the desired air speed using the speed selector () button. The air speed LED indicators will show the selected air speed:


Air speed LED indicators	Speed
	Low speed
	Medium speed
	High speed

3. During styling, the StyleAdapt™ indicator will spin (fig. C) indicating that your air styler is learning about your hair and adjusting the air temperature to a heat that is personalised to you. The temperature changes are not shown on the display but happen quickly and automatically during styling.

Manual Mode

1. To override the StyleAdapt™ mode and use as a standard air styler, press the  button until the StyleAdapt™ indicator goes off.
- Note that in manual mode, your air styler will no longer be learning about your hair and adapting the heat.
2. Select the desired heat and speed setting using the speed selector () button. The air speed LED indicators will show the selected setting:

Air speed LED indicators	Setting
	Low speed/low heat
	Medium speed/medium heat
	High speed/high heat

3. To re-activate StyleAdapt™ mode press the  button until the StyleAdapt™ indicator is illuminated. Your air styler will now be learning about your hair and adapting the heat again.

Create volume using the oval brush

- To dry your roots and add volume, place the brush underneath the section close to the roots and hold for a few seconds, lifting the hair as you dry.
- Move the styler downward through the hair section.
- Repeat this around the head.
- Let the hair cool before further styling.

Create shaped ends using the 50mm brush

- To curl the ends in, place the brush underneath the section close to the ends and rotate the styler inwards allowing the hair to wrap around the barrel and hold for a few seconds.
- To curl the ends out, place the brush on top of the section close to the ends and rotate the styler outwards allowing the hair to wrap around the barrel and hold for a few seconds.
- Repeat this around the head.
- Let the hair cool before further styling.

Root volume using the root boost attachment

- Push the root boost slowly into your roots towards the centre of your head.
- Allow the hair to push against the root boost and hold the root boost there for up to 10 seconds.
- Repeat until you have voluminous hair.

Cool shot

- To set your style, press the cool shot button whilst styling then release it to reactivate the heat.

Memory Function

- Each time you use your styler it will automatically set itself to the last setting used.

OVERHEATING PROTECTION

In the event of overheating, your airstyler may stop unexpectedly. Overheating is usually caused by a blocked inlet grille. Unplug your airstyler then check and clean the inlet grille if required. Allow your airstyler to cool down before plugging it back in and using.

STORAGE, CLEANING AND MAINTENANCE

- After use, turn off the appliance by pressing the on/off button.
- Unplug the appliance and allow to cool before cleaning and storing away.
- Wipe all surfaces with a damp cloth
- Don't use harsh or abrasive cleaning agents or solvents,
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the inlet grille and clean with a soft brush.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: **<https://uk.remington-europe.com/product-registration>**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. AS9880

Type No. AS17A

22/UK/ AS9880 T22-7002537-C Version 05 /22

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2022 Spectrum Brands, Inc.