

# REMINGTON®

STYLE & CURL



AS300

**£10,000 prize draw**  
**PLUS Free Rewards Gallery**  
Register online now to  
collect your reward  
See back for  
details



Thank you for buying your new Remington® product.  
Before use, please read these instructions carefully and keep them safe. Remove all packaging before use.

### KEY FEATURES

- 1 300 Watt power handle
- 2 25mm bristle brush
- 3 19mm round brush
- 4 On/Off switch
- 5 Speed/ heat setting switch
- 6 Curl release button
- 7 Attachment cap
- 8 Swivel cord

### PRODUCT FEATURES

- 300 Watts
- 2 heat/speed settings
- 2 attachments to create different styles
- 2 year guarantee

### SAFETY CAUTIONS

- 1 Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice.
- 2 The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach. Use, cleaning or maintenance of the appliance by children over eight or by anyone with a lack of knowledge, experience or with reduced physical, sensory or mental capabilities should only be undertaken after receiving appropriate instruction and under the adequate supervision of a responsible adult to ensure that they do so safely and that the hazards involved are understood and avoided.
- 3 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- 4 Keep direct airflow away from eyes or other sensitive areas.
- 5 Do not let any part of the appliance touch the face, neck or scalp.
- 6 In use, take care that the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop.
- 7 If this should occur, switch off and allow the unit to cool down.
- 8 Ensure the inlet grille is free from obstructions such as household fluff, loose hair etc.
- 9 Do not leave the appliance unattended while plugged in.
- 10 Do not set the appliance down while still on.
- 11 Do not use attachments other than those we supply.
- 12 Do not twist or kink the cable, or wrap it round the appliance.
- 13 Do not use the appliance if it is damaged or malfunctions.
- 14 If the cable is damaged return the appliance, to avoid hazard.



- 14 This appliance is not intended for commercial or salon use.
- 15 Let the appliance cool down before cleaning and storing away.

## INSTRUCTIONS FOR USE

- 1 Wash and condition your hair as normal.
- 2 Squeeze out excess moisture with a towel and comb through.
- \* Hair sprays contain flammable material – do not use while using the styler.
- 3 Select your attachment before you turn on the appliance.
- 4 Plug in the styler.
- 5 Attachments can be connected to the power handle by unscrewing the attachment cap (7), sliding the brush onto the inner support and securing by screwing back on the attachment cap.
- 6 Dry roots completely and dry length 90% dry, ready for styling.
- 7 Section the hair prior to styling. Style the lower layers first.
- 8 The 25mm bristle brush adds root volume and fullness. It can also create looser curls and waves.
- 9 The 19mm round brush creates small curls and flicks to short and medium layered hair.
- 10 Select desired temperature and speed setting using the switches on the handle.
- 11 To release the hair when curled around the brush attachments press the curl release button to allow the brush to rotate freely.
- 12 Let the attachments cool before removing.
- 13 When finished, turn the appliance off and unplug.

## CLEANING AND MAINTENANCE

Unplug the appliance and let it cool.

To maintain peak product performance and to prolong motor life, it is important to regularly remove dust and dirt from the air filter grille and clean with a soft brush.

Wipe all surfaces with a damp cloth.

Don't use harsh or abrasive cleaning agents or solvents.

Replacement parts and accessories available to buy at <http://www.remington.co.uk/parts-accessories>

## WIRING INSTRUCTIONS UK PLUGS ONLY

The product doesn't need an earth.

It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the blue wire to N,


and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded

plug unless the fuse cover is in place.

If you remove the plug, dispose of it.

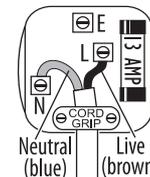

## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



## SERVICE AND GUARANTEE

This product has been checked and is free of defects.

We guarantee this product against any defects that are due to faulty material or workmanship for the guarantee period from the original date of consumer purchase.

If the product should become defective within the guarantee period, we will repair any such defect or elect to replace the product or any part of it without charge, provided there is proof of purchase.

This does not mean an extension of the guarantee period.

In the case of a guarantee simply call the Service Centre in your region.

This guarantee is offered over and above your normal statutory rights.

The guarantee shall apply in all countries in which our product was sold via an authorised dealer.

This guarantee does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required.

This guarantee shall not apply if the product has been dismantled or repaired by a person not authorised by us.

If you ring the Service Centre, please have the Model No. to hand, as we won't be able to help you without it.

It's on the rating plate which can be found on the appliance.

---

## UNITED KINGDOM

---

 +44 0800 212 438 (free call)

Customer Service  
Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester M35 0HS

12/UK/AS300 Version 05/12 Part No T22-0000159  
Remington® is a Registered Trade Mark of Spectrum Brands, Inc.,  
or one of its subsidiaries  
Spectrum Brands (UK) Ltd  
Fir Street,  
Failsworth,  
Manchester  
M35 0HS  
[www.remington.co.uk](http://www.remington.co.uk)

© 2012 SBI

---

### **REGISTRATION AND PRIZE DRAW**

---

Collect your free reward, and a chance to win £10,000.  
Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington)