

REMINGTON®
style inspirations

Heated Volumising Brush




CB65



REMINGTON

Heated Volumising Brush

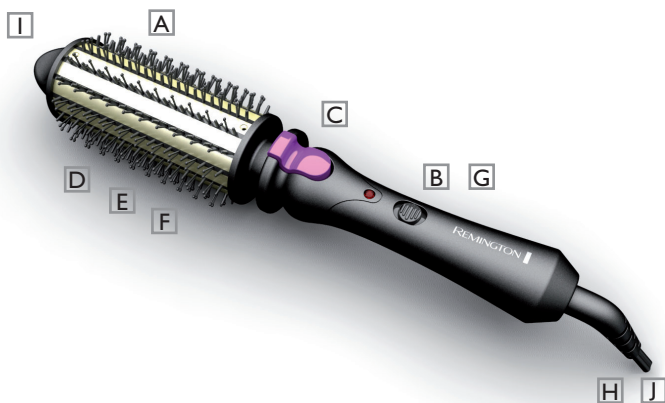

ENGLISH

Thank you for buying your new Remington® product. Before use, please read these instructions carefully and keep them in a safe place for future reference.



PRODUCT FEATURES

- A. Advanced ceramic coating
- B. 3 positions switch (Off, low, high)
- C. Curl Release: Depressing the button allows free rotation of the barrel
- D. Heat Resistant Bristles
- E. Mixed bristle brush
- F. 45mm large barrel
- G. Automatic safety shut off – This unit will switch itself off if no button is pressed or it is left on after 60 minutes
- H. Multivoltage: For use at home or abroad.
When used at 120V the heat up times and temperatures may vary.
- I. Cool tip
- J. Swivel cord



3 year guarantee



INSTRUCTIONS FOR USE

- ▶ Before use, make sure hair is clean, dry and tangle-free.
- ▶ Use a hairdryer to dry roots and leave lengths 95% dry, ready for styling.
- ▶ Plug the unit into the mains and wait for about 2-8 minutes.
- ▶ Separate the section of hair to be curled and wrap around the hot barrel, wrapping hair exactly as you would when using a roller.
- ▶ Hold the Hot brush in place for up to 10 seconds – then press the curl release button and carefully draw the brush away allowing hair to unwind automatically. Let curls spring back and cool before combing.
- ▶ Repeat as necessary



IMPORTANT INSTRUCTIONS

- ▶ Due to the extreme heat capabilities of this styler, extra care should be taken when using.
- ▶ While heating and cooling, place on flat, smooth, heat-resistant surface. Only hold unit at the end of the handle.
- ▶ Please note regular use of styling products may deteriorate the coating.

ENGLISH

- ▶ Do not scratch the surface, as this will deteriorate the effectiveness of the coating.
- ▶ Do not allow water from the reservoir cap to spill onto the handle.



CLEANING AND MAINTENANCE

Ensure the unit is unplugged and cool. Wipe clean any build up of styling products with a damp cloth. Do not use an abrasive cleaning fluid to clean, as damage will occur.



SAFETY CAUTIONS

WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM. IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.



This product is not suitable for use in bath or shower.

THE BRUSH SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- ▶ Do not leave the styler unattended when switched on.
- ▶ Allow the styler to cool down before storage.
- ▶ Do not immerse in water or other liquids.
- ▶ Do not wrap the cord around the unit. Check cord regularly for any sign of damage.
- ▶ Damaged cords can be dangerous.
- ▶ Do not place styler on soft material e.g. carpet, bedding, towels, rugs etc.
- ▶ Do not leave the styler switched on when you set it down.
- ▶ Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Do not use any attachments with this styler, other than those supplied by Remington®.
- ▶ Avoid allowing any part of the styler to contact the face, neck or scalp.
- ▶ This appliance is not intended for commercial or salon use.
- ▶ If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.

ENGLISH

- ▶ Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- ▶ We do not accept responsibility for damage to the product, persons or other item(s), caused by misuse, abuse or non-compliance with these instructions



 
WIRING INSTRUCTIONS UK Plugs Only

This product is fitted with a BS1363 plug fused at 13A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BS1362, rated at 13A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in accordance with following code:

BLUE – NEUTRAL

BROWN – LIVE



As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

The wire which is coloured BLUE must be connected to the terminal which is marked 'N' or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked 'L' or coloured RED. Never connect either of the wires to the big EARTH terminal marked 'E' or coloured GREEN or GREEN AND YELLOW.



PROTECT THE ENVIRONMENT

Do not dispose the product in household waste at the end of its useful life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.



For further information on recycling see www.remington-europe.com

ENGLISH



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region. This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.

For further information and advice please contact:

Customer Services Department, Rayovac Europe Ltd, Watermans House, Watermans Court, Kingsbury

Crescent, The Causeway, Staines, Middlesex, TW18 3BA. Tel: 0800 212 438 Fax: +44 (0) 1784 411 412



REMINGTON® SERVICE HOTLINE

United Kingdom

☎ +44 0800 212 438 (free call)

Spectrum Brands (UK) Limited

Fir Street

Failsworth

Manchester

M35 0HS United Kingdom

Email: uk.service@remington.co.uk

www.remington.co.uk





Model No. CB65

I0/UK/CB65 Version 11/11 Part No. T22-29527
REMINGTON® Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries
VARTA® Consumer Batteries GmbH & Co. KGaA
Alfred-Krupp-Str.9
73479 Ellwangen
Germany
www.remington-europe.com
© 2010 SBI

This product is not suitable for use in bath or shower.

