REMINGTON® EST. NEW YORK 1937



Pro Big Curl Tong CI5338

remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use. WARNING: This appliance is hot. Keep out of reach of children at all times.



IMPORTANT SAFEGUARDS

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.



Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the applaince is switched off
- For additional protection, the installation of a residual current device (RCD) • having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.

* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).

- Burn hazard. Keep the appliance out of reach from young children, • particularly during use and while cooling down.
- Never leave the appliance unattended when it is connected to the power supply.
- Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface

ENGLISH

- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington[®] service dealer for repair or replacement in order to avoid a hazard.
- Do not allow any part of the appliance touch the face, neck or scalp.
- · Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

PARTS

- 1. 38mm barrel with 4 x protection coating
- 2. Tong Clip
- 3. On-off button
- 4. Temperature controls
- 5. Ready light

ADDITIONAL FEATURES

- Fast heat up—ready to use in 30 seconds.
- Automatic safety shut off this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- · Section the hair prior to styling. Style the lower layers first.
- Use the heat resistant glove to avoid any accidental burns.
- · For extra protection use a heat protection spray.
- · Hairsprays contain flammable material do not use while using this product.
- Note: The supplied pouch/mat/sleeve will not fully protect the underlying surface from the heat given off by the appliance when it is being used. Therefore, always make sure that the surface you place the mat/pouch/sleeve on will not be damaged by heat.

- 6. Cool tip
- 7. Stand
- 8. Swivel cord
- Not shown:
- Mat

ENGLISH

- 1. Plug the product into the mains power supply.
- 2. Press and hold the on/off button to switch on.
- Select the appropriate temperature for your hair type using the "+" and "-" temperature controls. Start styling on lower temperatures first.
- 4. The "+" button will increase the temperature and the "-" button will decrease the temperature.

Recommended Temperatures

| Temperature | Hair type |
|----------------|---------------------------------------|
| Low setting | Thin / fine, damaged or bleached hair |
| Medium setting | Normal, healthy hair |
| High setting | Thick and difficult to style hair |

Caution: the hottest temperatures should only be used by experienced stylers.

- 5. The indicator light will stop flashing once the desired temperature is reached.
- Place a section of hair under the long tong clip (smaller sections create tighter curls, larger sections create large curls or waves).
- 7. Turn the styler to roll the hair around the barrel
- 8. Wait about 10 seconds for the curl to form.
- 9. Unwind the tong and release the curl.
- 10. Repeat this around the head to create as many curls as desired.
- After use, press and hold the off button for 2 seconds to turn off then unplug the appliance.
- Tip: let the curls cool before styling or brushing; this will help to prolong the curls.

STORAGE, CLEANING AND MAINTENANCE

Let the appliance cool down before cleaning and storing away

- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.



RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorised dealer are not covered.



Guarantee period = 5 years from first retail purchase. To claim the extra 1 year guarantee, register your product online within 28 days of purchase: **uk.remington-europe.com/product-registration**

If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.

SERVICE CENTRE

United Kingdom

Tel 0800 212 438 (free call mainland UK) Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0HS, UK www.remington.co.uk

Ireland

Tel 142 951 40 Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12 https://ie.remington-europe.com



شكر القيامك بشراء منتج Reminaton® الجديد. يرجى قراءة هذه التعليمات بعناية والاحتفاظ بها في مكان أمن. قم بإزالة جميع مواد التعبئة قبل الاستخدام. تحذير: هذا الجهاز ساخن. أبقه بعيداً عن متناول الأطفال في جميع الأوقات. اجراءات وقائية هامة يمكن استخدام هذا الجهاز بواسطة الأطفال الذين تتراوح أعمارهم من 8 سنوات وما فوق والأشخاص ذوى القدرات البدنية أو الحسية أو العقلية المنخفضة أو قليلي الخبرة والمعرفة إذا تم الاشراف عليهم/إرشادهم ويفهمون المخاطر المعنية. وبحب ألا بعيث الأطفال بالجهاز . وبحب ألا بقوم الأطفال بالتنظيف والصيانة الا إذا كان عمر هم أكبر من 8 سنوات وتحت اشراف. احفظ الحهاز والكابلات بعبدا عن متناول الأطفال دون سن 8 سنوات. 🐼 لا تستخدم هذا الجهاز بالقرب من أحواض الاستحمام أو الحمامات أو أي أحواض أخرى تحتوى على ماء. عند استخدام الجهاز في حمام، قم بفصله بعد الاستخدام طالما أن القرب من الماء يمثل خطرا حتى عند ايقاف الجهاز. تحذير - للحماية الإضافية، ينصح بتركيب أي جهاز تيار متبقى (RCD) بمقنن تيار تشغيل متبقى لا يتجاوز 30 مللى أمبير في الدائرة الكهربائية المغذية للحمام استشر كهربائي. مخاطر الحرق. يجب الاحتفاظ بالجهاز بعيداً عن متناول الأطفال الصغار، ولا سيما أثناء الاستخدام وعند تركه يبرد. يجب دومًا وضع الجهاز مع حوامله، إذا وجدت، على سطح مستقر ومستو • ومقاوم للحرارة. لا يجب ترك الجهاز بدون ملاحظة عند توصيله بالتيار الكهربائي. وفي حالة تلف سلك تغذية هذه الوحدة، توقف عن استخدامها فورا وأعد الجهاز لأقرب أخصائي خدمة معتمد من Remington® للإصلاح أو الاستبدال لتجنب الأخطار لا تسمح لأي جزء من الجهاز بلمس الوجه أو العنق أو فروة الرأس. حافظ على قابس الطاقة والسلك الكهربائي بعيدا عن الأسطح الساخنة لا تستخدم ملحقات غير الملحقات التي نقوم بتوريدها. • لا تستخدم الجهاز إذا كان تالفا أو به خلل. لا تقم بثني أو جدل الكبل أولفه حول الجهاز . تحقق من انتظام السلك للبحث عن أي علامة تلف. • هذا الجهاز غير مخصص للاستخدام التجاري أو الصالونات.

عربي

الأجزاء

| طرف التبريد | اسطوانة 38 ملم بطلاء سير اميك متقدم | .1 |
|---------------------------------|-------------------------------------|----|
| 7. الحامل | تونغ كليب | .2 |
| 8. سلك دوار | مفتاح On-off | .3 |
| غير مبين : | عناصر للتحكم في درجات الحرارة | .4 |
| • مفرش | لمبة مؤشر الاستعداد | .5 |

تعليمات الاستخدام

- تأكد قبل الاستخدام من أن الشعر نظيف وجاف وخالى من التشابك.
- تأكد قبل الاستخدام من أن الشعر نظيف وجاف وخالي من التشابك.
 - استخدم رذاذ حماية من الحرارة لمزيد من الحماية.
- ملاحظة: الجراب/الفرش/الغلاف الوارد مع الجهاز لا يضمن حماية السطح الواقع في الأسفل من الحرارة المنبعثة من الجهاز عند استخدامه. وبالتالي، يجب التحقق دومًا من أن السطح الذي يوضع عليه الفرش/الجراب/الغلاف لن يتلف بفعل الحرارة.
 - تقسيم الشعر قبل التصفيف. وتصفيف الطبقات السفلى أو \.
 - قم بتوصيل جهاز التصفيف واضغط باستمر ار فوق زر التشغيل لتشغيل الجهاز.
 - ابدأ التصفيف على درجات حرارة منخفضة أو لا. وحدد درجة الحرارة المناسبة.
- 4. لزيادة درجة الحرارة، أدر أدوات التحكم في درجة الحرارة لليسار في اتجاه "+". ولخفض درجة الحرارة، أدر أدوات التحكم في درجة الحرارة لليمين في اتجاه "-".

| لموصى بها: | لحرارة ا | درجات ا |
|------------|----------|---------|
|------------|----------|---------|

| نوع الشعر | درجة الحرارة |
|--------------------------------|--------------|
| شعر ناعم، شعر تالف أو مبيض | إعداد منخفض |
| شعر طبيعي الى سميك | إعداد متوسط |
| شعر سميك مجعد جدا وصعب التصفيف | إعداد عالي |

تتبيه: يجب استخدام أسخن درجات الحرارة بواسطة مصففين من ذوي الخبرة فقط.

التنظيف والصيانة

- افصل الجهاز ودعه يبرد.
- امسح جميع الأسطح بقطعة قماش مبللة.
- لا تستخدم مواد تنظيف خشنة أو كاشطة أو مذيبات.

إعادة التدوير



لتجنب المشاكل البينية والصحية الناجمة عن المواد الخطرة، يجب عدم التخلص من الأجيزة، والبطاريات القابلة لإعادة الشحن والبطاريات غير القابلة لإعادة الشحن التي تحمل علامة ولحدة من هذه الرموز مع نفايات البلدية غير المصنفة. يجب دائمًا التخلص من المنتجات الكهربانية والإلكترونية، وكذلك إذا أمكن، البطاريات القابلة باعادة الشحن وغير القابلة لإعادة الشحن، في نفطة رسمية مناسبة لإعادة التدوير/ تجميع المخلفات.

الخدمة والضمان

سيتم تصحيح العيوب التى تؤثر على وظائف المنتج التي تنظير خلال مدة الضمان بالاستبدال أو الإصلاح وفقا لخيارنا بشرط استخدام المنتج والحفاظ عليه وفقا للتعليمات. لا تتأثر حقوظك القانونية. الضمان محظورًا بموجب أي عقوبات اقتصادية أو قوانين مراقبة الصادرات أو الحظر أو غيرها من التدابير التجارية التيبيدية التي تطبقها الولايات المتحدة أو غيرها من الولايات المتحدة والقوانين المعمول بها، أو عندما يكون على سبيل المثال لا الحصر، أي مطالبات بالضمان تتعلق بأطراف من كوبا أو إيران أو كرديا الشمالية أو على سبيل المثال لا الحصر، أي مطالبات بالضمان تتعلق بأطراف من كوبا أو إيران أو كرديا الشمالية أو سوريا أو شبه جزيرة القرم أو تقع فى هذا المناطق. يتم استبعاد المواد الاستهلاكية. لا يتم تنطية العوب الناجمة عن الإصلاح بواسطة موزع غير معتمد. إذا طلبت مركز الخدمة، يرجى أن يكون لديك رقم الموديل فلن نكون قادرين على مساعدتك دون ذلك. ويمكن العثور على رقم الموديل على لوحة مقنن الجهاز. العشر على الخرب. فقط اذهب لموقع: على سيبيديني العربية الموديل على لوحة مقن الجهاز.



Ref. No. CI5338

Type No. CI5338

21/UK/ CI5338 T22-7002177 Version 05 /21 Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd Fir Street, Failsworth, Manchester M35 0HS remington-europe.com

© 2021 Spectrum Brands, Inc.