

REMINGTON®
style professional

PEARL™ WAND



Ci95





REMINGTON style professional PEARL™ WAND



ENGLISH

Thank you for purchasing your new Remington® product.
Before use, please read the instructions carefully, and keep them in a safe place for future reference.



PRODUCT FEATURES

- A** Conical barrel
- B** Advanced Ceramic Ultimate Coating with Real Pearl
- C** Ready to use in 30 seconds, 130°C -210°C
- D** On-off switch - Plug in the unit, press and hold the on-off switch for two seconds to switch on. Press again for two seconds to switch off. Unplug from the mains when not in use
- E** Automatic safety shut off – This unit will automatically switch itself off if no button is pressed or left on after 60 minutes
- F** LCD display
- G** Switch lock function :
Set the desired temperature by pressing +/- buttons and lock the switch settings by pressing the '.' button for 2 seconds. A "lock" symbol will appear next to the temperature. This will prevent accidentally changing the temperature settings while using the tong. To unlock the switch settings, press and hold the '.' button again for 2 seconds.
- H** Cool tip
- I** Heat protection stand
- J** Heat protection pouch
- K** Multi-voltage – for use at home or abroad
When used at 120V the heat up times and temperatures may vary.
- L** 3m swivel cord
5 year guarantee



ENGLISH



INSTRUCTIONS FOR USE

- ▶ Before use make sure hair is clean, dry and tangle free.
- ▶ Clip up hair ready for styling.
- ▶ Plug in the unit, press and hold the on-off switch for two seconds to switch on.
- ▶ Press again for two seconds to switch off.
- ▶ Unplug from the mains when not in use.
- ▶ Press the "+" or "-" button to decrease or increase the temperature until the desired temperature is reached.
- ▶ Take approximately one inch section of hair ready for curling.
- ▶ Hold the handle and wrap hair around heated barrel. Be sure to keep hold of the end of your hair.
- ▶ Hold for approximately 10 seconds for the curl to form before releasing the hair.
- ▶ For tighter curls use smaller sections of hair, for looser curls and waves use larger sections.
- ▶ Repeat as necessary



IMPORTANT INSTRUCTIONS

- ▶ Due to the extreme heat capabilities of this styler, extra care should be taken when using.
- ▶ While heating, during use and cooling, place on flat, smooth, heat-resistant surface. Only hold unit at the end of the handle.
- ▶ This is a high performance product, avoid frequent use to prevent damage to hair.
- ▶ Please note regular use of styling products may deteriorate the coating.
- ▶ Do not scratch the surface, as this will deteriorate the effectiveness of the coating.



CLEANING AND MAINTENANCE

Ensure the unit is unplugged and cool. Wipe clean any build up of styling products with a damp cloth. Do not use an abrasive cleaning fluid to clean, as damage will occur.

ENGLISH



SAFETY CAUTIONS

WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM, IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.



This product is not suitable for use in bath or shower.

THE STYLER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- ▶ Do not leave the styler unattended when switched on.
- ▶ Allow the styler to cool down before storage.
- ▶ Do not immerse in water or other liquids.
- ▶ Do not place styler on soft material e.g. carpet, bedding, towels, rugs etc.
- ▶ Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Do not use any attachments with this styler, other than those supplied by Remington®.
- ▶ Avoid allowing any part of the hot barrel to contact the face, neck or scalp.
- ▶ Do not wrap the cord around the unit. Check cord regularly for any sign of damage.
- ▶ This product is not intended for commercial or salon use.
- ▶ Damaged cords can be dangerous. If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- ▶ Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- ▶ We do not accept responsibility for damage to the product, persons or other items(s), caused by misuse, abuse or non-compliance with these instructions.



PROTECT THE ENVIRONMENT

Do not dispose of the product in household waste at the end of its life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.



For further information on recycling see www.remington-europe.com

ENGLISH



WIRING INSTRUCTIONS UK Plugs Only

This product is fitted with a BS1363 plug fused at 5A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BS1362, rated at 5A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in accordance with following code:

BLUE - NEUTRAL

BROWN - LIVE



As these colours may not correspond with the coloured markings sometimes used to identify the terminals in a plug connect as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked „N“ or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked „L“ or coloured RED. Never connect either of the wires to the big EARTH terminal marked „E“ or coloured GREEN or GREEN AND YELLOW.



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us. The 5 year guarantee is only valid for consumer use.



REMINGTON® SERVICE HOTLINE

United Kingdom

 **+44 0800 212 438 (free call)**

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk

Model No. Ci95

10/UK/Ci95 Version 05/10 Part No. T22-29539

REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries

VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str.9

73479 Ellwangen

Germany

www.remington-europe.com

© 2010 SBI

This product is not suitable for use in bath or shower.

