

# REMINGTON<sup>®</sup>



۲

۲

۲



| 0 | KEY FEATURES  |
|---|---|
| A | 1800W hair dryer  |
| В | 3 heat/2 speed settings                                 |
| С | Cool shot   |
| D | Ceramic-tourmaline grille for anti-static and even heat |
| Е | Removable filter  |
| F | Hang up loop  |
| G | Concentrator  |
| Н | Paddle brush  |
| 1 | I.8m cord   |

2 year guarantee

### 3

### INSTRUCTIONS FOR USE

#### STEP I - Wash and Condition hair as normal

- Squeeze out excess moisture with a towel and detangle hair with a wide-toothed comb.
- Use your normal styling or heat protection spray if you wish.
- If required, use a blow dry spray at the root to create volume or throughout the lengths to create body, bounce and shine.

#### STEP 2 - Drying & styling techniques - Before attaching the concentrator ensure the dryer is always switched off and unplugged.

- Use the concentrator on a medium heat and speed setting to fully dry the roots and remove excess moisture from the lengths. This will ensure a longer lasting result.
- Turn dryer on and set it to a high heat / high speed. This may vary depending on your hair type. You may need to experiment with a few different combinations before you find the one that is right for your hair.
- Move the attachment up and down the length of the hair until dry. Set the style using the cool shot button.

 $(\mathbf{0})$ 

### ENGLISH

### CLEANING AND MAINTENANCE

#### **Cleaning instructions**

The air filter should be cleaned regularly. A dirty or blocked filter will impair the efficiency of the dryer.

- To clean air filter, make sure dryer is turned off and unplugged.
- Gently pull the air inlet grille while lifting the filter away from the dryer.
- Use a soft bristle brush to gently remove any particles that are lodged in filter.
- If the unit is dirty, wipe it with a damp cloth.
- To replace the air inlet after cleaning, snap back into place to secure.

#### Maintenance instructions:

The dryer needs minimum maintenance to ensure the best performance and long life.

- Do not attempt to repair the appliance yourself.
- Do not attempt to tamper with any of the user-operated controls.
- Keep all intake openings clear of dust accumulation. See "cleaning instructions" above. No other maintenance is required.
- If the cord becomes twisted due to use, periodically straighten it. Store dryer and cord where they will not be damaged. Do not wrap cord around dryer.

#### Storage instructions:

When not in use, unplug the dryer. Allow to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully and avoid jerking, twisting or straining it, especially at plug connections.





### **ENGLISH**

#### REMINGTON

# SAFETY CAUTIONS

WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

#### WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM. IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.

This product is not suitable for use in bath or shower.

# THE HAIRDRYER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- Do not leave the dryer unattended when switched on.
- Allow the dryer to cool down before storage.
- Do not immerse in water or other liquids.
- Do not wrap the cord around the unit. Check cord regularly for any sign of damage. Damaged cords can be dangerous.
- In use, take care that the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. Should this occur, switch off and allow the unit to cool down.
- Ensure the inlet grille is free from obstructions such as household fluff, loose hair etc.
- Do not place hairdryer on soft material e.g. carpet, bedding, towels, rugs etc.
- Do not leave the dryer switched on when you set it down.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- Do not direct the airflow towards the eyes or other sensitive areas.
- Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- Do not use any attachments with this hairdryer, other than those supplied by Remington®.
- Avoid allowing any part of the hairdryer to contact the face, neck or scalp.
- This appliance is not intended for commercial or salon use.
- If the supply cord of this unit becomes damaged, discontinue use immediately and contact the Remington<sup>®</sup> help desk for repair or replacement in order to avoid a hazard.
- Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- We do not accept responsibility for damage to the product, persons or other item(s), caused by misuse, abuse or non-compliance with these instructions.

 $(\mathbf{\Phi})$ 

### ENGLISH



## WIRING INSTRUCTIONS UK Plugs Only

This product is fitted with a BSI363 plug fused at 13A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BSI362, rated at 13A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in accordance with following code:

BLUE – NEUTRAL

**BROWN - LIVE** 



As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured BLUE must be connected to the terminal which is marked 'N' or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked 'L' or coloured RED. Never connect either of the wires to the big EARTH terminal marked 'E' or coloured GREEN or GREEN AND YELLOW.

# PROTECT THE ENVIRONMENT

Do not dispose of the product in household waste at the end of its life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.



For further information on recycling see www.remington-europe.com





28.10.2008 11:06:50 Uhr

REMINGTON

## ENGLISH

# SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington<sup>®</sup> Service Center in your region. This warranty is offered over and above your normal statutory rights. The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.

For further information and advice please contact: Customer Services Department. Rayovac Europe Ltd, Watermans House, Watermans Court, Kingsbury Crescent, The Causeway, Staines, Middlesex, TWH8 BA. Tel: 0800 212 438 Fax: +44 (0) 1784 411 412

# **REMINGTON<sup>®</sup> SERVICE HOTLINE**

۲

( )

### **United Kingdom**

# **2 +44 0800 212 438 (free call)**

Rayovac Europe Ltd, Watermans House, Kingsbury Crescent, The Causeway, Staines, Middlesex, TW18 3BA, UNITED KINGDOM

www.remington.co.uk



# Ð

# Model No. D1000CHT

#### 10/UK/D1000CHT Version 05/10 Part No. T22-30280

REMINGTON<sup>®</sup> is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries VARTA Consumer Batteries GmbH & Co. KGaA Alfred-Krupp-Str.9 73479 Ellwangen Germany www.remington-europe.com © 2010 SBI

This product is not suitable for use in bath or shower.





•